

Congratulations on the purchase of your Australian made Commercial-Max Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.


Tools Required:

- Pop Rivet Gun
- Spanner
- Silicone/urethane sealer

Kit Content

1


Commercial-Max Farizon V7E Front Rails

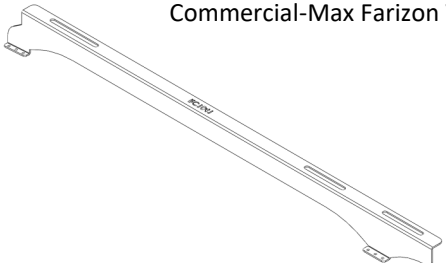

X2

2


Commercial-Max Farizon V7E Rear Rails

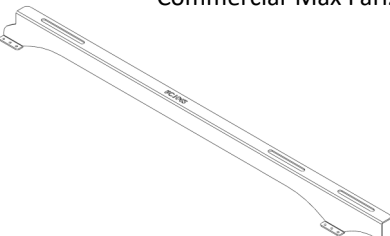

X2


3

Commercial-Max Platform

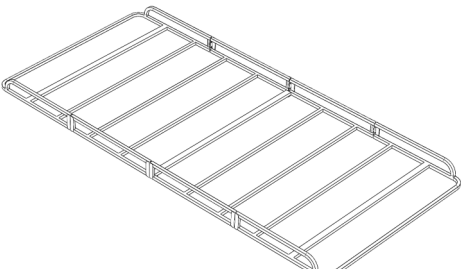

x1

4

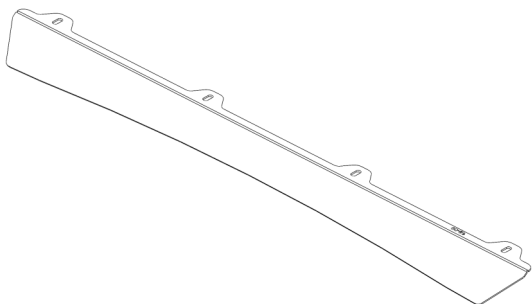

x1

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 25 Sems Hex Bolt	4
8mm Nyloc Nut	4
M8 Flat Washer	4

5

Refer to Hardware Kit for a list of fasteners and other relevant parts


Assemble rails to roof

1

Place the rails on the roof of the vehicle as shown below

Measure 220mm from the barn door seal to the edge of the rail leg and 745mm between the edges of the front and rear platform rails

Mark the mounting holes with a marker according to the dimensions shown below.

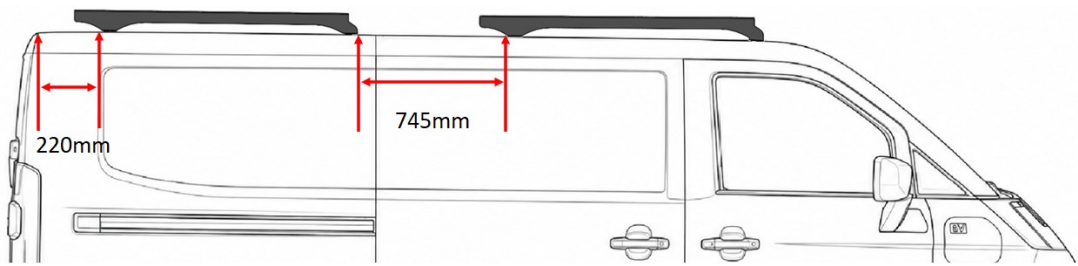

2

When measuring, always measure from the barn door seal at the back of the van (shown in image on the right), or lift up tailgate.


Order of installation: Rear first, Front second

Ensure that the rail feet are facing outwards and the mounting plate on top is facing inwards when marking the drill points.



3

Drill all mounting holes using 5mm drill with drill stop.




When drilling rivet mounting holes ensure you use a drill stop on your drill to ensure headlining, wiring or curtain airbags are not damaged.

4

Apply silicone or urethane sealer (natural cure sealants only) across the top of the rivets and in the holes to prevent water ingress

5


Mount all rails on the roof using 5mm rivets supplied

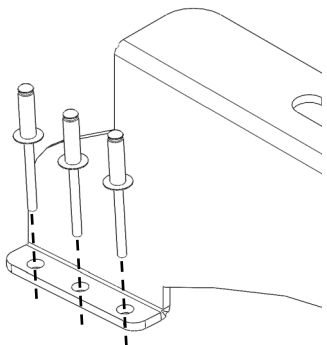

5

- Attach the channel nuts to the top of rail.
- Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

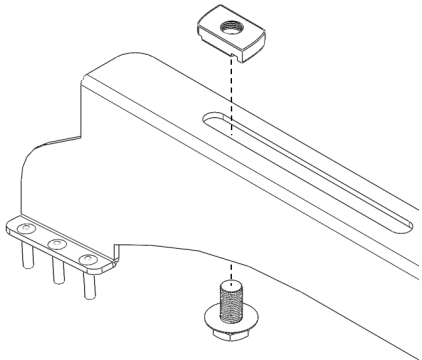

Assemble the Commercial-Max Platform to the rails

5

- Place the Commercial-Max Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE– Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

6

- Centralize the rack side to side (using a tape measure) on the Commercial-Max rails.

7

- Fully tighten remaining bolts in the following order:

1. Rails to platform
2. Attach wind Deflector.

NOTE–Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Commercial-Max by Tradesman Roof Racks

Innovation through Inspiration