

Congratulations on the purchase of your Australian made Commercial-Max Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Scan QR code for a fitting demonstration




Tools Required:

- Spanner (13mm, 17 mm)
- Drill & Drill Bit(5mm)
- Silicone/urethane
- Rivet Gun

Kit Content

1


Commercial-Max Hyundai iLoad 2008-On Left Rails

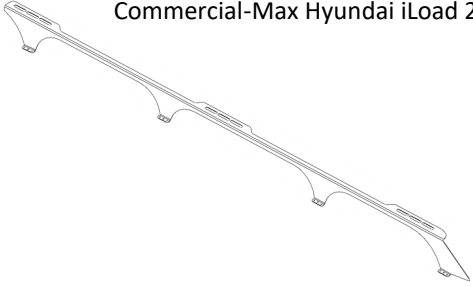

x1

2


Commercial-Max Hyundai iLoad 2008-On Right Rails

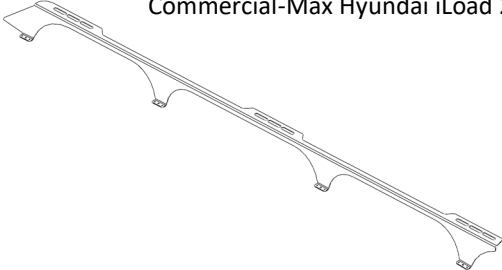

x1


3

Commercial-Max Platform

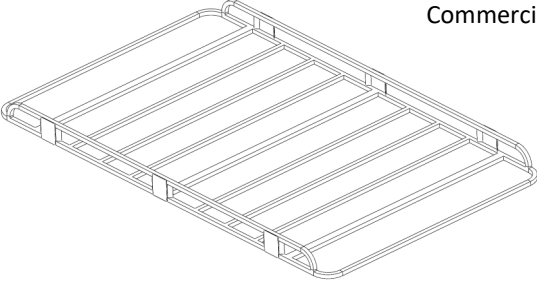

x1

4

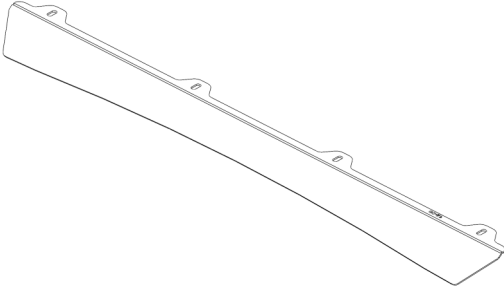

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 25 Sems Hex Bolt	4
8mm Nyloc Nut	4
M8 Flat Washer	4

x1

5


16mm Rivet



x18

6


M10 X 25 Stainless Hex Bolt

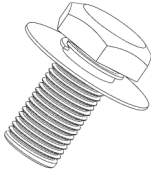

x6

7

M10 Unistrut

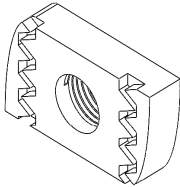

x6

Assemble rails to roof

1

- Remove black strip from roof valley on both sides of the vehicle.
- Ensure valley/ recess is clear from dirt and debris

2

- Place the rails on the roof of the vehicle
- Ensure rear of rail is in-line with end of the roof panel as per side view of pic shown.



3

- Using the holes in the rail as a guide, begin drilling with a 20mm drill stop to prevent damage to wiring, headlining etc.
- Place the rivet **“IN ONLY”** using the two outside holes of each tab. **Do not tighten.**
- Remove the rails and clean the area of any debris and apply silicone or urethane sealer (natural cure sealants only) under the rails and to the drilled rivet holes.
- Attach rails to the roof of vehicle using 12.9mm rivets.
- Repeat the steps again on other side




Ensure the centre of the rivet is covered with the silicone to prevent water ingress

4

- Attach the channel nuts to the top of rail and the desired mounting location
- Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

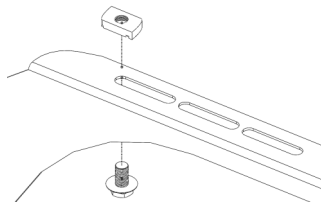

NOTE-Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Lift up Tailgate with Rollers

Middle Slot—Lift Up Tailgate without Rollers

Rear Slot—Barn Door

Assemble the Commercial-Max Platform to the rails

5

- Place the Commercial-Max Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE– Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

6

- Centralize the rack side to side (using a tape measure) on the Commercial-Max rails.

7

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Commercial-Max by Tradesman Roof Racks

Innovation through Inspiration