

Commercial-Max Rails and Platform Fitting Instruction

To suit Kia PV5 Cargo van - 2026

CM-KPV5-3014

COMMERCIAL-MAX

Read these instructions before fitting your Commercial-Max roof rack.

Please read and follow the instructions carefully to ensure correct fitment.






Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Hex Key(5mm)
- Tape measure
- Silicone/urethane sealer


Kit Content

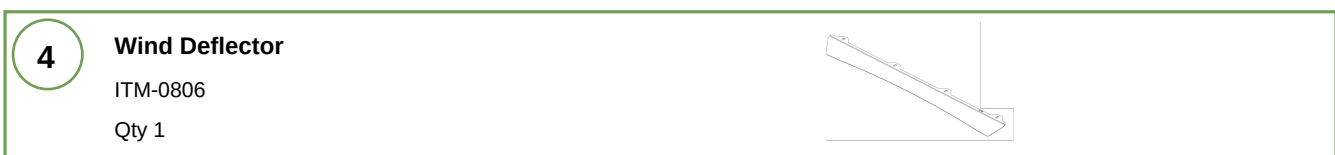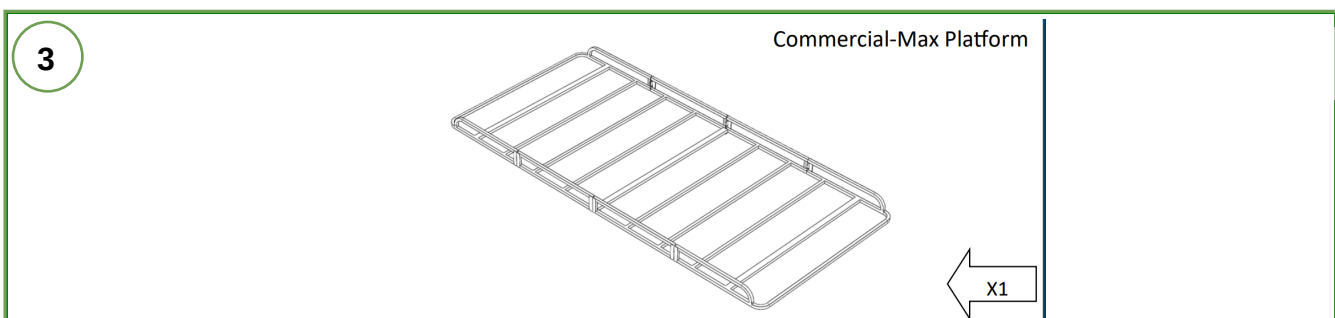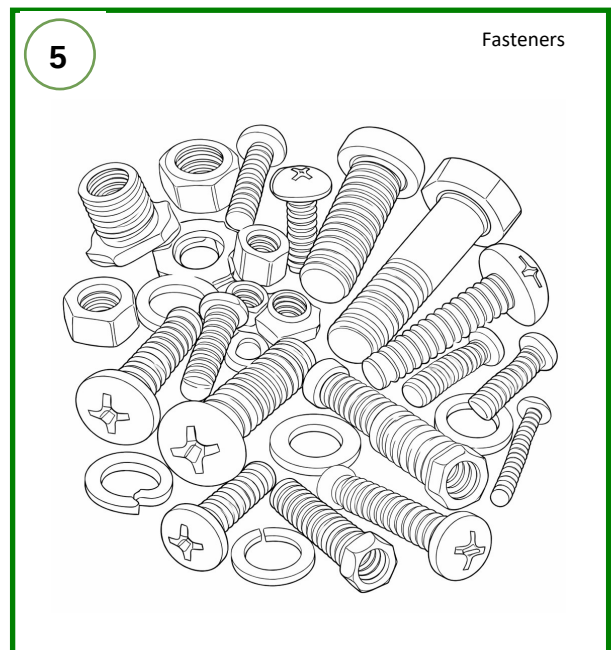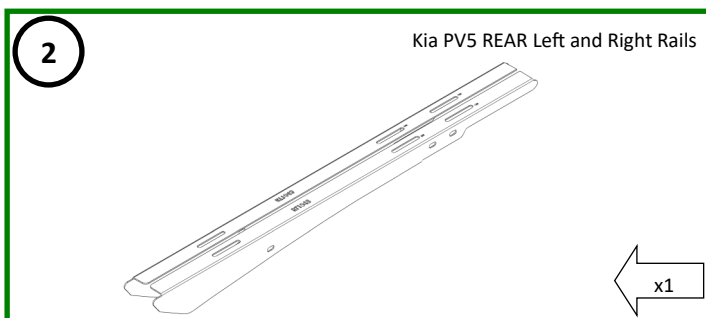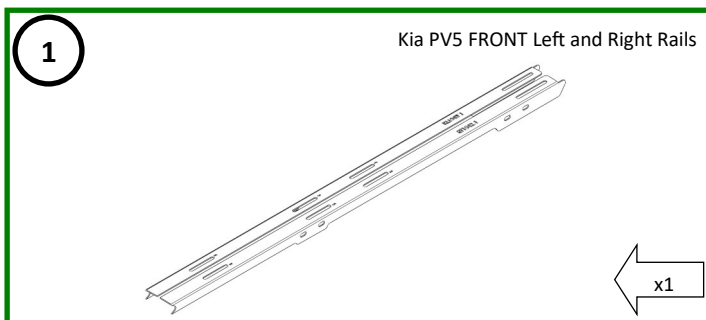

Assemble rails to roof

1

- Remove the 3 torx screws that reside toward the front of the roof of either side

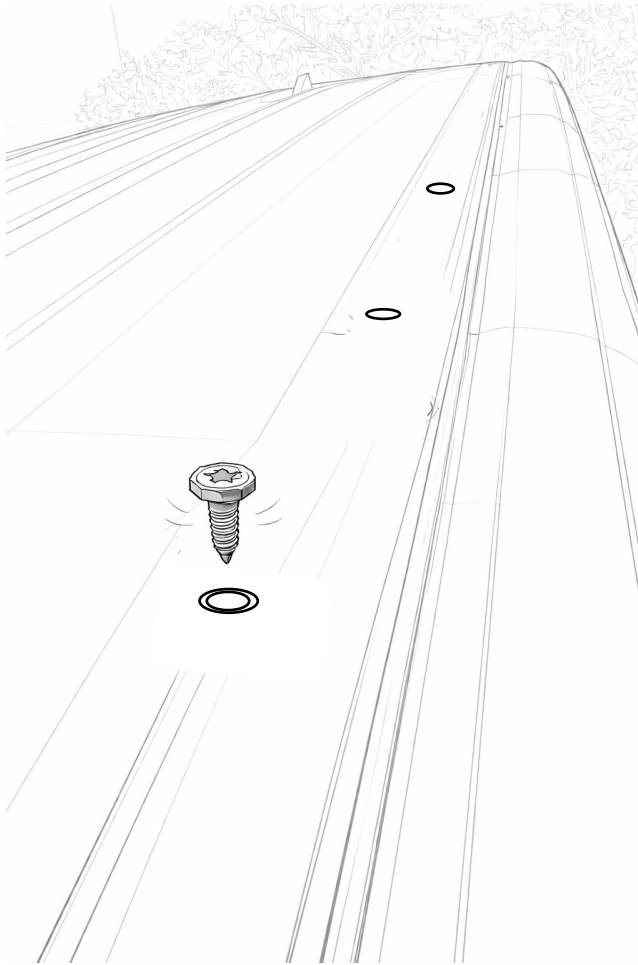


2

- Apply silicone or urethane sealer (natural cure sealants only) to all the holes.

Assemble Lugs to the roof

3


- Position the lugs as shown over the bolt holes and screw in the 8mm dacro bolts provided.

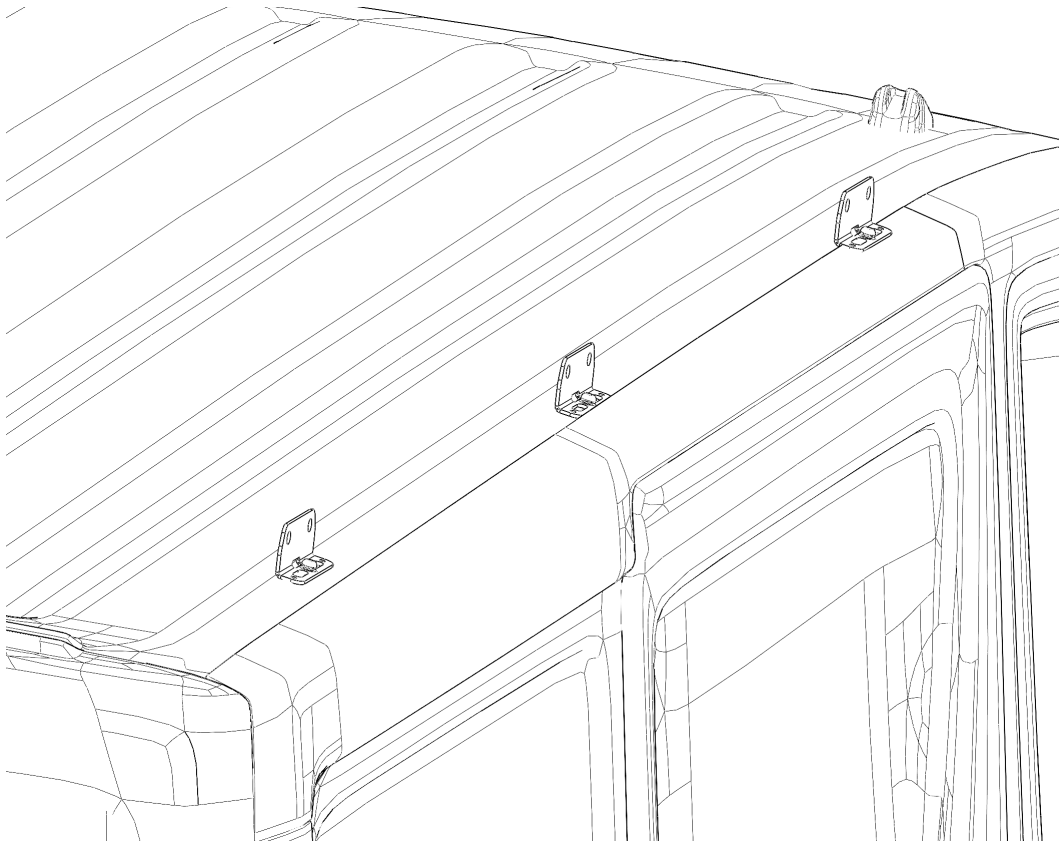

Assemble rails to roof



4

- Position the rail as shown and secure rails to mounting lugs using the M10 Dacro and M10 Nyloc Nuts (hand tight).

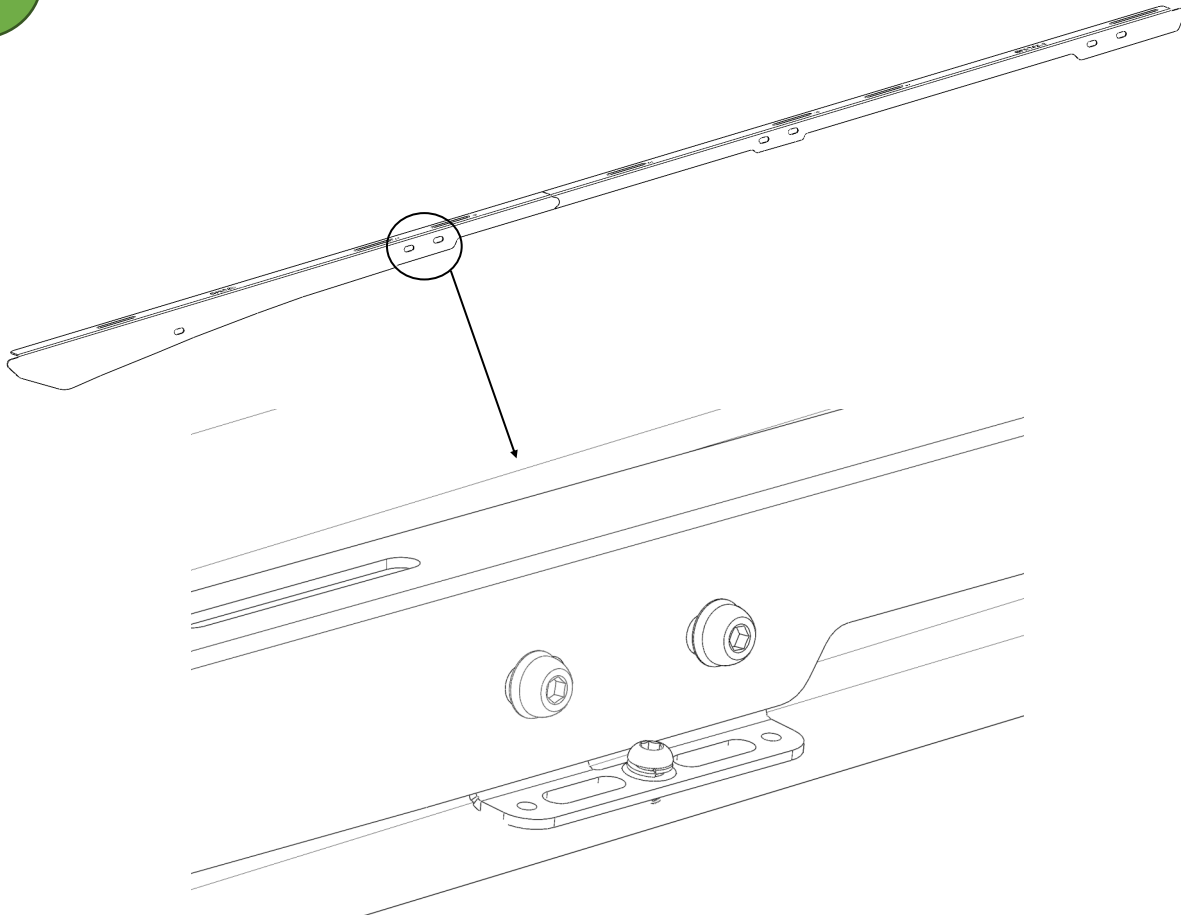

5


- After fixing the rails to the three middle and front lugs, position the smaller lug in the roof ditch that runs cross-wise at the rear of the vehicle (figure 1).
- Trim and chisel out the mastic in the roof ditch either side of the lug (figure 2 & 3) to allow the lug to be riveted directly to metal surface (drill rivet holes 5mm). Seal holes and rivet heads with neutral cure sealant to prevent water ingress.

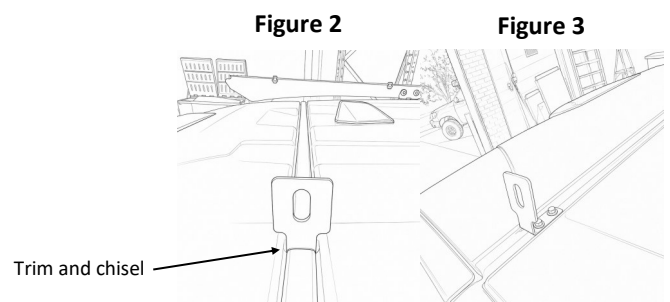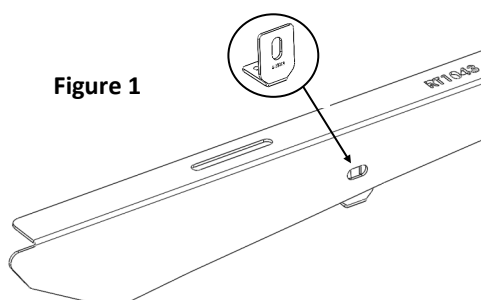

Assemble the Commercial-Max Platform to the rails


6

- Fully tighten the rail to all four lugs

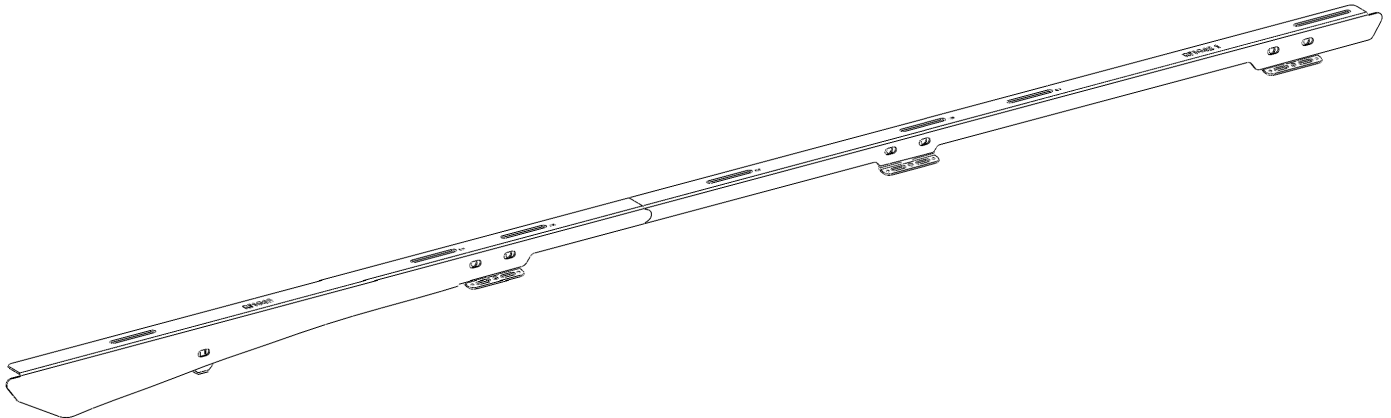

7

- Place the Commercial-Max Platform on the rails with the wind deflector mounting towards the front. Turn the channel nuts 90 degrees until they engage the underside channels. Leave the bolts loose.

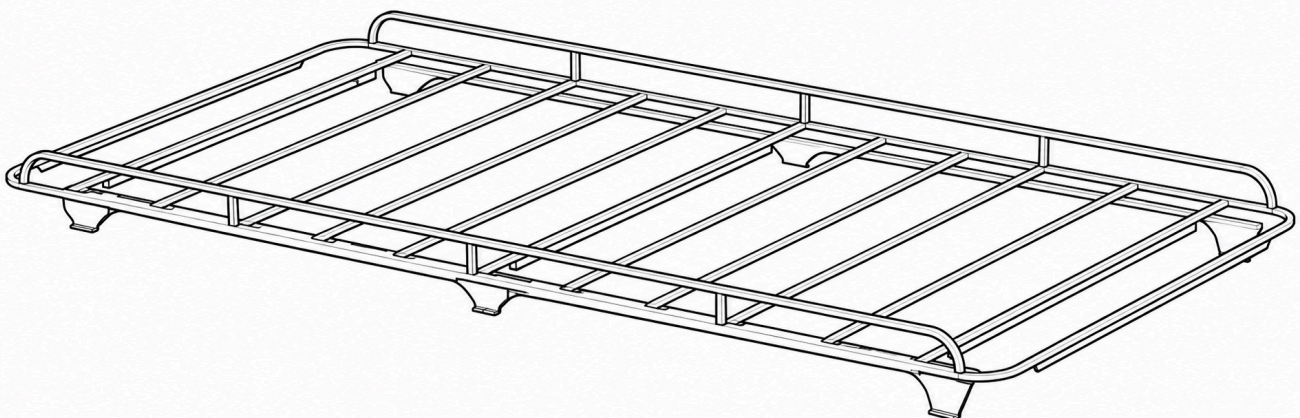

8

Tighten the remaining platform-to-rail bolts.
Attach the wind deflector using the supplied M8 hardware as shown.


NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

NOTE: Adjust the wind deflector and its mountings to prevent contact with the vehicle roof.

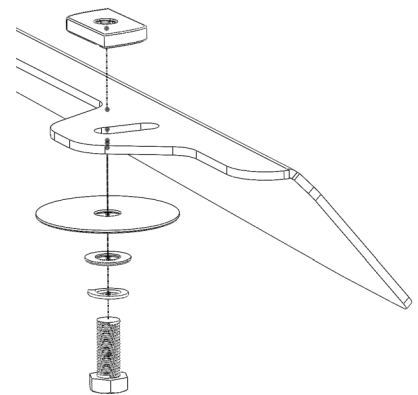

Thank you for your purchase.

Please complete your warranty application following correct installation.

Commercial-Max by Tradesman Roof Racks