

Wedgetail Accessory Ultra Vision Light Bar Mount (Crossbar Version)

Fitting Instruction



WTA-LBCUV

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment

Scan QR code for a fitting demonstration


Tools Required:

- Hex Key

Kit Content

1

WTA-LBCUV Light Bar Mount Bracket (LH & RH)

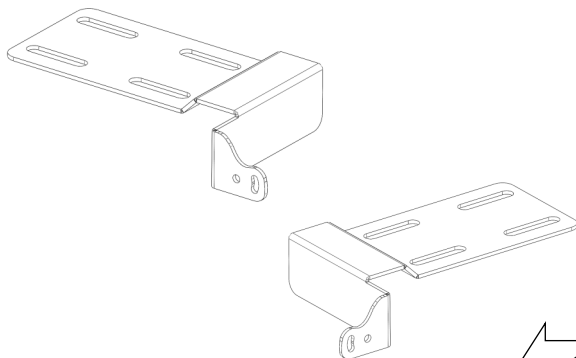


2

Fasteners



3

Range Rover LM 322 LUG

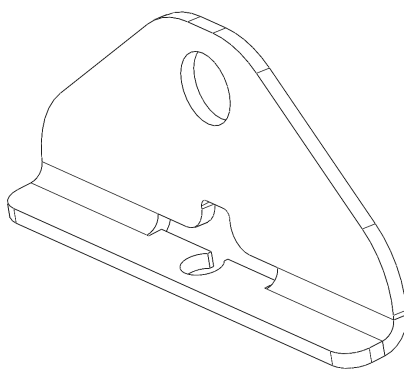

Wedgetail Accessory Ultra Vision Light Bar Mount (Crossbar Version)

Fitting Instruction



WTA-LBCUV

1


- Assemble the Light Bar Bracket on top of the 1st cross bar of the platform using the channel nuts and M8 Dacro Bolt. Refer to the diagram.
- **The distance between both light bar bracket should be based on the length of the light bar**

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

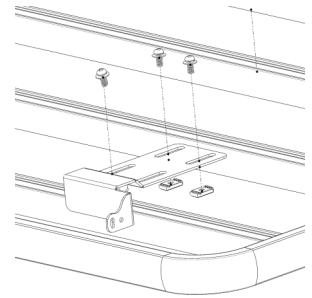

2


- Assemble the Light Bar to the bracket to the side slot of the bracket

Light Bar
Mounting

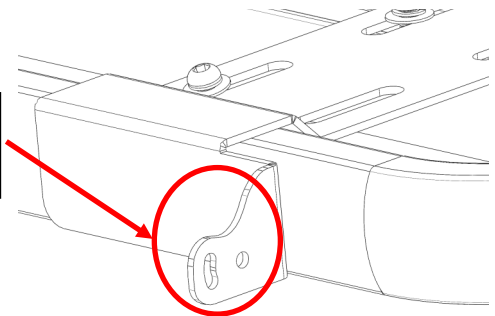

3

- Mount the lug to the light bar bracket to reduce the vibration of the bracket with M8 Bolt and Nut. Refer to the diagram

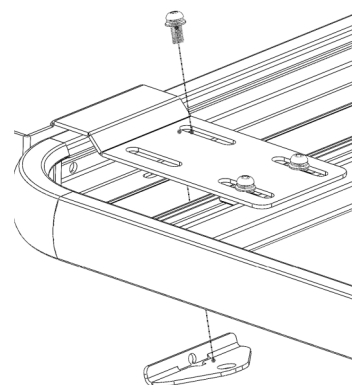

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration