

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon Supervan SV SWB 2025—Current

RW-FSV-3316F



**Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.  
Contact us if any parts appear missing, incorrect, or damaged.  
Clean the roof prior to fitting the roof racks.


### Tools Required:

- Spanner (13mm,17 mm)
- Silicone/urethane sealer

### Kit Content

1


70mm Trademax Leg

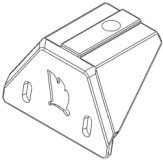

x6

2


Colorado Lug

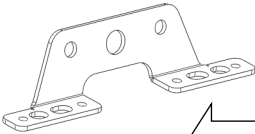

x6

3

Wedgetail Trade Platform

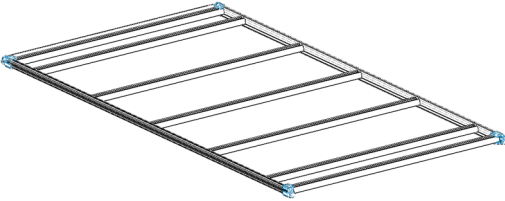


x1

4

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

5


M8 Nyloc Nut

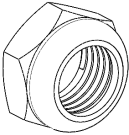

x12

6


M10 x 25 Stainless Sems Bolt

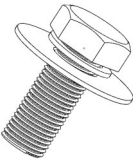

x6

7


16mm Rivet



X24

8


M8 x 22 Dacro Black

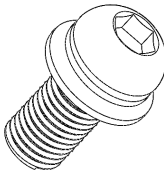

X 12

9

M10 Unistrut

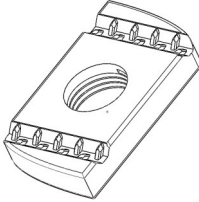

X 12

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon Supervan SV SWB 2025—Current


RW-FSV-3316F



## Assemble Lugs to roof


1

- Measure **130 mm forward along the gutter** from the vehicle's rear door roof line, then mark this point — this mark represents the **outer edge of the first mounting lug**.
- Align the lug so its **outermost flange edge sits exactly on the 130 mm mark**, keeping the lug parallel to the gutter line.
- Hold in place before drilling or fixing in subsequent steps.

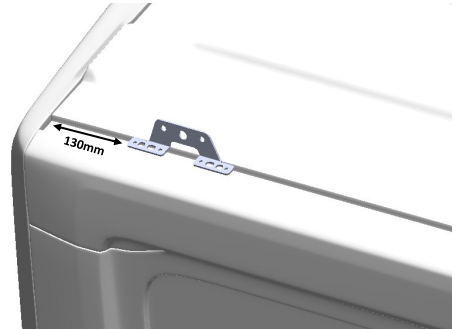

2


- Mark the 5mm rivet holes in each side of the mounting lug & drill with a 5mm drill bit.

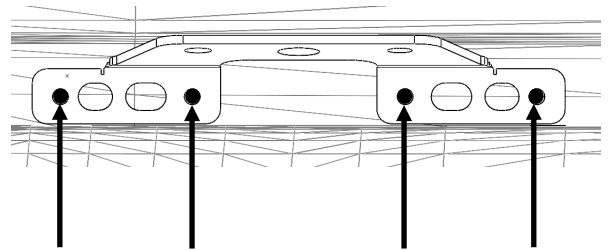

**Use drill sleeve when drilling into roof area to preserve headlining**

3

- Paint all holes using either an enamel or acrylic paint (to apply use a cotton bud if paint brush is not available).
- Apply silicone or urethane sealer (natural cure sealants only) under the whole lug and to the 5mm drilled rivet holes.
- With the lug held in its position, insert the 4 supplied rivets through the lug and gutter holes ensuring the lug sits flat against the panel.
- Repeat Steps 1 through to 3 for the other rear lug

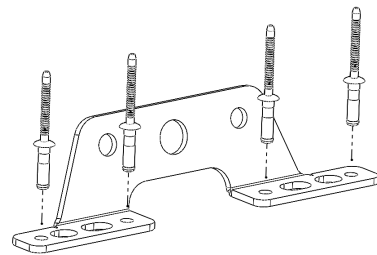

**Ensure the centre of the rivet is covered with the silicone to prevent water ingress**

# Wedgetail Trade Rails and Platform Fitting Instruction


To suit—Farizon Supervan SV SWB 2025—Current

RW-FSV-3316F



4

- Position or measure the platform on the roof so that rear mounted lug is directly underneath the rear crossbar show, then **mark a reference from the middle and front crossbars** down to the gutter line to mark where each lug must sit.
- Align each remaining lug so its **bolt pattern centres directly under its corresponding crossbar**, ensuring the lug sits parallel to the gutter and matches the previously installed rear lug.
- Drill, and **rivet each lug in place using the same four-rivet pattern**, confirming all lugs are square and correctly spaced before attaching the legs.

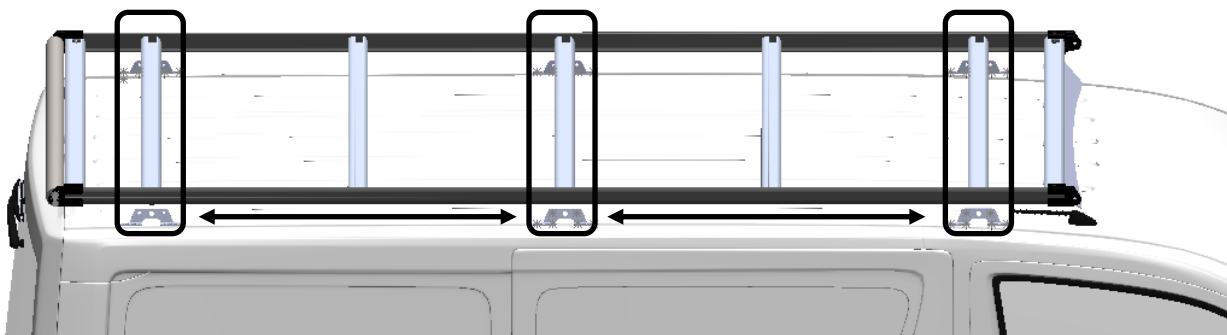

**Use drill sleeve when drilling into roof area to preserve headlining**

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon Supervan SV SWB 2025—Current


RW-FSV-3316F



## Assemble Lugs to Legs

5



- Attach the plastic leg to the lug using M8 Dacro and Nyloc Nut

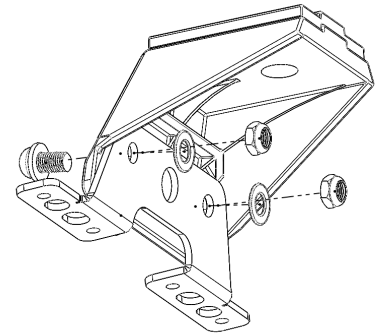

6

- If necessary, apply spacers to the top of the legs to ensure all crossbars are level.
- Attach the channel nuts to the top of leg.
  - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts/ Spacers to the top of legs.

\* Channel nuts to the top as shown in the following diagram

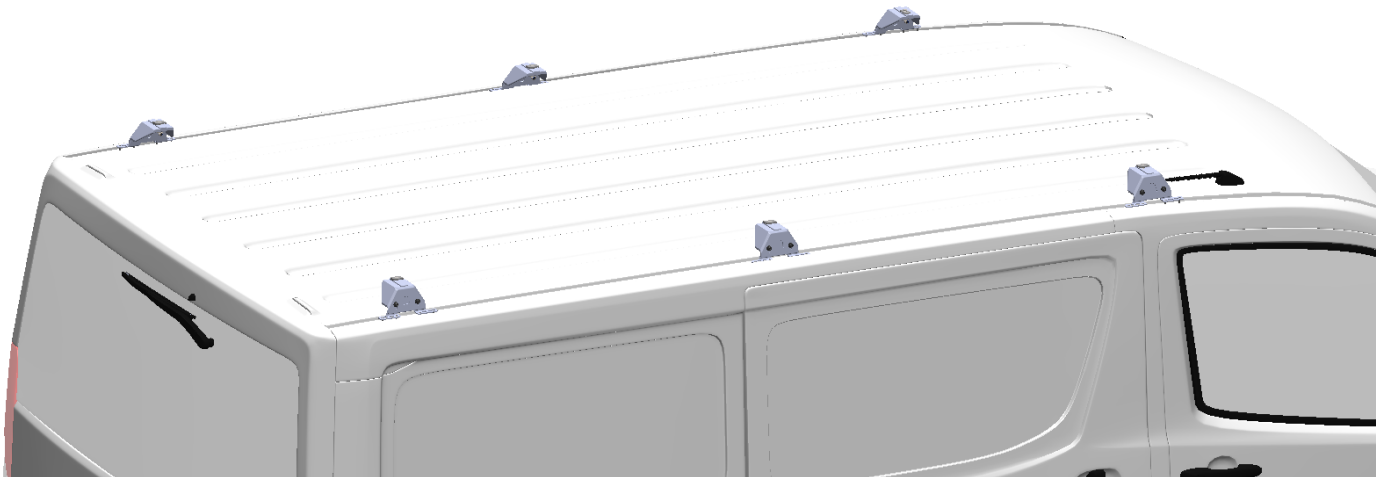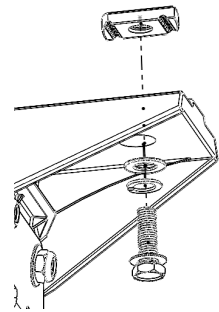

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon Supervan SV SWB 2025—Current

RW-FSV-3316F



## Assemble the Wedgetail Trade Platform to the Legs

5

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

**NOTE**— Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient


6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector.

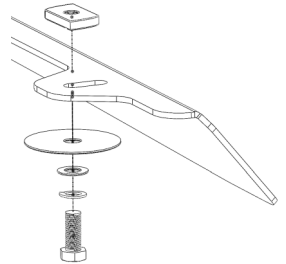

**NOTE**—Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

### Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

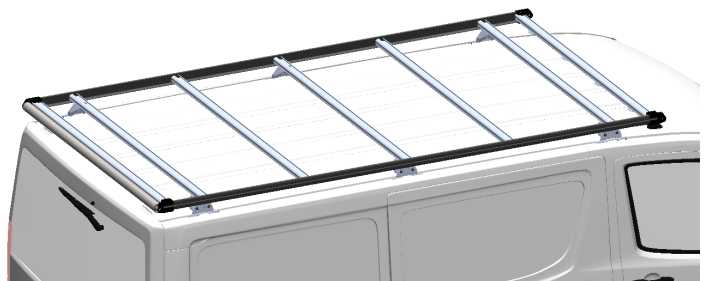

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration