

WedgeTail Trade Rails and Platform Fitting Instruction

To suit—LDV Deliver 7 2024-On LWB

RW-LDVD7-3016



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Silicone/urethane sealer
- M8 Nutsert Tool
- Drill Bit (5mm, 9mm, 11mm)

Kit Content

1

WedgeTail Trade LDV Deliver 7 LWB Front Left & Right Rails



x1

2


WedgeTail Trade LDV Deliver 7 LWB Rear Left & Right Rails



x1


3

WedgeTail Trade Platform

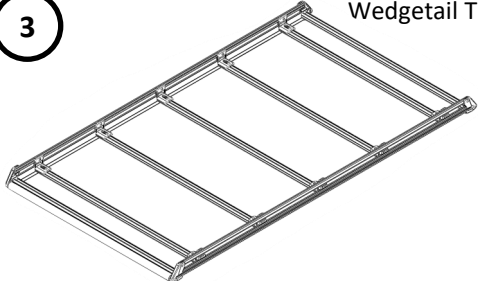

x1


4

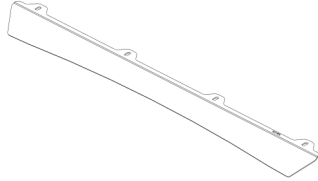

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

5


M8 X 25 Sems Bolt Hex

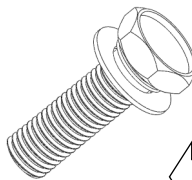

x16

8


M8 Flat Washer

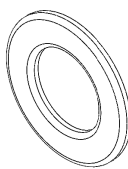

x12

6


M10 X 20 Stainless Hex Bolt

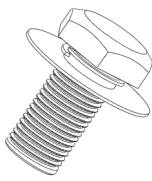

x10

9


8mm Nyloc Nut



x12

7


M10 Unistrut

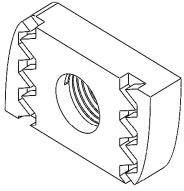

x10

10

8mm Nutsert

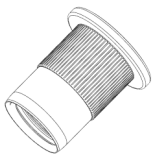

x4

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—LDV Deliver 7 2024-On LWB


RW-LDVD7-3016



Assemble rails to roof


1

- Place the rails on the roof of the vehicle
- Place the rear rails(Engraved LDVD7 R) in the rear position as shown below. The rear mounting plate of the rails should be placed 190mm from the rear door line.
- Place the front rails(Engraved LDVD7 F) in the front position as shown below. The distance between front and rear rail should be 35mm.

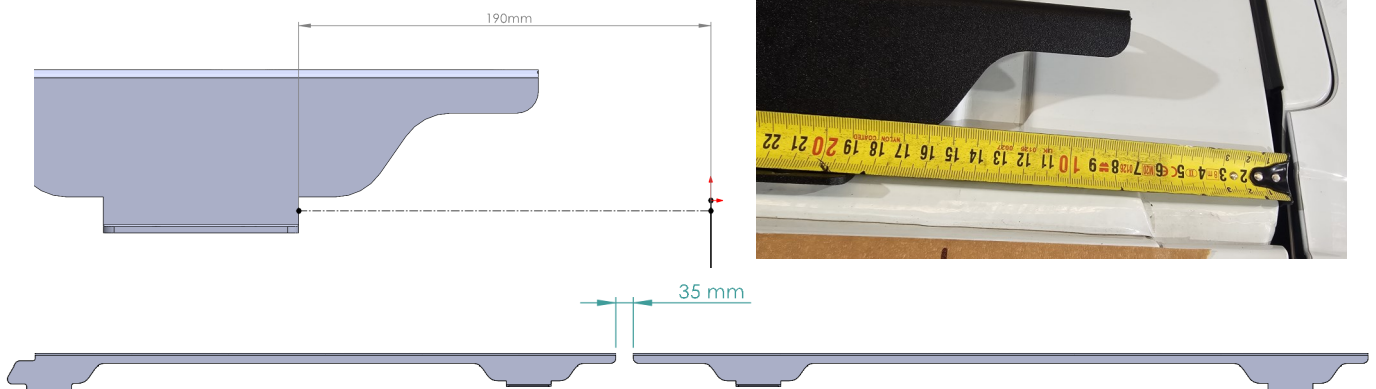

2

- Using the holes in the rail as a guide and mark all the holes centers
- Drill 5mm pilot holes in the center of all the marking. Open the holes using 9mm drill bit
- In the front most position the 3 rivet holes can be used in place of the Nutsert mounting system when access to the underside is hard.
- For the front 2 holes of the front rails, open the holes using 11mm drill bit
- Clean the area of any debris and apply silicone or urethane sealer (natural cure sealants only) under the rails and to the drilled holes.
- Apply the M8 nutsert to the front 2 holes of the front rails with tools
- Attach rails to the roof of vehicle using M8 Bolts , washer & nuts .

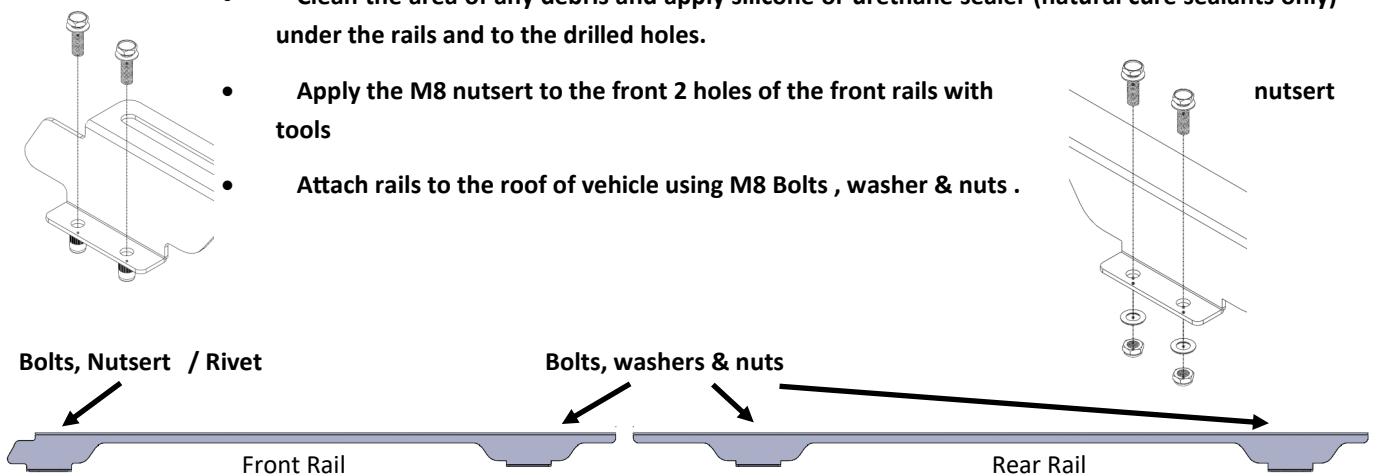

Ensure the bolts is covered with the silicone to prevent water ingress



Ensure drilling with a 20mm drill stop to prevent damage to wiring, headlining etc.

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—LDV Deliver 7 2024-On LWB

RW-LDVD7-3016



3

- **Attach the channel nuts to the top of rail.**
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.


* Channel nuts to the top as shown in the following diagram

NOTE—Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Tailgate Version

Rear Slot—Barn Door Version

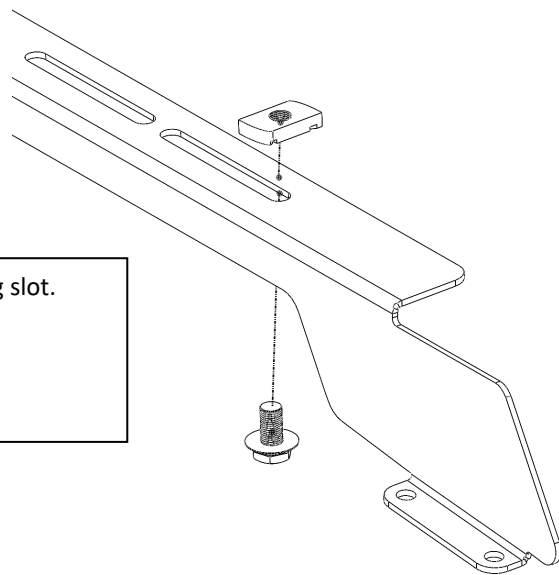

Assemble the Wedgetail Trade Platform to the rails

4

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE— Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

5

- **Centralize the rack side to side (using a tape measure) on the wedgetail rails.**

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—LDV Deliver 7 2024-On LWB

RW-LDVD7-3016



6

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector using M8 hardware as shown below

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

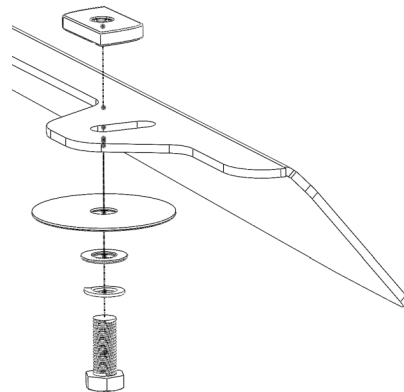

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration