

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Ford Transit VO LWB Mid Roof 2014-On  
RW-FTLMVO-3316



**Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.  
Contact us if any parts appear missing, incorrect, or damaged.  
Clean the roof prior to fitting the roof racks.


### Tools Required:

- Spanner (13mm,17 mm)
- Silicone/urethane sealer

### Kit Content

1


Wedgetail Trade Ford Transit VO LWB Mid Front Left & Right Rails

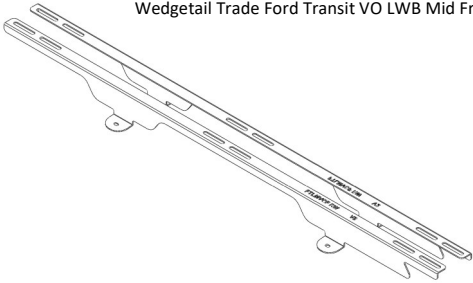

x1

5


M8 X 25 Sems Bolt Hex

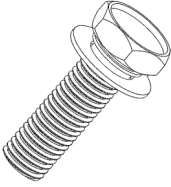

x8

2


Wedgetail Trade Ford Transit VO LWB Mid Rear Left & Right Rails

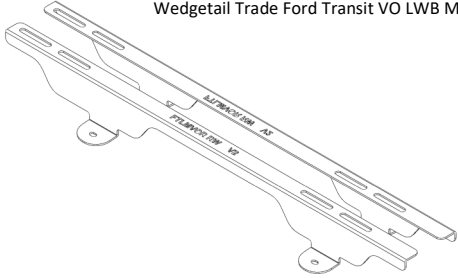

x1

6


M10 X 20 Stainless Hex Bolt

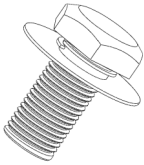

x10

3


Wedgetail Trade Platform

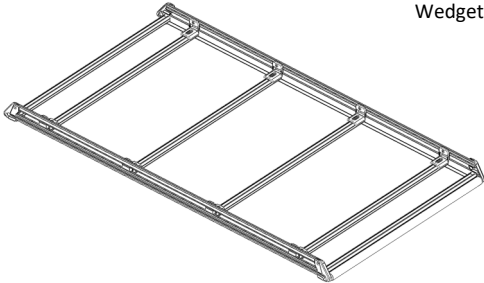

x1


7

M10 Unistrut

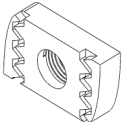

x10

4

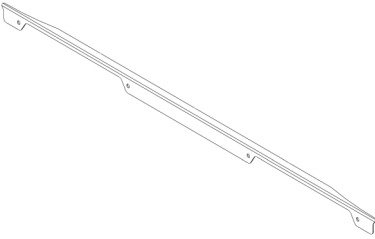

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Ford Transit VO LWB Mid Roof 2014-On


RW-FTLMVO-3316



## Assemble rails to roof

1

- Remove 4 OEM plastic caps per sides in the roof channel to expose the factory mounting points.
- Factory holes that may be partially covered with sheet metal will need to be elongated out to allow for the bolt to be fitted

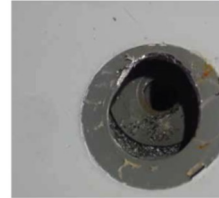


2

- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

3


- Place the supplied rails to the roof.
- Mount each rails on the roof using 8mm Bolts and washers

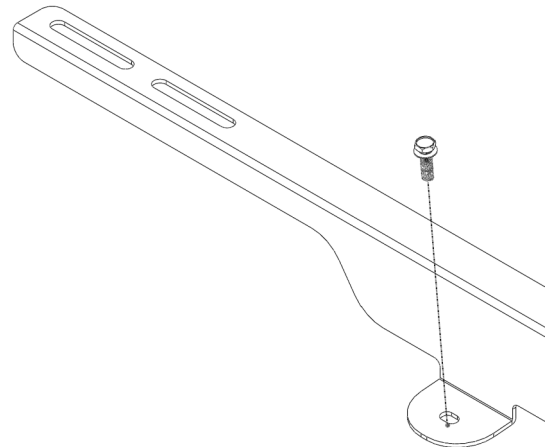

4

- Attach the channel nuts to the top of rail.
  - Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

\* Channel nuts to the top as shown in the following diagram

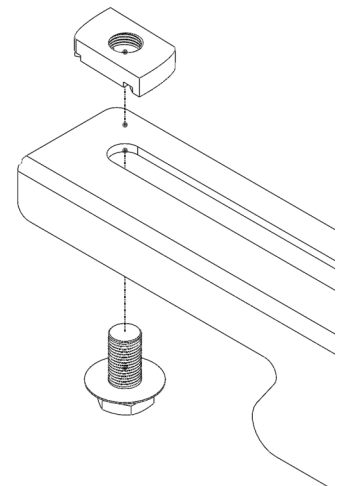

**NOTE**-Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Tailgate Version

Rear Slot—Barn Door Version

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Ford Transit VO LWB Mid Roof 2014-On

RW-FTLMVO-3316



## Assemble the Wedgetail Trade Platform to the rails

5

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

**NOTE**– Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector.

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

### Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

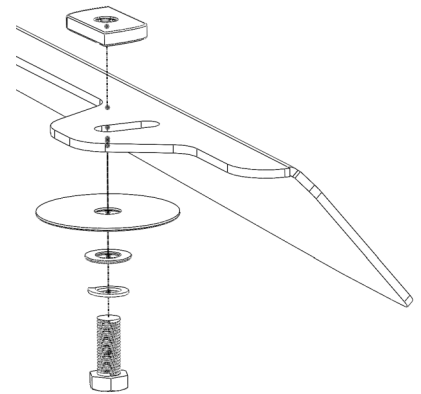

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration