

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon V7E 05/26
RW-FV7E-3314



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.


Please read and follow the instructions carefully to ensure correct fitment.
Contact us if any parts appear missing, incorrect, or damaged.
Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Silicone/urethane sealer
- M8 Nutsert Tool
- Drill Bit (5mm, 9mm, 11mm)

Kit Content


1

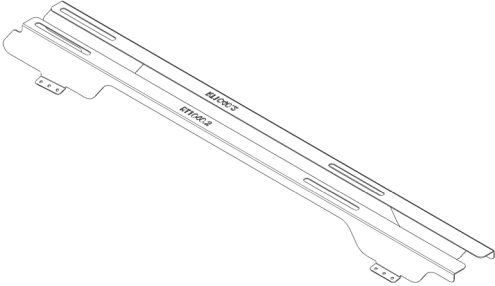

Wedgetail Trade Farizon V7E Front Left & Right Rails

x1


2

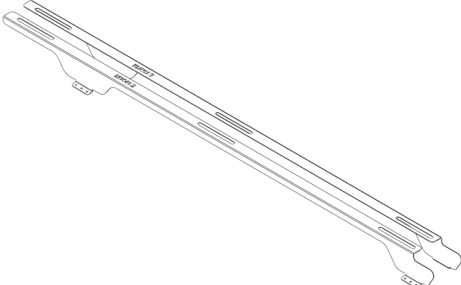

Wedgetail Trade Farizon V7E Rear Left & Right Rails

x1


3

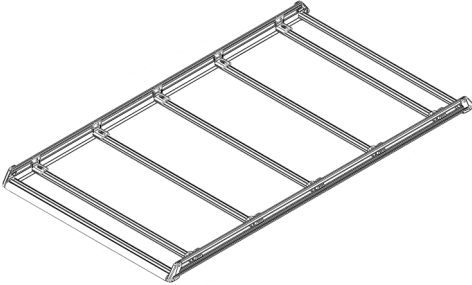

Wedgetail Trade Platform

x1

4

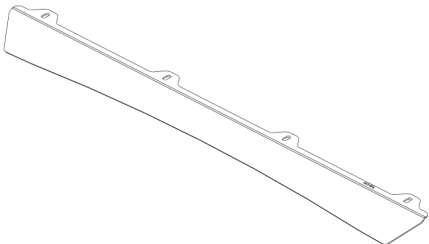

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4

x1

5

Refer to Hardware Kit for a list of fasteners and other relevant parts

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon V7E 05/26



RW-FV7E-3314



Assemble rails to roof


1

- Place the rails on the roof of the vehicle
- Measurements for mounting holes in roof starting at the barn door seams going forward. Measure 140mm from the barn door seams to the edge of the rear rail and 240mm between the ends of the rear and front rails
- Place the rear rails (Engraved RT1041.2) in the rear position as shown below.
- Place the front rails (Engraved RT1040.2) in the front position as shown below.

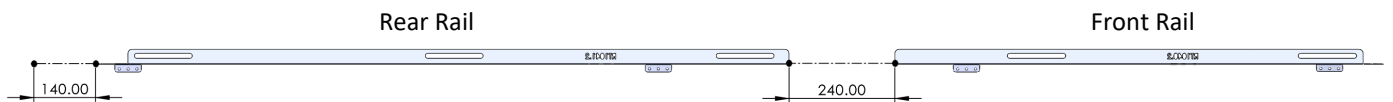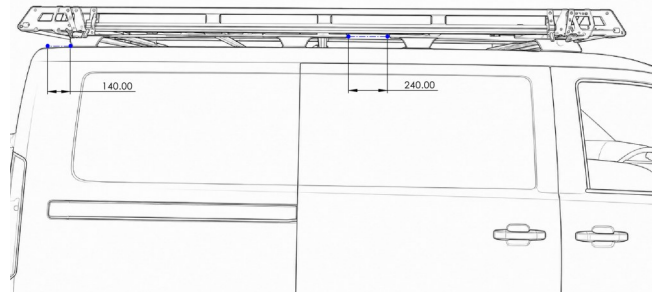

2

- Using the holes in the rail as a guide and mark all the holes centers
- Using a marker, mark drill locations in the center of all the holes. Open the holes using 5mm drill bit with drill stop
- Clean the area of any debris and apply silicone or urethane sealer (natural cure sealants only) under the rails over the drilled holes and over the rivets when installed.
- Attach rails to the roof of vehicle using 5mm rivets.

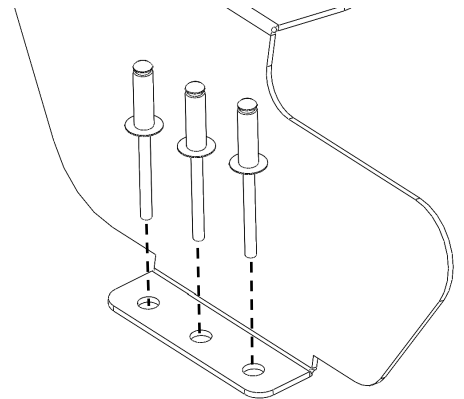

Ensure the bolts is covered with the silicone to prevent water ingress




Ensure drilling with a 20mm drill stop to prevent damage to wiring, headlining etc.

3

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

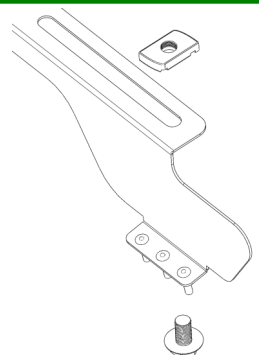

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Farizon V7E 05/26

RW-FV7E-3314



Assemble the Wedgetail Trade Platform to the rails

4

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE— Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

5

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

6

- Fully tighten remaining bolts in the following order:
 1. Rails to platform
 2. Attach wind Deflector using M8 hardware as shown below

NOTE—Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

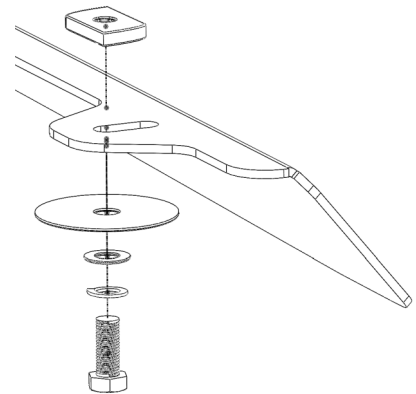

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration