

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Vito LWB 04 O/N

RW-MVTL-3014



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (10mm,13mm,17 mm)
- Silicone/urethane sealer

Kit Content

1

Wedgetail Trade Mercedes Benz Vito LWB Front Left & Right Rails

x1

2

Wedgetail Trade Mercedes Benz Vito LWB Rear Left & Right Rails

x1

3

Wedgetail Trade Platform

x1

4

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

5

M6 X 12 Sems Bolt Hex

x12

6

M10 X 20 Stainless Hex Bolt

x10

7

M10 Unistrut

x10

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Vito LWB 04 O/N

RW-MVTL-3014



Assemble rails to roof

1

- Remove 6 OEM plastic caps per sides in the roof channel shown to expose the factory mounting points.

(Note: Except the plastic caps which are close to the windscreen)




2

- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

3


- Fit rails to the vehicle using 6mm hardware

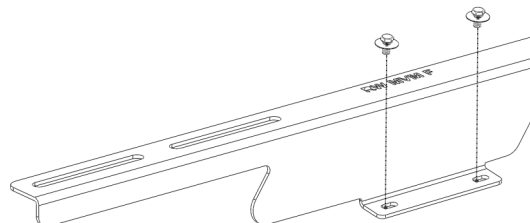

4

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

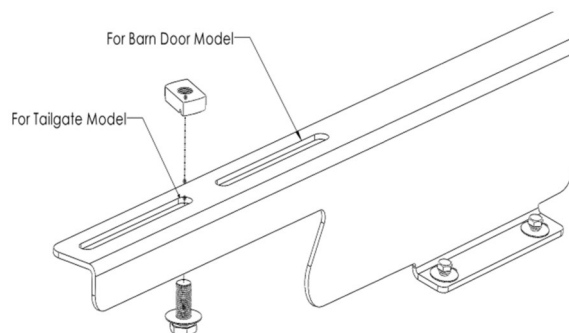

NOTE-Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Tailgate Version

Rear Slot—Barn Door Version

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Vito LWB 04 O/N

RW-MVTL-3014



Assemble the Wedgetail Trade Platform to the rails

5

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE— Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector using M8 hardware as shown below

NOTE—Ensure the channel nuts are 90 degrees to the channels.




Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.

Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

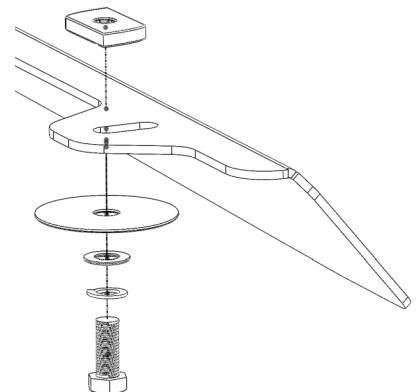

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration