

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Sprinter VS30 MWB  
2019—Current



**Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

## Tools Required:

- Spanner (10mm, 13mm,17 mm)
- Silicone/urethane sealer

## Kit Content

1

Wedgetail Trade Sprinter MWB Front Left & Right Rails



x1

2


Wedgetail Trade Sprinter MWB Rear Left & Right Rails



x1


3

Wedgetail Trade Platform

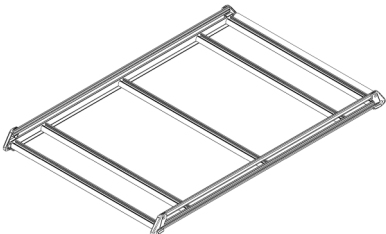

x1


4

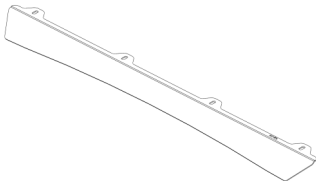

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

5

M8 X 25 Sems Bolt Hex



x16

6


M10 X 20 Stainless Hex Bolt



x10


7

M10 Unistrut

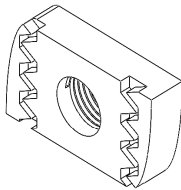


x10

8mm Flat Washer

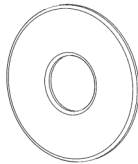

x32

8mm Nyloc Nut

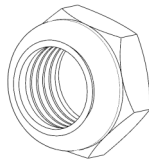

x16

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Sprinter VS30 MWB  
2019—Current



## Assemble rails to roof

1

- Place the front and rear rails on the vehicle roof and align them with the covered slots.

2

- Insert the screwdriver from the sides and pull out the plastic caps.




3

- Apply silicone or urethane sealer (natural cure sealants only) to all the holes.

4


- Locate the rail on top and place M8 dome bolts through the holes.
- Fasten using plain washer and M8 Nyloc Nut from underneath

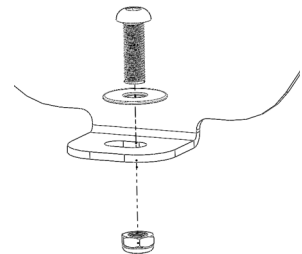

5

- Attach the channel nuts to the top of rail.
  - Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

\* Channel nuts to the top as shown in the following

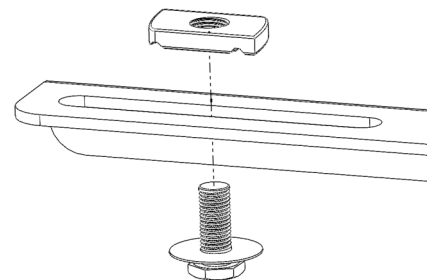

# Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Mercedes Benz Sprinter VS30 MWB  
2019—Current



## Assemble the Wedgetail Trade Platform to the rails

4

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

**NOTE**— Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

5

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

6

- Fully tighten remaining bolts in the following order:
  1. Rails to the lugs
  2. Rails to platform
  3. Attach wind Deflector using M8 hardware as shown below

**NOTE**—Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.


Do not overtighten, this will preserve the spring washers.

### Fitting Note:



Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

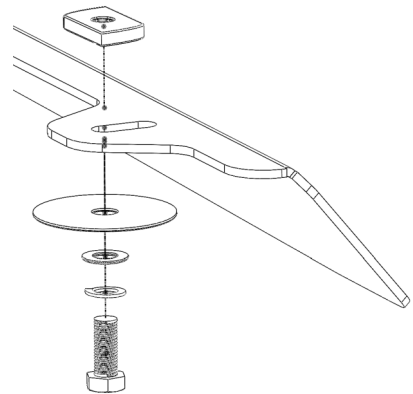

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration