

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Caddy Van Storage Service Body

Dual Cab—RW-DCAD-2514

Extra Cab—RW-EXCAD-2714

Single Cab—RW-SCAD-3014



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm)
- Silicone/urethane sealer

Kit Content


1

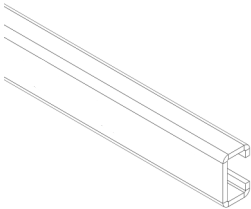


Unistrut Bar

	Length (mm)	Qty
DCAD	2400	2
EXCAD	2600	2
SCAD	2900	2


2

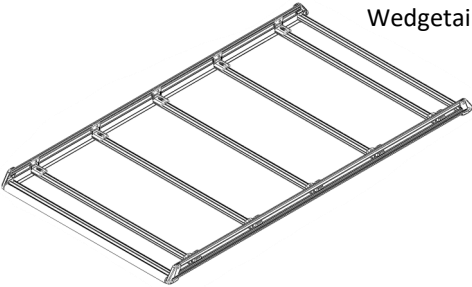

Wedgetail Trade Platform

x1


3

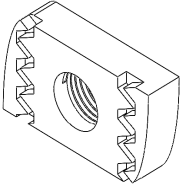

M8 Channel Nut

	Qty
DCAD	14
EXCAD	14
SCAD	16


4

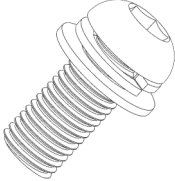

M8 X 20 Sems Black

	Qty
DCAD	8
EXCAD	8
SCAD	10


5

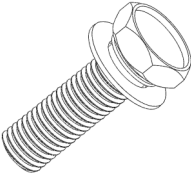

M8 X 25 SEMS BOLT HEX

	Qty
DCAD	6
EXCAD	6
SCAD	6


6




8mm Flat Washer

	Qty
DCAD	8
EXCAD	8
SCAD	10

7



Unistrut End Cap

x4

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—*Caddy Van Storage Service Body*

Dual Cab—RW-DCAD-2514

Extra Cab—RW-EXCAD-2714


Single Cab—RW-SCAD-3014



Assemble Unistrut to roof


1

Attach M8 Channel Nut , M8 X 25 Sems Bolt & 8mm Flat Washer to the Caddy Service Body Mounting.

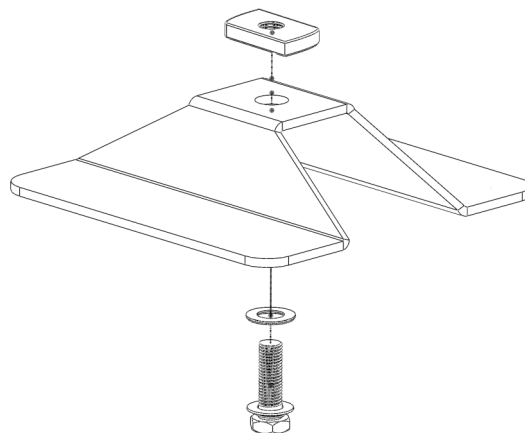


2

- Fit the Unistrut bar to top of the Caddy service body mounting

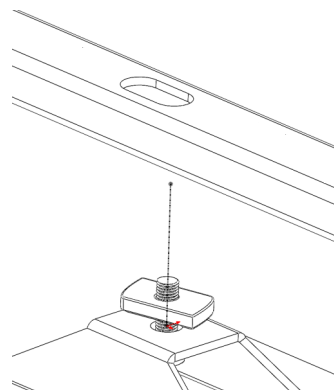

3

- Attach the channel nuts to the top of Unistrut Bar.
 - Fit 8mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of Unistrut Bar.
- * Channel nuts to the top as shown in the following diagram

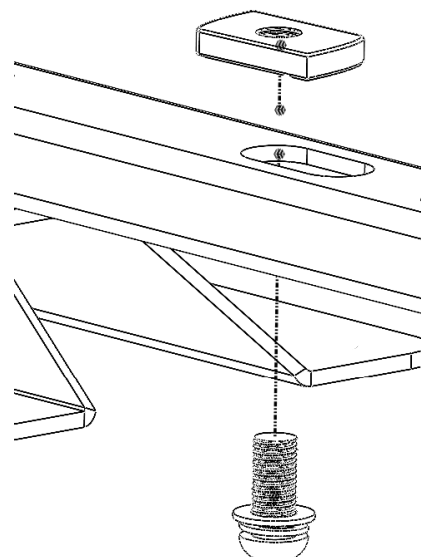

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—*Caddy Van Storage Service Body*

Dual Cab—RW-DCAD-2514

Extra Cab—RW-EXCAD-2714

Single Cab—RW-SCAD-3014



Assemble the Wedgetail Trade Platform to the rails

4

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

5

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

6

- Fully tighten remaining bolts in the following order:

1. Unistrut Bar to the mounting

2. Unistrut bar to platform

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration