

Wedgetail Trade Accessories Fitting Instruction

RWA-LSK

Ladder Strap Kit (Under Cross bar Mount)



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.


Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Tools Required:

- Spanner (10mm & 17mm)
- Hex Key (5 mm)

Kit Content

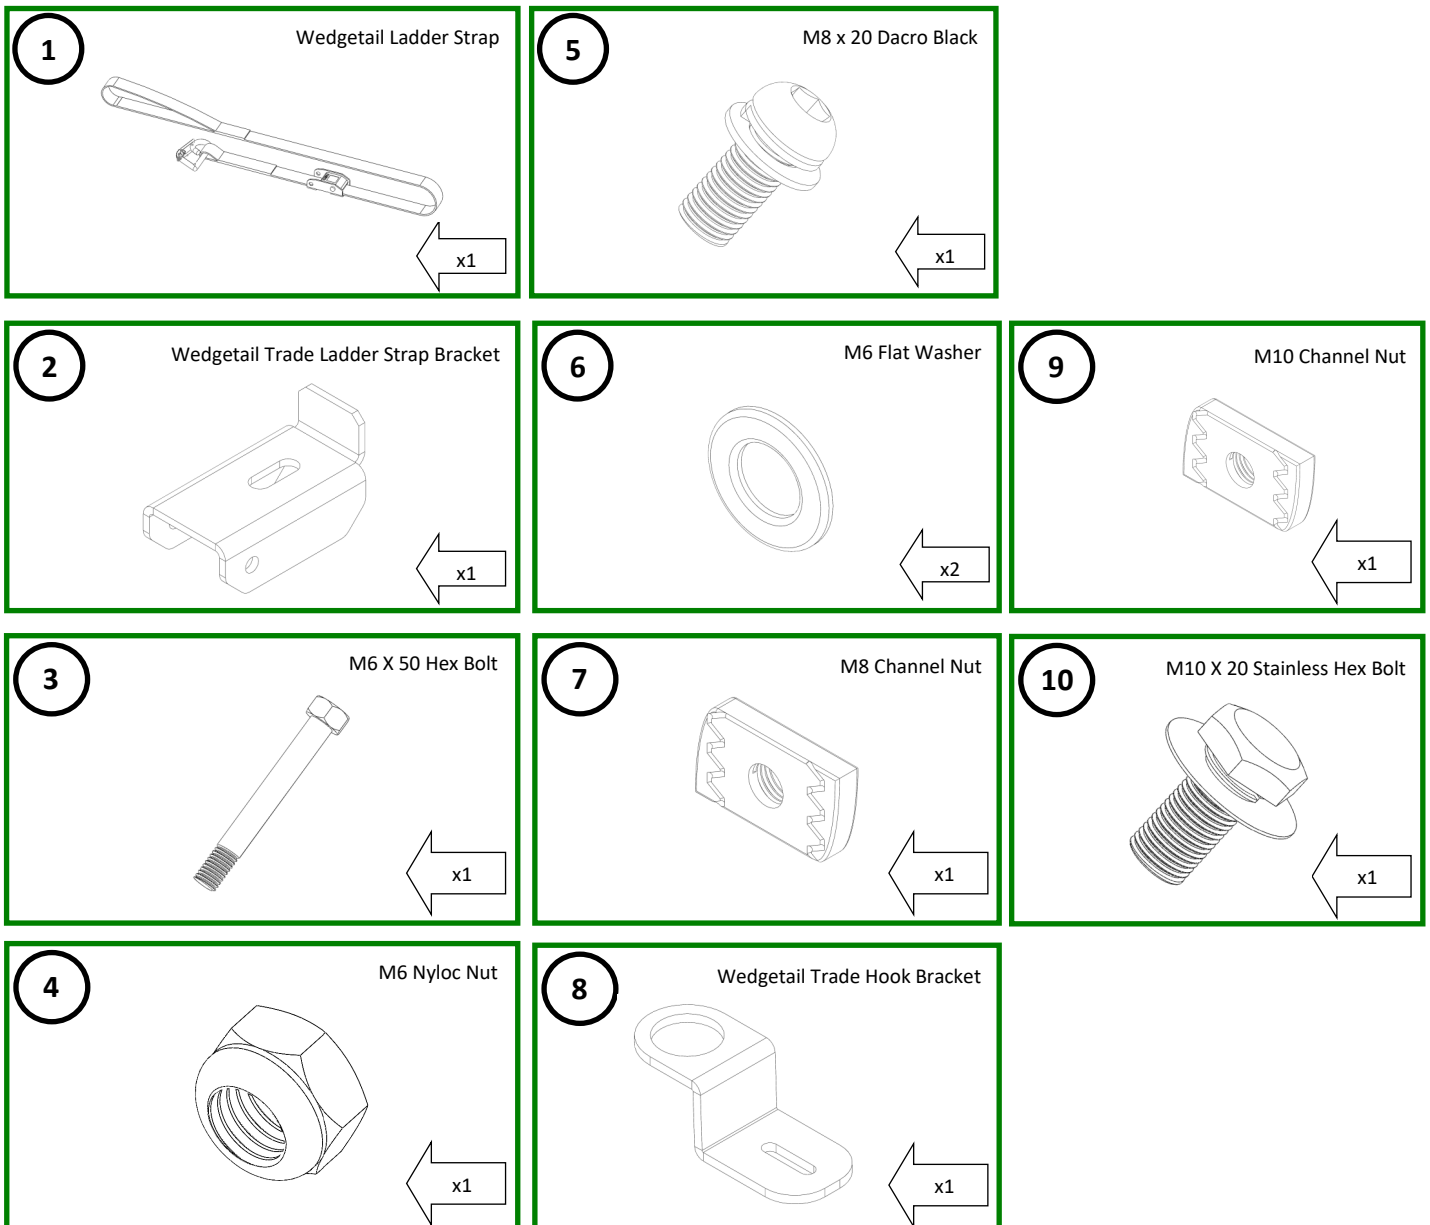

Wedgetail Trade Accessories Fitting Instruction

RWA-LSK


Ladder Strap Kit (Under Cross bar Mount)



Assembly Ladder strap bracket


1

- Attach the bracket under the crossbar with M8 x 20 Dacro Black and M8 Channel Nut

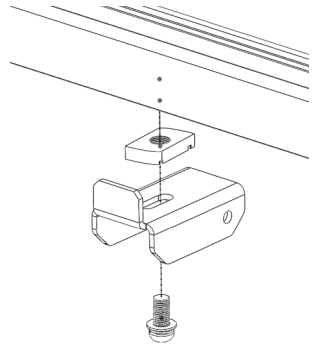

2

- Place the bracket to the ladder strap
- Attach the M6 bolt, nyloc nut and washer as shown

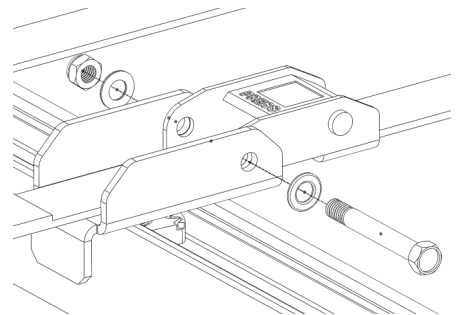

3


- Attach the hook bracket to the crossbar with M10 Bolt and Channel Nut

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

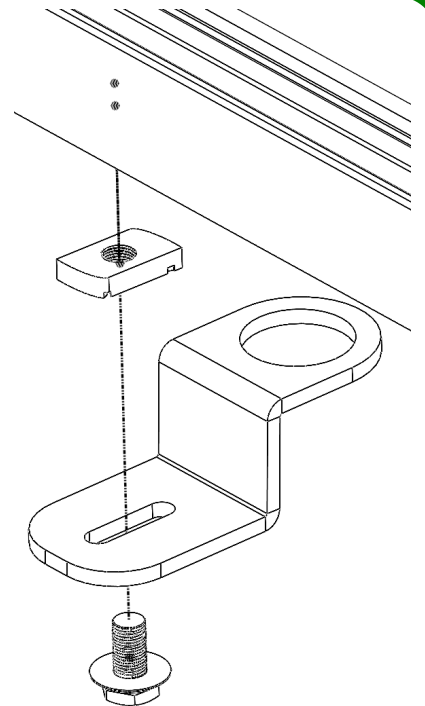

Thank you for your purchase.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration