



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.


Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Tools Required:

- Hex key (5mm)
- Spanner (13mm)


Kit Content

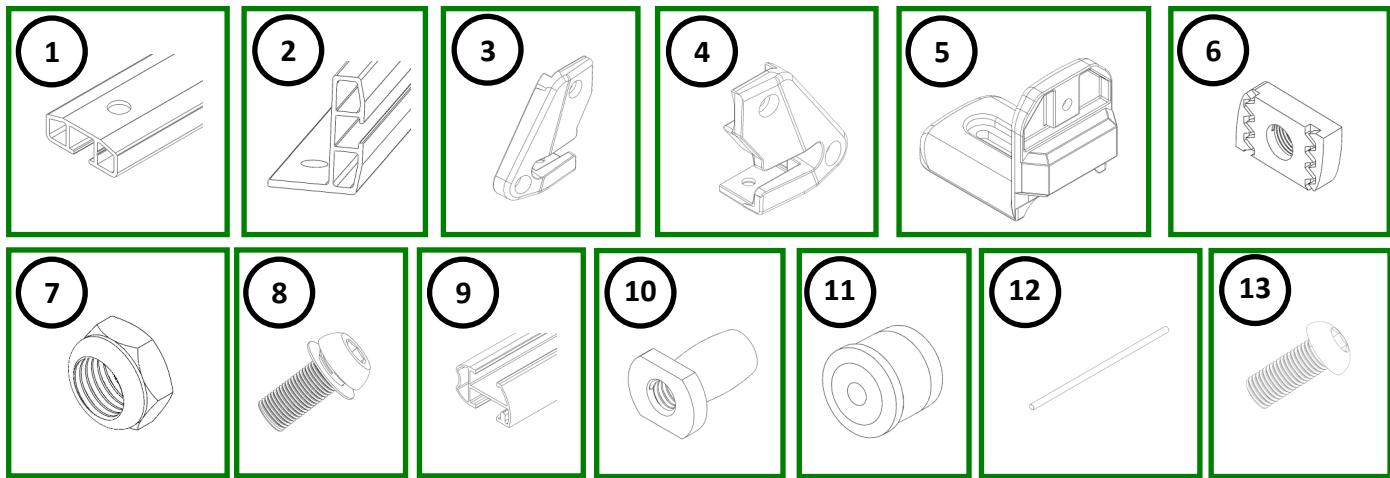



RWP	1813	2113	2514	2714	2716	2813	3016	3014	3316	
Components	Qty									
1	Wedgetail Trade Top Side Bar	2 (1650mm)	2 (1950mm)	2 (2350mm)	2 (2550mm)	2 (2550mm)	2 (2650mm)	2 (2850mm)	2 (2850mm)	2 (3150mm)
2	Wedgetail Trade Bottom Side Bar	2 (1700mm)	2 (2000mm)	2 (2400mm)	2 (2600mm)	2 (2600mm)	2 (2700mm)	2 (2900mm)	2 (2900mm)	2 (3200mm)
3	Wedgetail Trade Left Corner					2				
4	Wedgetail Trade Right Corner					2				
5	Wedgetail Trade Adjustable Side Buffer	6	6	8	8	8	10	10	10	
6	M8 Channel Nut	16	16	20			20	24	24	24
7	8mm Nyloc Nut	10	10	12			12	14	14	14
8	M8 x 20 Dacro Black	26	26	32			32	38	38	38
9	Wedgetail Trade Crossbar	5(1300mm)	5(1300mm)	6 (1450mm)	6 (1450mm)	6 (1600mm)	6(1300mm)	7 (1600mm)	7 (1450mm)	7 (1600mm)
10	Wedgetail Trade Roller Nut					2				
11	Wedgetail Trade Roller Insert					2				
12	Wedgetail Trade Roller Tube	1(1288mm)	1(1288mm)	1 (1438mm)	1 (1438mm)	1 (1588mm)	1(1288mm)	1 (1588mm)	1 (1438mm)	1 (1588mm)
13	M8 x 20 Button Zinc Socket					2				

**1**

Attach the M8 bolt and channel nut to the holes of Wedgetail Trade bottom bar (except the holes at the side)

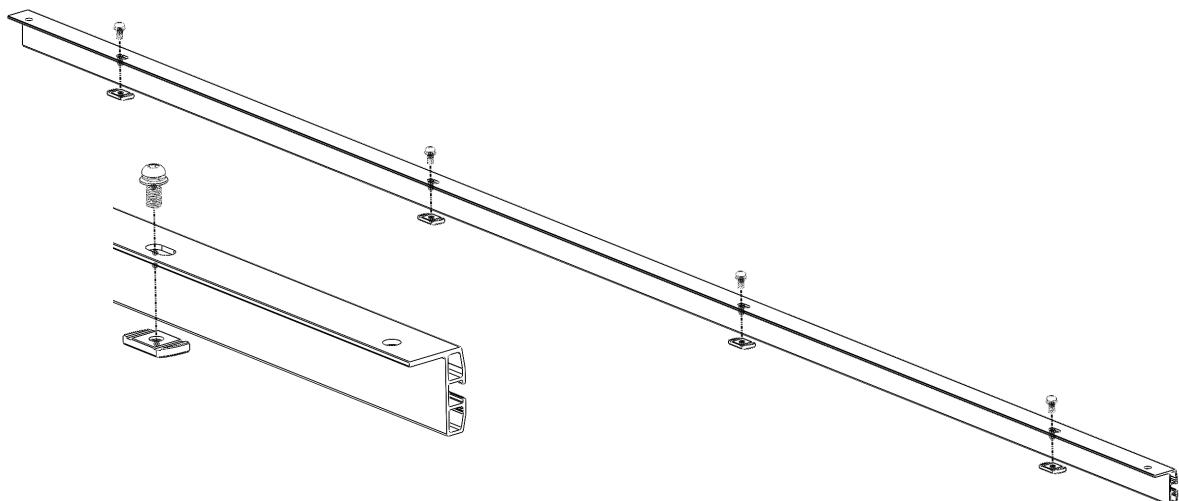**2**


Insert the crossbars to the Wedgetail Trade Bottom Bar by following the below photo. Tighten the M8 bolt and channel nut

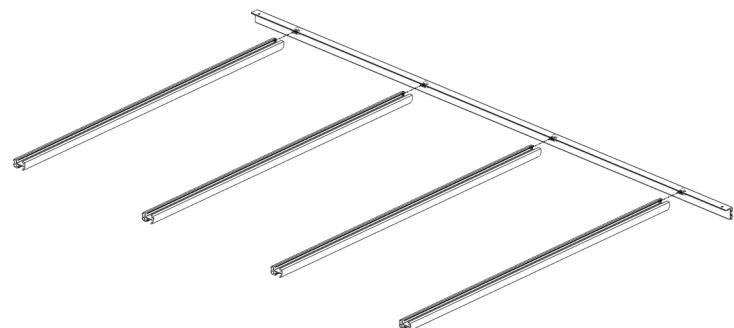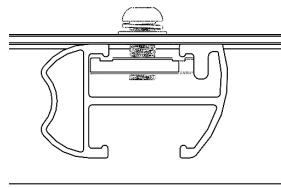**3**

Insert the Wedgetail Trade Corner to the both end of Wedgetail Trade Bottom Bar.

Fasten the M8 Bolt and channel nut as shown in the photo.

Insert the crossbar to the Wedgetail Trade Bottom Bar which follow the same orientation in Step2

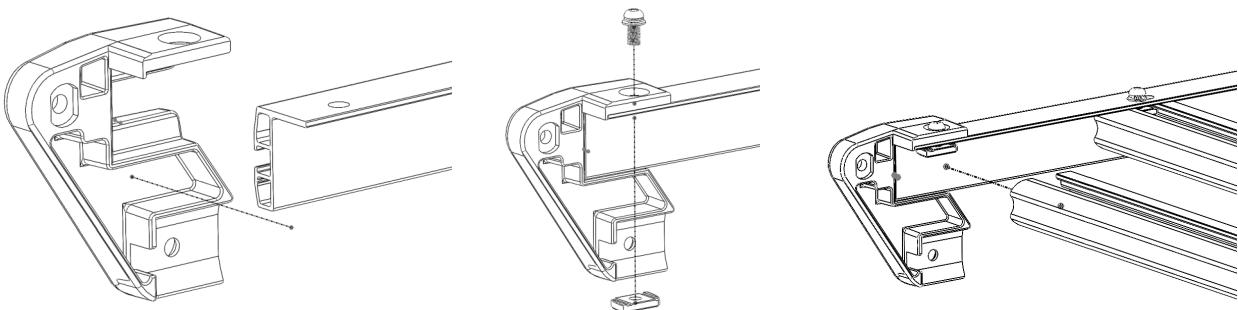




Assemble the Wedgetail Trade Roller to the Platform

4


Insert the Wedgetail Trade Roller Nuts & Wedgetail Trade Rollers Insert to both end of Wedgetail Trade Roller.

Place the assembled part to the rear of the platform.

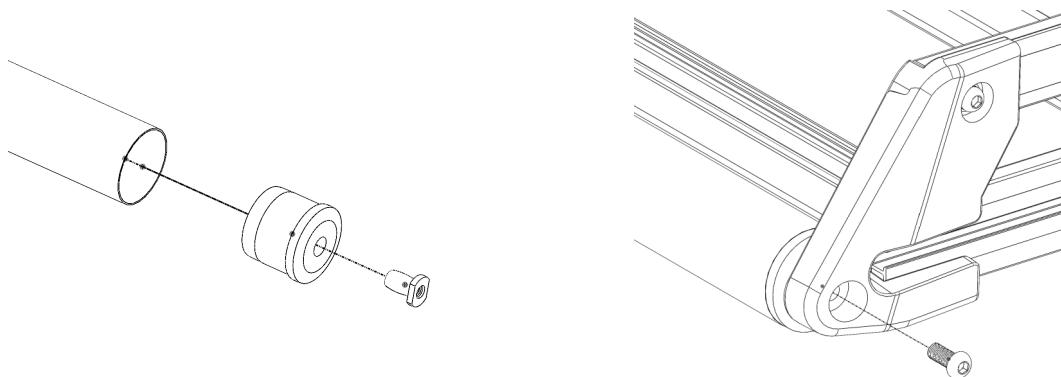


5

Repeat Step 1-4 for another side to complete the bottom of the platform

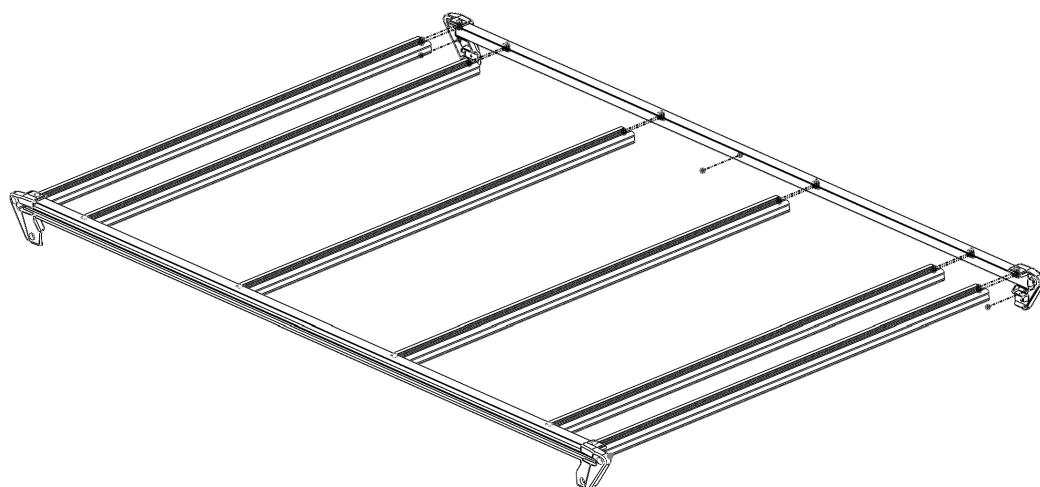

6

Attach the M8 bolt and 8mm nyloc nut to all Wedgetail Trade Adjustable Trade Buffers

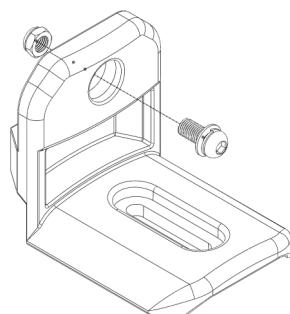




7

Insert the 8mm nyloc nut and the assembled component in step 4 to Wedgetail Trade Top Side Bar

- The first and last nyloc nut need to be insert in different orientation. Please refer to the photo
- Insert the correct quantity of the buffer per side. Please refer to the below table


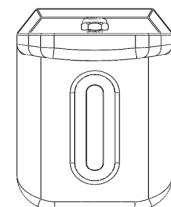


	Quantity of buffer per side
RWP-1813	3
RWP-2514 , RWP-2714, RWP-2716	4
RWP-3014, RWP-3016	5




8

Attach the assembled top side bar to the assembled bottom side bar. And fasten M8 bolt to the Wedgetail Trade corner and top side bar for both end as shown.

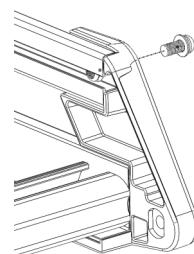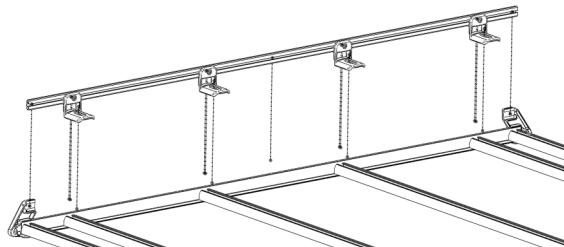

9

Insert the M8 Channel Nut to the bottom of Wedgetail Trade Adjustable Side Buffer and fasten with M8 Bolt as shown

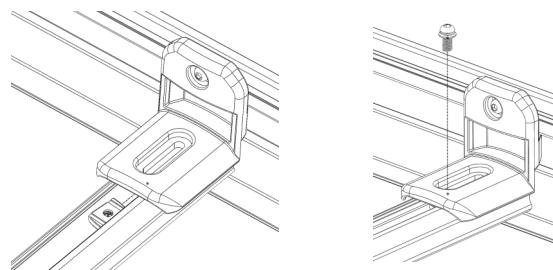

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



10

Repeat Step 6-9 for another side.



Assemble the Wedgetail Wind Deflector to the Platform

11

Place the Wedgetail Wind Deflector to the bottom of front bar ,

Centralize the wind deflector side to side (using a tape measure) on the platform

Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

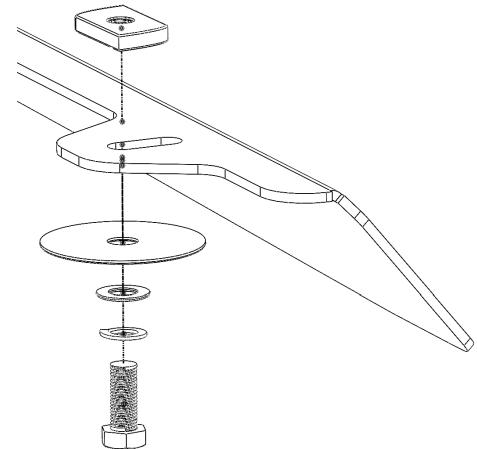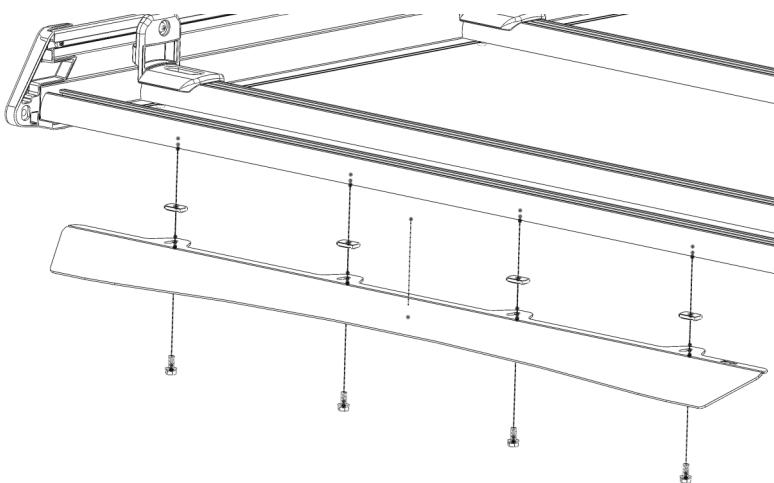

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration