

# Gutter Mounted Roof Visor Light Mount

To suit 70-79 Series Landcruiser



T70V

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Clean the roof prior to fitting the roof racks.

## **Tools Required:**

Hex key


## **Kit Content**

**1** No 1 Clip

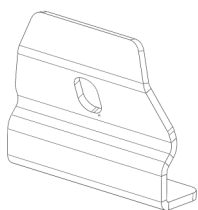


x4

**2** Drivers side mount

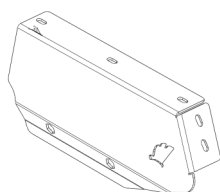


x1

**3** Passengers Side mount

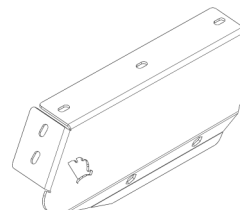


x1

**4** M8 Nyloc Nut

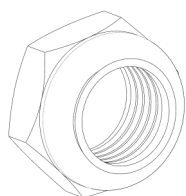


x10

**5** M8 Whiz Nut

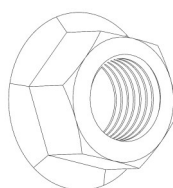


x4

**6** Foam Tape




x4

**7**

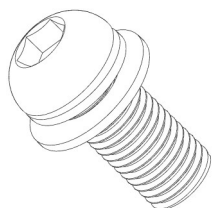

x14

**8** Molle Panel

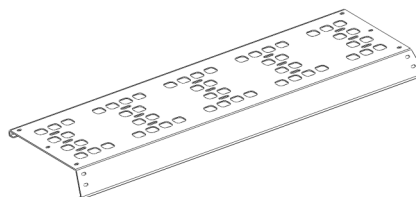

x1

# Gutter Mounted Roof Visor Light Mount


To suit 70-79 Series Landcruiser



T70V


1

- Attach both the passenger side and drivers side mounts to the MOLLE Panel M8 x 22 Dacro Bolts and Nyloc Nuts
- Do not yet tighten the bolts as you need to

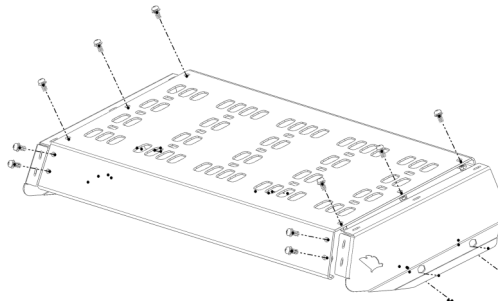


2

- Align it over the roof and position the side mounts such that they sit inside the gutter.
- The proceed to tighten the bolts

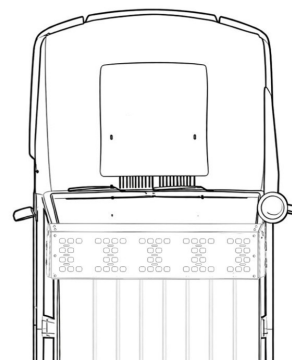


3

- Using fingers/ tape, insert whiz nuts reversed into the hex shaped hole behind the passenger and driver side mounts
- You may have to tape the nuts behind the mount as hand access is difficult

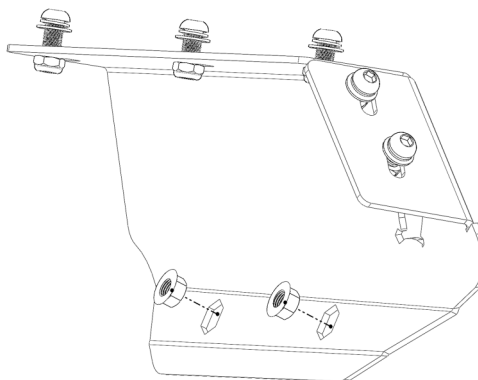

4

- Attach the No 1. Clip with the to the sides of the mount using the M8 x 22 Dacro Bolts ensuring it latches underneath the gutter

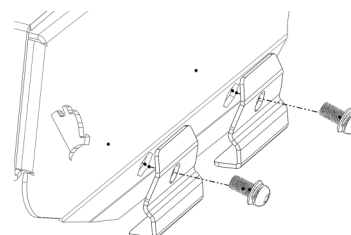

# Gutter Mounted Roof Visor Light Mount


To suit 70-79 Series Landcruiser



T70V

5

- Tighten all bolts using the hex Key

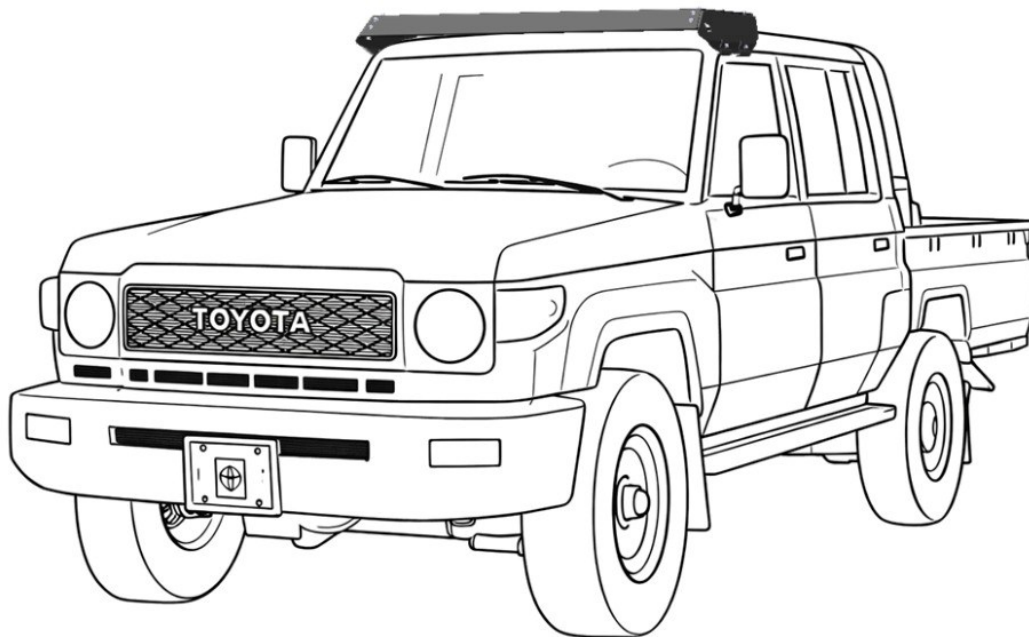

**Fitting Note:**



Warning. Ensure the Visor is stable before driving.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration