

Trademax CrossBar Kit Fitting Instruction

To suit—Farizon SV 2024 - Current



TM-FSVLP-41600

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.






Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13 & 17 mm)
- Hex Key (5mm)
- Silicone/urethane
- Drill bit(5mm) & Rivet
- Touch Up Paint


Kit Content
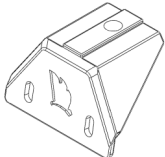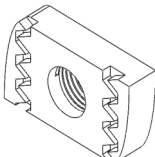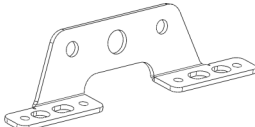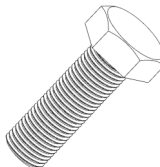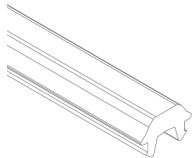
<u>1</u>	70 mm Trademax Leg		X8
<u>5</u>	M10 Unistrut		X8
<u>10</u>	12.9mm Rivet		X8
<u>2</u>	Colorado Lug		X8
<u>6</u>	M10 X 30 Hex Bolt		X8
<u>11</u>	15.5mm Rivet		X24
<u>3</u>	Tradesmax Crossbar		X4
<u>7</u>	M10 X Split Washer		X8
<u>12</u>	M8 Flat Washer		X16
<u>4</u>	WT Rubber		X4
<u>8</u>	10mm Flat Washer		X8
<u>13</u>	M8x22 Dacro		X16
<u>9</u>	M8 Nyloc Nuts		X16

Assemble Lugs to the roof

1

- Position the first Lug 180mm from the rear of the vehicle to the centre of the lug

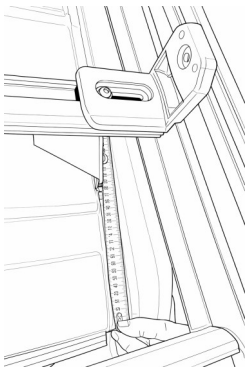

2


- Space out the lugs 1035mm apart center to center and drill out 5mm holes
- If the Rivet does not fit, drill through the next layer of steel



NOTE- Use drill sleeve when drilling into roof area to preserve headlining

3

- Paint all holes using either an enamel or acrylic paint (to apply use a cotton bud if paint brush is not available).
- Apply silicone or urethane sealer (natural cure sealants only) over the 5mm drilled rivet holes.

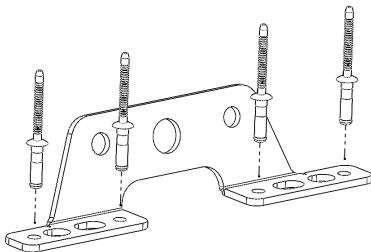


NOTE- Apply sealant over the top of rivets to prevent water ingress

Assemble Lugs to Legs

4


- Attach the plastic leg to the lug using M8 Dacro, Washer and Nyloc Nut

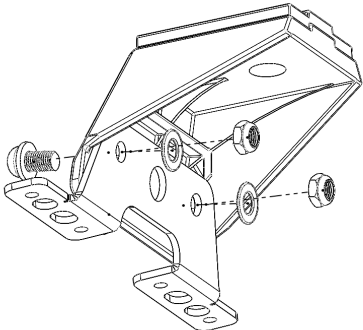

5

- Attach the channel nuts to the top of leg.
- Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts/ Spacers to the top of legs.


* Channel nuts to the top as shown in the following diagram

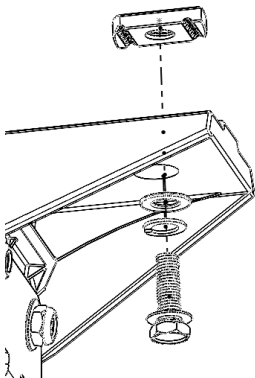

Assemble the Wedgetail Crossbar to the legs

6

- Place the Trademax Crossbar on the Legs
- Ensure the crossbar placed in the correct orientation
- Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

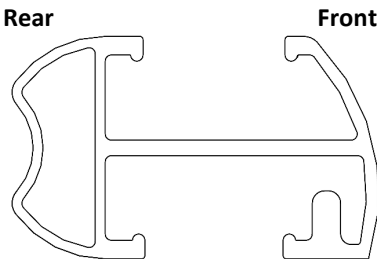

7

- Centralize the crossbar to side (using a tape measure)

8

- Fully tighten remaining bolts in the following order:
 1. Legs to Crossbar
 2. Legs to the lugs

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.

9

- Insert the crossbar rubber on top of the crossbar
- Insert the extra crossbar rubber under the front crossbar
- Insert End cap at the both side of the crossbar

Thank you for your purchase.

Please complete your warranty application following correct installation.

TradeMax by Tradesman Roof Racks

Innovation through Inspiration