

Trademax CrossBar Kit Fitting Instruction

To suit—Farizon V7E 05/26—Current



TM-FV7EP-31400

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.


Contact us if any parts appear missing, incorrect, or damaged.


Clean the roof prior to fitting the roof racks.


Tools Required:


- Spanner (13 & 17 mm)
- Hex Key (5mm)
- Silicone/urethane
- Drill bit(5mm) & Rivet
- Touch Up Paint

Kit Content
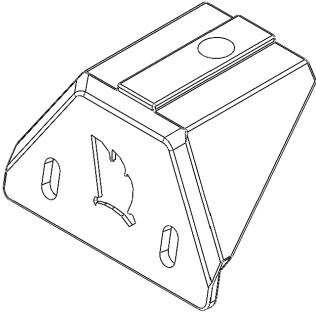
<u>1</u>	70 mm Trademax Leg
	
X6	
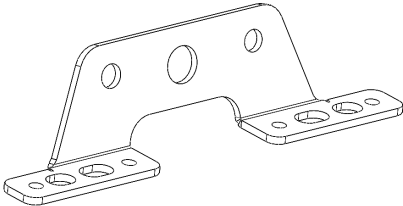
<u>2</u>	Colorado Lug
	
X6	
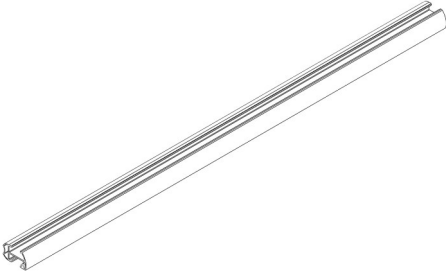
<u>3</u>	Tradesmax Crossbar
	
X3	
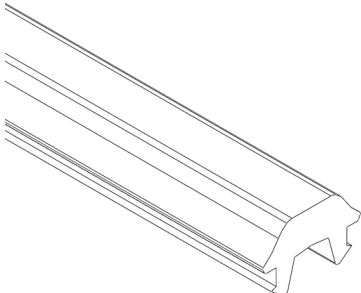
<u>4</u>	WT Rubber
	
X3	

<u>5</u>	Fasteners and Hardware
Refer to Mounting Kit for a list of fasteners and other relevant parts	

Assemble Lugs to the roof

1

- Locate the mounting points on each side of the roof in the rubber channel at the front
- If drilling and bolting is required, remove the headlining and rails if present
- If rivet mount is to be used (in random location), go to step 2

2


- Raise and trim the rubber channel to allow rivet mounted lug in desired location
- Mark the 5mm rivet holes in each side of the mounting lug & drill with a 5mm drill bit



NOTE- Use drill sleeve when drilling into roof area to preserve headlining

3

- Paint all holes using either an enamel or acrylic paint (to apply use a cotton bud if paint brush is not available).
- Apply silicone or urethane sealer (natural cure sealants only) over the 5mm drilled rivet holes.
- To keep rubber strip in place, apply a small amount of silicone sealant as required (trim underside of rubber if required to allow rubber to sit flush over mounting lug)

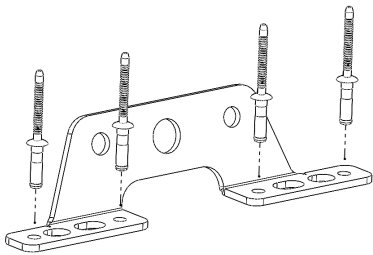


NOTE- Apply sealant over the top of rivets to prevent water ingress

Assemble Lugs to Legs

4


- Attach the plastic leg to the lug using M8 sems, Washer and Nyloc Nut

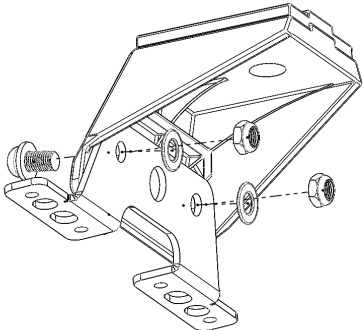

5

- Attach the channel nuts to the top of leg.
- Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts/ Spacers to the top of legs.


* Channel nuts to the top as shown in the following diagram

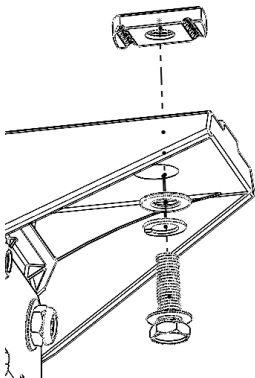

Assemble the Wedgetail Crossbar to the legs

6

- Place the Trademax Crossbar on the Legs
- Ensure the crossbar placed in the correct orientation
- Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

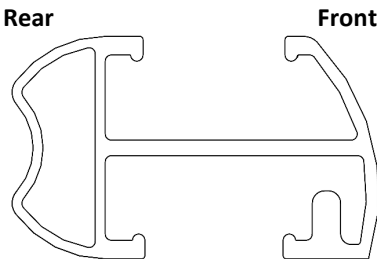

7

- Centralize the crossbar to side (using a tape measure)

8

- Fully tighten remaining bolts in the following order:
 1. Legs to Crossbar
 2. Legs to the lugs

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.

9

- Insert the crossbar rubber on top of the crossbar
- Insert the extra crossbar rubber under the front crossbar
- Insert End cap at the both side of the crossbar

Thank you for your purchase.

Please complete your warranty application following correct installation.

TradeMax by Tradesman Roof Racks

Innovation through Inspiration