

# Trademax CrossBar Kit Fitting Instruction

To suit—Mounting Kit to suit Isuzu F Series truck GEN 6 2006 - Current Single Cab 1 bar  
Trademax Cross Bar Kit



TM-INF150-12000

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.




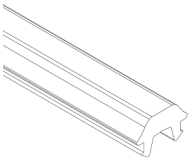
Contact us if any parts appear missing, incorrect, or damaged.





Clean the roof prior to fitting the roof racks.




## Tools Required:

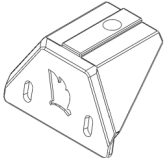- Spanner (13 & 17 mm)
- Hex Key (5mm)
- Silicone/urethane
- Drill bit(5mm) & Rivet Gun
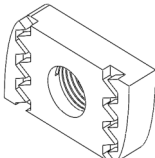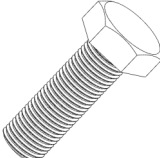
### Kit Content

<u>1</u>	70/100 mm Trademax Leg	
		X2
<u>2</u>	Isuzu Plastic Leg Lug	
		X2
<u>3</u>	Tradesmax Crossbar	
		X1
<u>4</u>	WT Rubber	
		X1
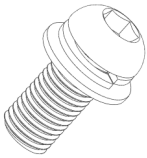
<u>5</u>	M10 Unistrut	
		X2
<u>6</u>	M10 X 30 Hex Bolt	
		X2
<u>7</u>	M10 X Split Washer	
		X2
<u>8</u>	10mm Flat Washer	
		X2

<u>9</u>	M8 X 22 Dacro Black	
		X8
<u>10</u>	8mm Nyloc Nut	
		X4
<u>11</u>	M8 Flat Washer	
		X4

# Trademax CrossBar Kit Fitting Instruction

To suit—Mounting Kit to suit Isuzu F Series truck GEN 6 2006 - Current Single Cab 1 bar  
Trademax Cross Bar Kit




TM-INF0150-12000

## Assemble Lugs to the roof

1

- Unscrew the given screw which is attached to the roof of the vehicle

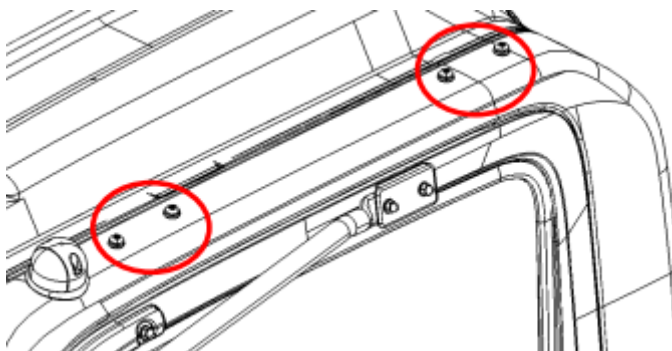

2

- Apply silicone or urethane sealer (natural cure sealants only) under the whole lug and to the holes.
- Install the 2 lugs into the 8mm threads provided in the roof using the fasteners provided. (figure 1)

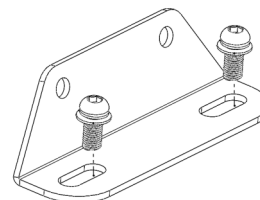


Figure 1

# Trademax CrossBar Kit Fitting Instruction

To suit—Mounting Kit to suit Isuzu F Series truck GEN 6 2006 - Current Single Cab 1 bar  
Trademax Cross Bar Kit




TM-INF150-12000

## Assemble Lugs to Legs

3


- Attach lugs to the roof of vehicle using M8 X 25 Hex Bolt as shown.
- Attach the plastic leg to the lug using M8 Dacro and Nyloc Nut

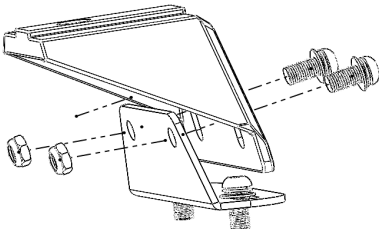

4

- If necessary, apply spacers to the top of the legs to ensure all crossbars are level.
- Attach the channel nuts to the top of leg.
  - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts/ Spacers to the top of legs.


\* Channel nuts to the top as shown in the following diagram

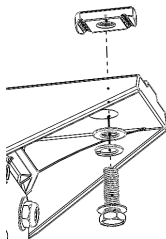

## Assemble the Wedgetail Crossbar to the legs

5

- Place the Trademax Crossbar on the rails in the desired position
- Ensure the crossbar placed in the correct orientation
- Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

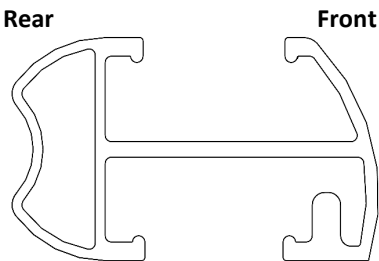

6

- Centralize the rack side to side (using a tape measure) on the Commercial-Max rails.

# Trademax CrossBar Kit Fitting Instruction

To suit—Mounting Kit to suit Isuzu F Series truck GEN 6 2006 - Current Single Cab 1 bar  
Trademax Cross Bar Kit



TM-INF150-12000

7

- Fully tighten remaining bolts in the following order:
  1. Legs to Crossbar
  2. Legs to the lugs

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.  
Do not overtighten, this will preserve the spring washers.

8

- Insert the crossbar rubber on top of the crossbar
- Insert the extra crossbar rubber under the front crossbar
- Insert End cap at the both side of the crossbar

Thank you for your purchase.

Please complete your warranty application following correct installation.

TradeMax by Tradesman Roof Racks

Innovation through Inspiration