Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.


Tools Required:

- Spanner (13mm,17 mm)
- Hex Key(5mm)
- Tape measure
- Silicone/urethane sealer

Kit Content

1


Kia PV5 FRONT Left and Right Rails

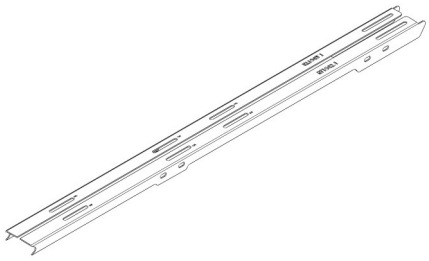

x1

2


Kia PV5 REAR Left and Right Rails

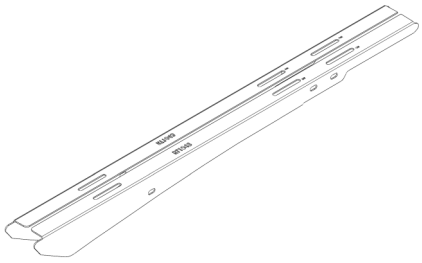

x1


4

Fasteners

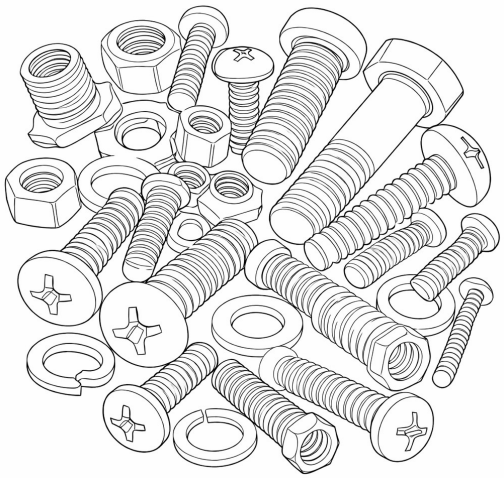

3

TradeMax Crossbars

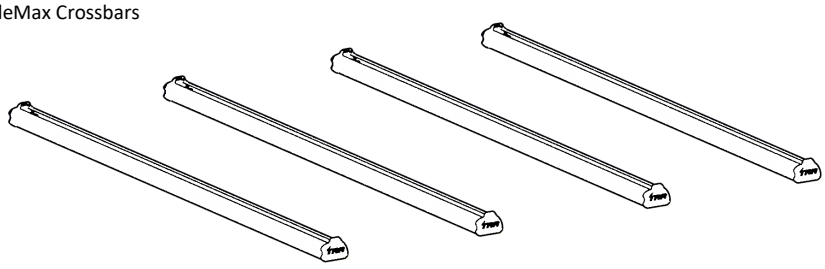


x4

COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU

Assemble rails to roof

1

- **Remove the 3 torx screws that reside toward the front of the roof of either side**

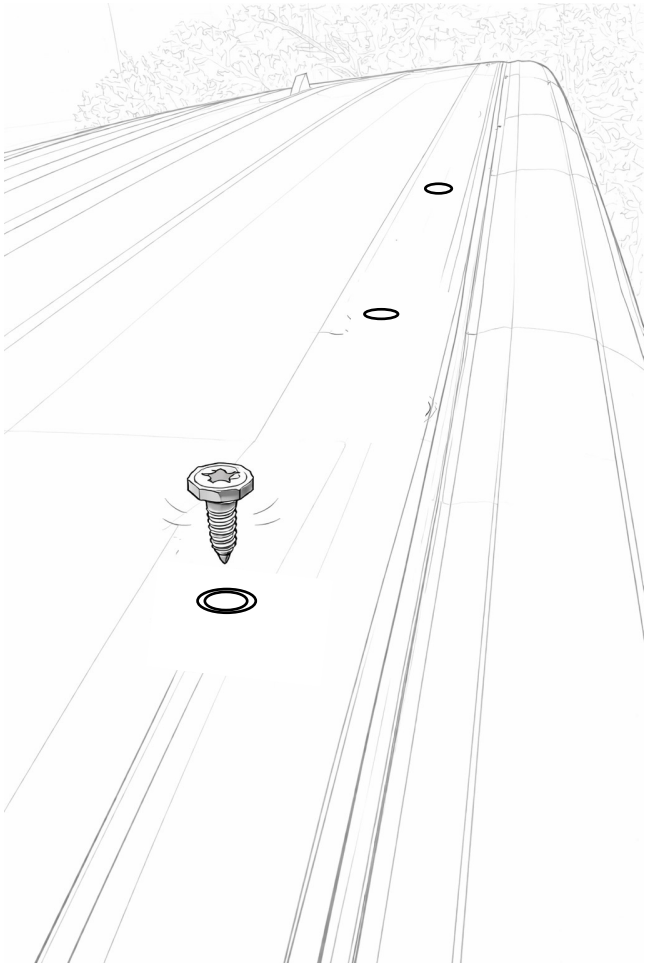

2


- **Apply silicone or urethane sealer (natural cure sealants only) to all the holes.**

COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU

Assemble Lugs to the roof

3

- **Position the lugs as shown over the bolt holes and screw in the 8mm dacro bolts provided.**

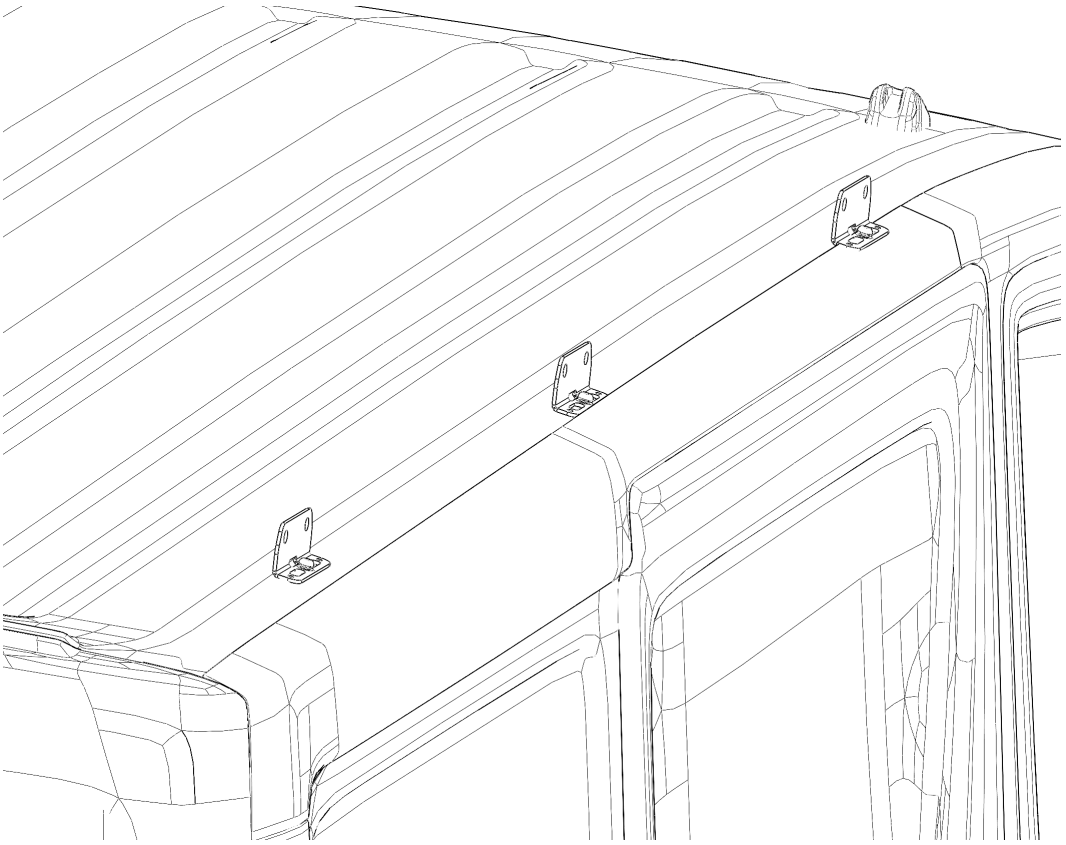


COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU

Assemble rails to roof

4

- **Position the rail as shown and secure rails to mounting lugs using the M10 Dacro and M10 Nyloc Nuts (hand tight).**

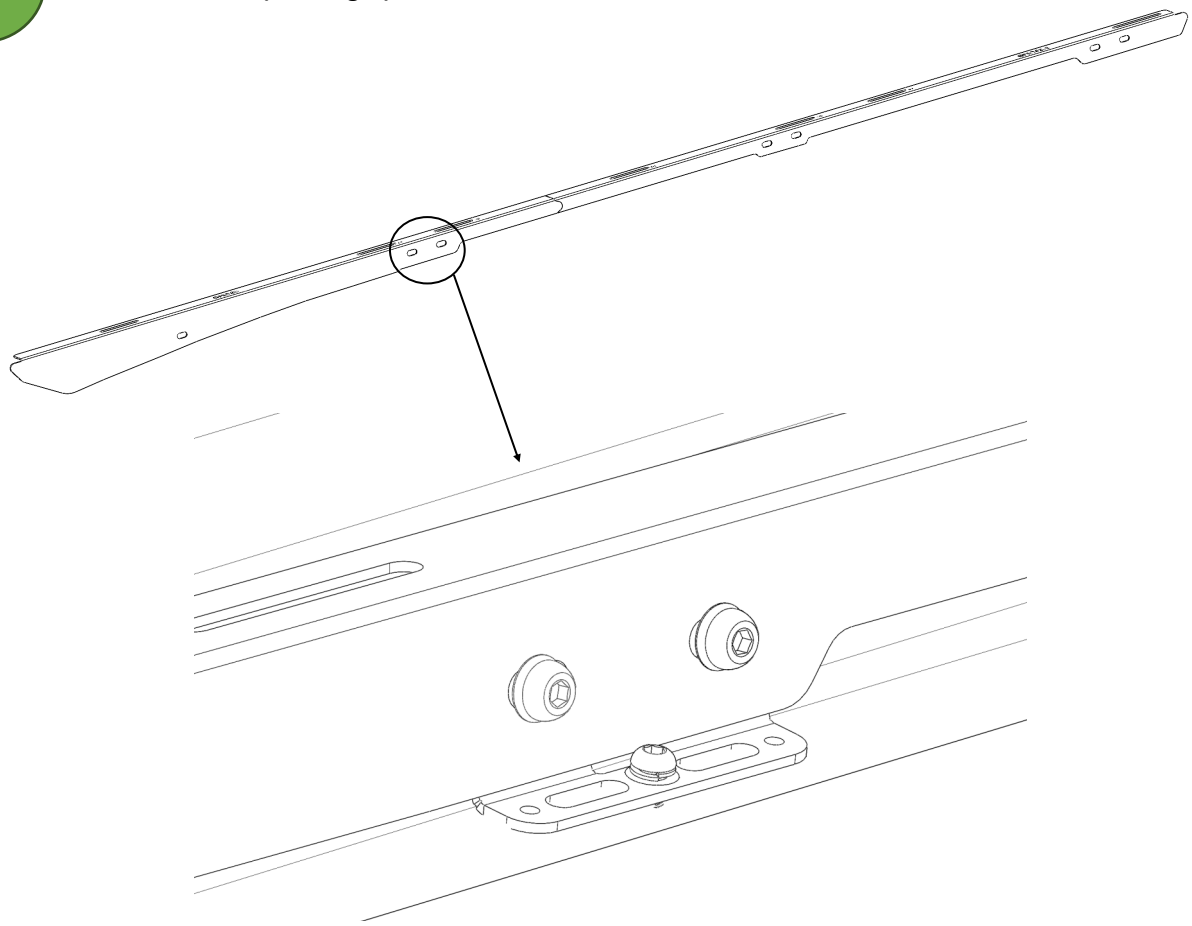

5

- **After fixing the rails to the three middle and front lugs, position the smaller lug in the roof ditch that runs cross-wise at the rear of the vehicle (figure 1).**
- **Trim and chisel out the mastic in the roof ditch either side of the lug (figure 2 & 3) to allow the lug to be riveted directly to metal surface (drill rivet holes 5mm). Seal holes and rivet heads with neutral cure sealant to prevent water ingress.**

Figure 1

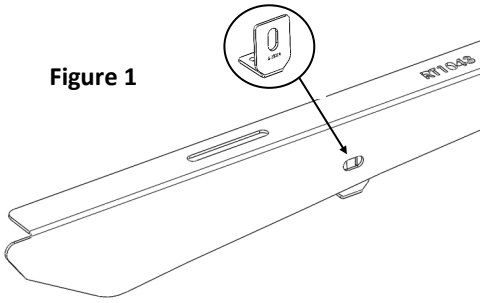


Figure 2


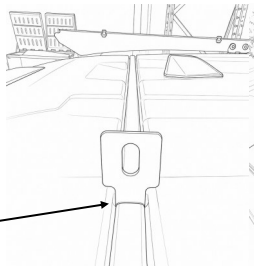


Figure 3

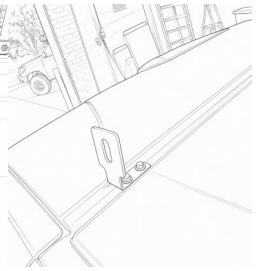


COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU

Assemble the Wedgetail Trade Platform to the rails


6

- **Fully tighten the rail to all four lugs**

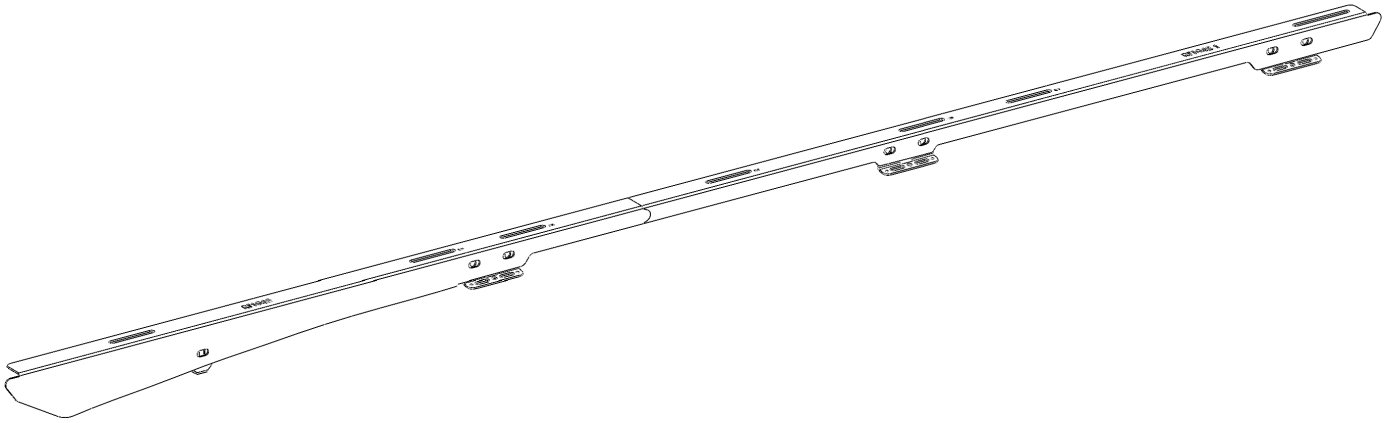

7

- **Place the TradeMax Crossbars on the rails, then spin the channel nuts 90 degree in the channel**

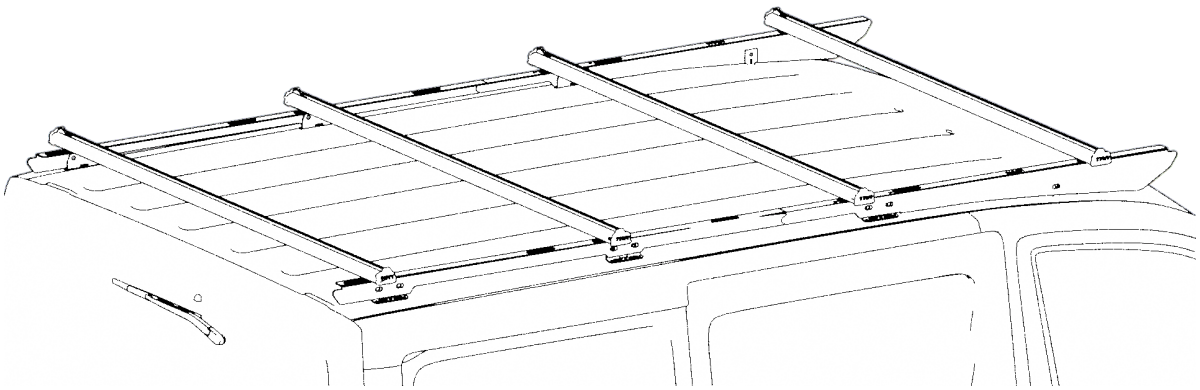

NOTE– Align the crossbars to the suitable position and clearance for roller if fitted

20-30mm from the tailgate to the back of the rack or roller is sufficient

COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU

8

- **Fully tighten remaining bolts**

NOTE-Ensure the channel nuts are 90 degrees to the channels.

Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration

COPYRIGHT TRADESMAN ROOF RACKS |WEDGETAILRACK.COM.AU