

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Peugeot Expert LWB 2016-On

RW-PEL19-2714



Congratulations on the purchase of your Australian made Wedgetail Trade Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Hex Key (5mm)

Kit Content

1

Wedgetail Trade Peugeot Expert LWB Left Rail



x1

2


Wedgetail Trade Peugeot Expert LWB Right Rail



x1


3

Wedgetail Trade Platform

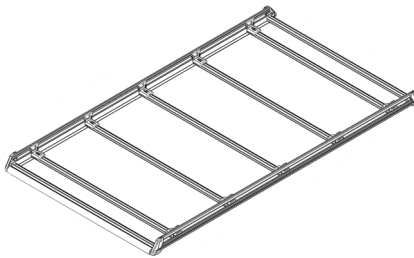

x1


4

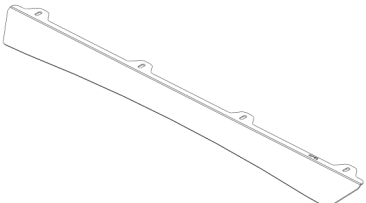

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 20 Hex Bolt	4
8mm Channel Nut	4
M8 Flat Washer	4
M8 Zinc Split Washer	4
M8 X 40 Flat Washer	4

5


M8 X 16 Dacro Black

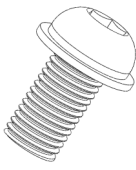

x10

6


M10 X 25 Stainless Hex Bolt

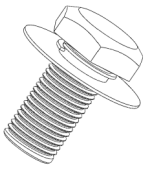

x8

7

M10 Unistrut

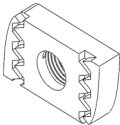

x8

8


8mm Flat Washer



x10

9

M8 Wiz Nut

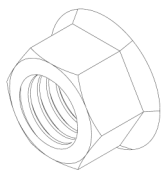

x10

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Peugeot Expert LWB 2016-On

RW-PEL19-2714




Assemble rails to roof

1

- Fit rails to the vehicle using 8mm bolt, washer and wiz nut.


NOTE: Point the arrow on the rail towards windscreen

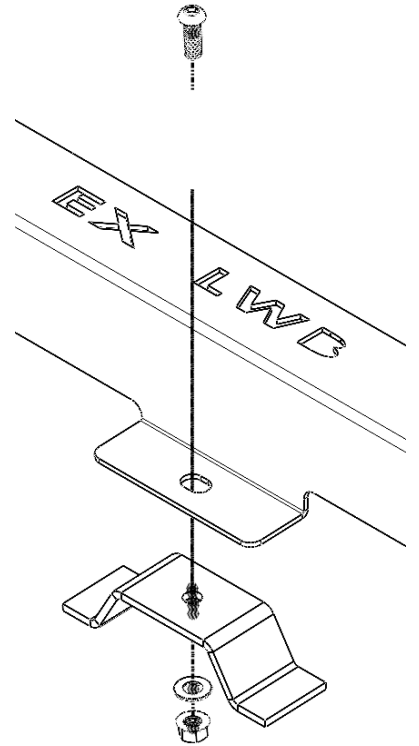

2

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

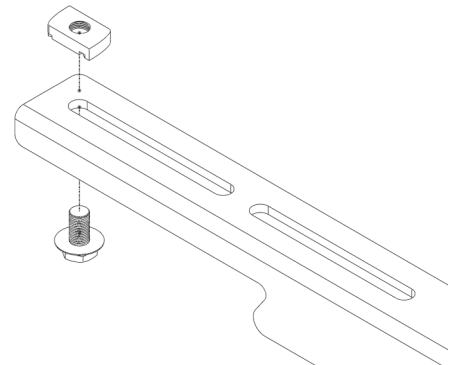

NOTE-Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Tailgate Version

Rear Slot—Barn Door Version

Wedgetail Trade Rails and Platform Fitting Instruction

To suit—Peugeot Expert LWB 2016-On

RW-PEL19-2714



Assemble the Wedgetail Trade Platform to the rails

3

- Place the Wedgetail Trade Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

NOTE– Align the rack to the suitable position and clearance for roller if fitted



Around 20-30mm from the tailgate to the back of the rack or roller is sufficient

4

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

5

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector using M8 hardware as shown below

NOTE–Ensure the channel nuts are 90 degrees to the channels.




Check fastenings are firmly tensioned at regular intervals.
Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

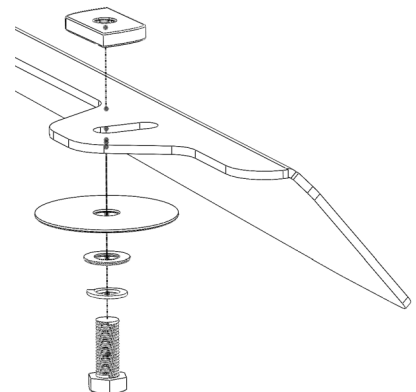

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail Trade by Tradesman Roof Racks

Innovation through Inspiration