

3 Bar Trademax CrossBar Kit Fitting Instruction

To suit—Volkswagen ID. Buzz 2025

TM-VIB-31400



Congratulations on the purchase of your Australian made Trade-Max Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.



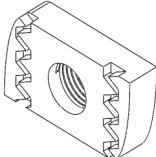

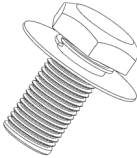
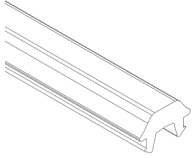
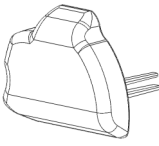
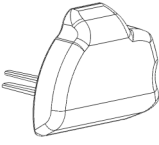
Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (17 mm)
- Allen Key (5mm)
- Silicone/urethane sealer

Kit Content
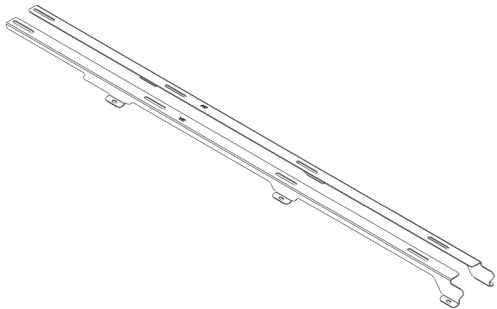
<u>1</u>	Wedgetail Trade Volkswagen ID Buzz Left & Right Rails		X1
<u>4</u>	M8 x 20 Hex Bolt		X6
<u>5</u>	M10 Unistrut		X6
<u>2</u>	Tradesmax Crossbar		X3
<u>6</u>	M10 X 20 Hex Bolt		X6
<u>3</u>	WT Rubber		X3
<u>7</u>	Left End Cap		X3
<u>8</u>	Right End Cap		X3

3 Bar Trademax CrossBar Kit Fitting Instruction

To suit—Volkswagen ID. Buzz 2025

TM-VIB-31400



Assemble Rails to roof

1


- Remove 3 Factory Bolts from both sides of the roof

2

- Apply silicone or urethane sealer (natural cure sealants only) to all the holes.

3


- Mount the supplied rails to the roof using the 8mm bolts and washers supplied

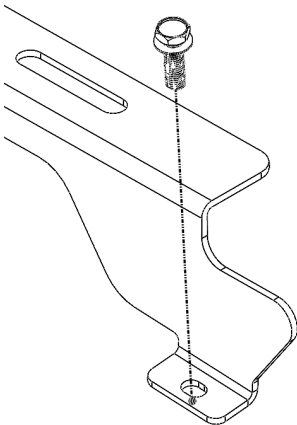

4

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

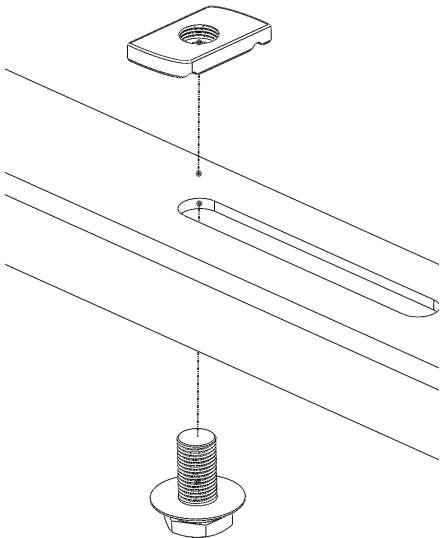

NOTE-Ensure attach the channel nuts and bolt to correct mounting slot.



Front Slot—Tailgate Version

Rear Slot—Barn Door Version

3 Bar Trademax CrossBar Kit Fitting Instruction

To suit—Volkswagen ID. Buzz 2025


TM-VIB-31400



Assemble the Crossbar to the rails

5

- Place the Trademax Crossbar on the rails in the desired position
- Ensure the crossbar placed in the correct orientation
- Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

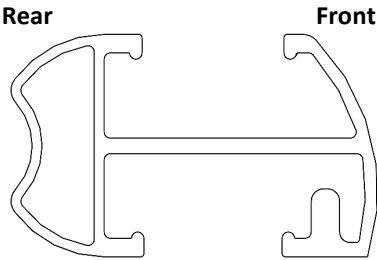

6

- Fully tighten remaining bolts in the following order:
 1. Rails to Crossbar
 2. Rails to the roof

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

7

- Insert the crossbar rubber on top of the crossbar
- Insert End cap at the both side of the crossbar

Thank you for your purchase.

Please complete your warranty application following correct installation.

TradeMax by Wedgetail Rack

Innovation through Inspiration