

Wedgetail Rails and Platform Fitting Instruction

To suit Mode 4x4 Canopy



WT-CMD-1614

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.










Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Drill bit (9mm) & Drill Stop
- Silicone/urethane sealer


Kit Content

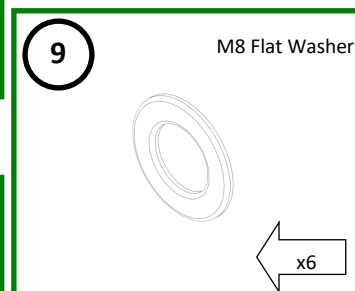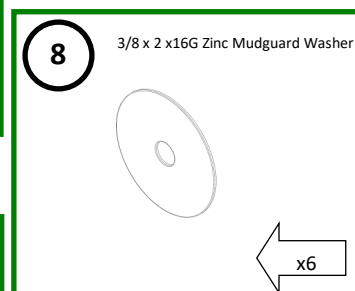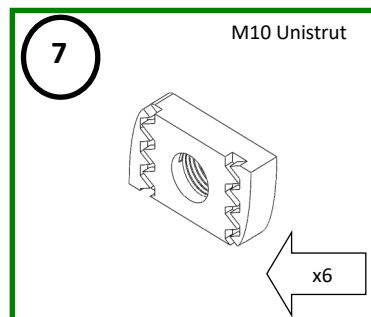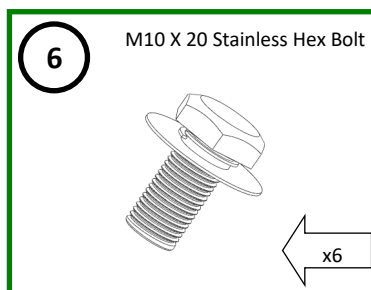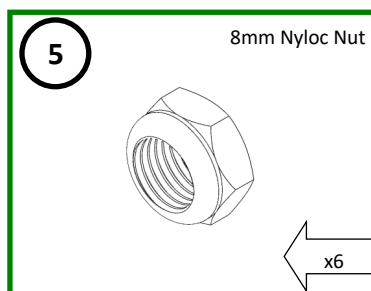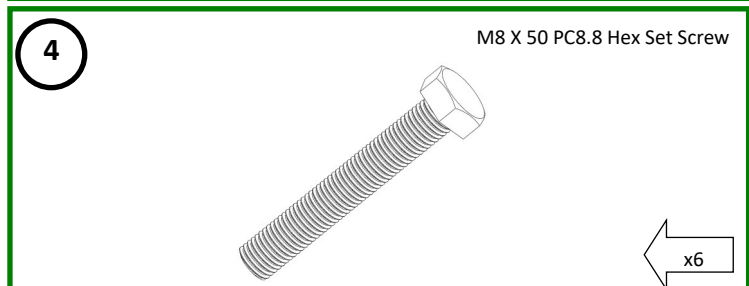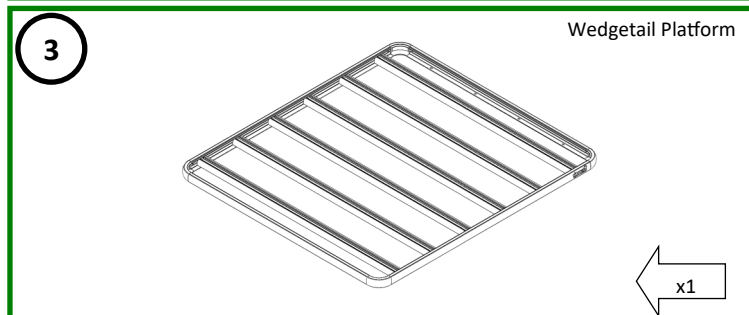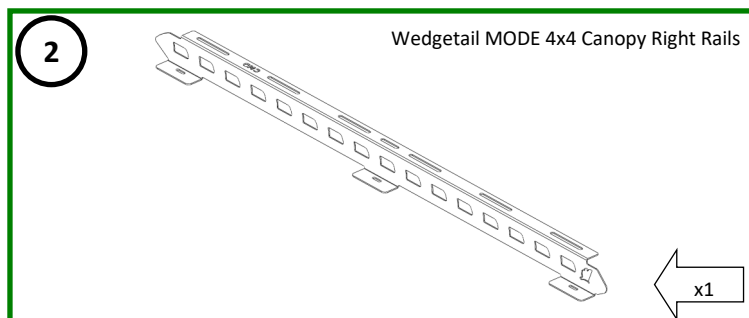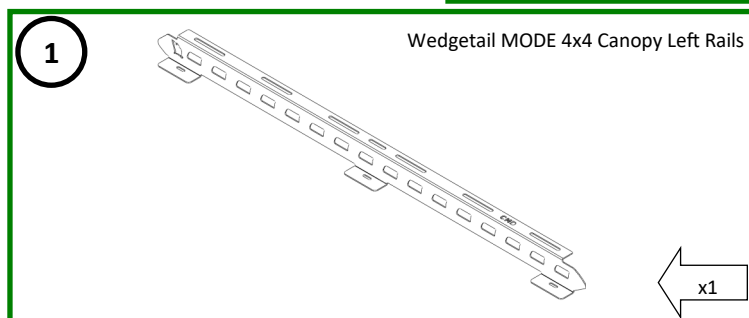

Locating the mounting position

1

- Follow the below picture and locate the mounting position. Mark the rail mounting holes with marker.
- Place the wedgetail rails on the roof and check all the marked holes are in the correct position.
- Drill the hole with 9mm drill bit and ensure that the thread of M8 bolts can pass through the hole.

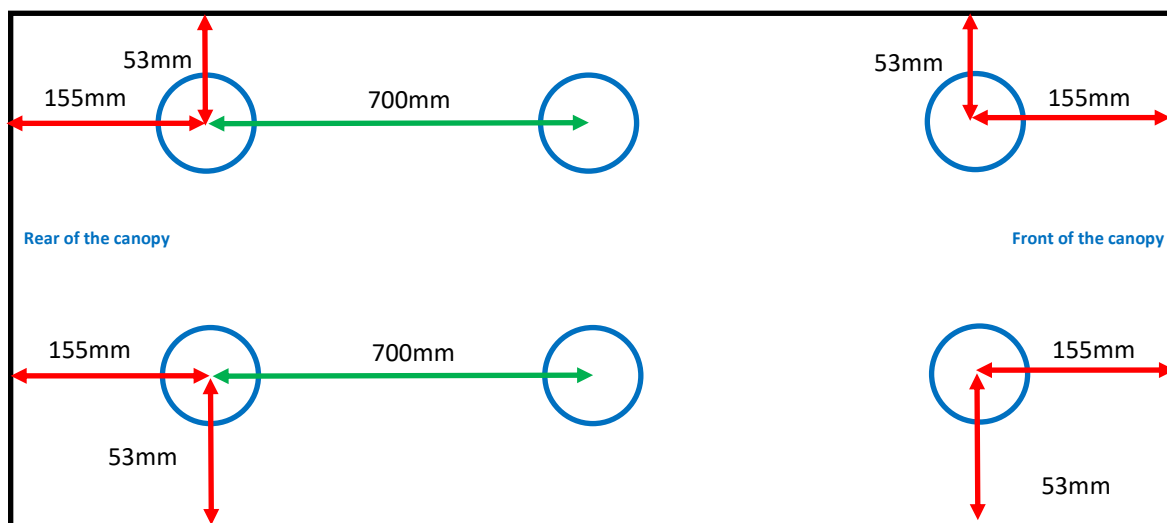


2

- Clean the area of any debris
- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

Assemble rails to roof

3

- Fit rails to the vehicle using 8mm hardware (wedgetail logo facing to the front of vehicle)

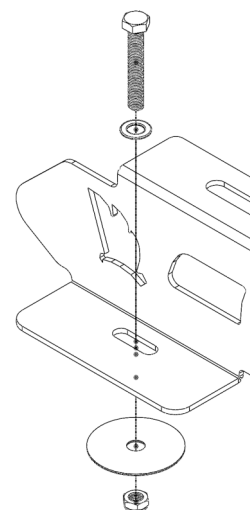

Wedgetail Rails and Platform Fitting Instruction


To suit Mode 4x4 Canopy



WT-CMD-1614

4

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.
- * Channel nuts to the top as shown in the following diagram

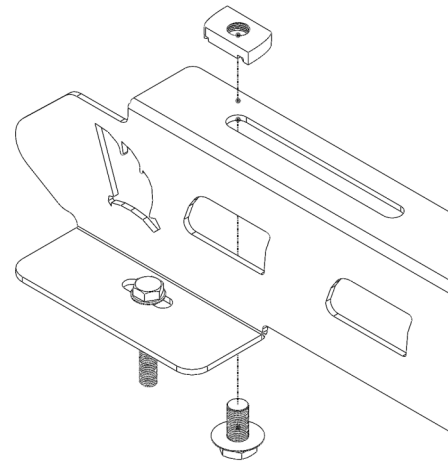

Assemble the Wedgetail Platform to the rails

5

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration