

Wedgetail Rails and Platform Fitting Instruction

To suit Maxliner Venture Canopy



WT-CMVBT-1813

WT-CMVFR-1813

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.













Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Hex key (4mm & 6 mm)
- Spanner (10mm, 13mm & 17mm)

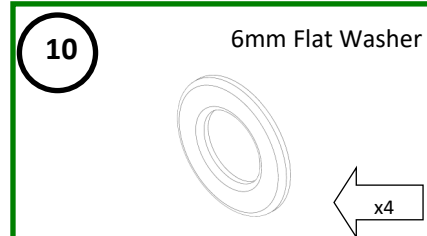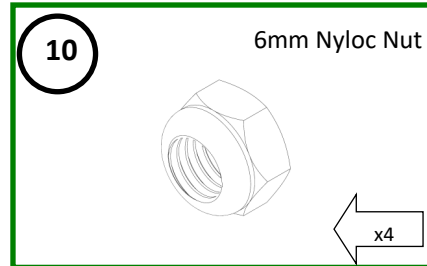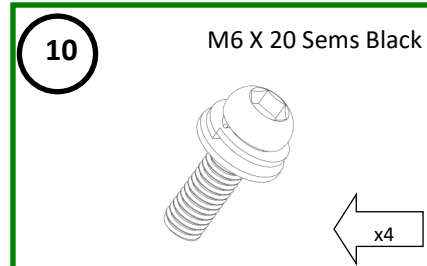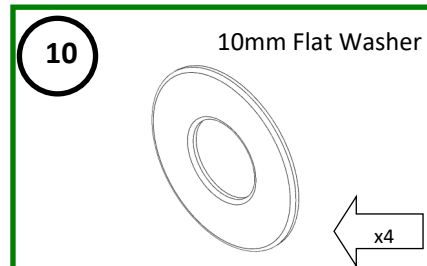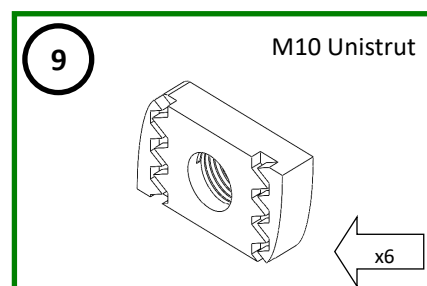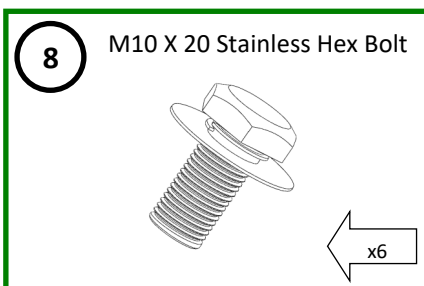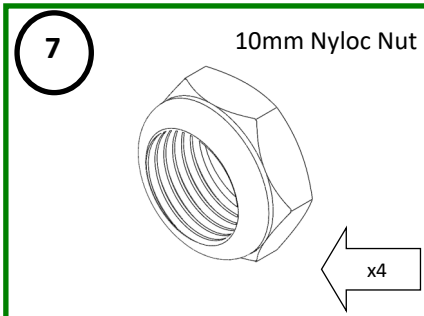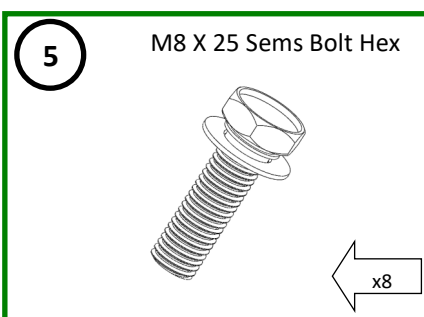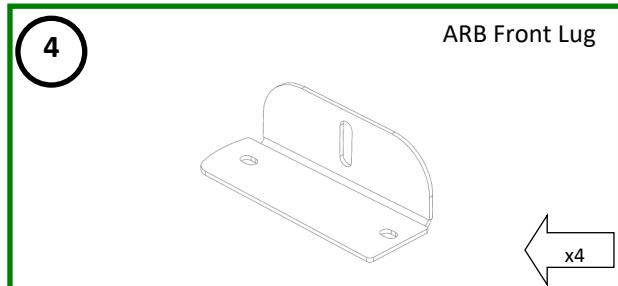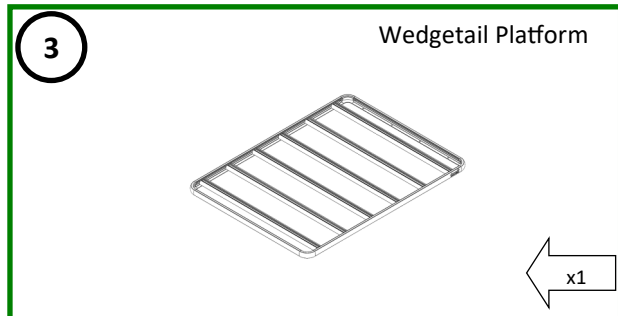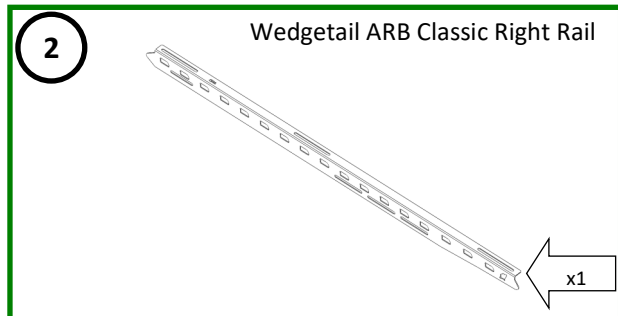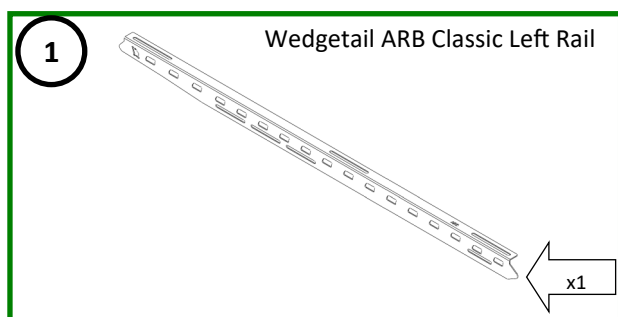

Wedgetail Rails and Platform Fitting Instruction

To suit Maxliner Venture Canopy




WT-CMVBT-1813

WT-CMVFR-1813

Assemble Lugs to roof

1

- Locate the factory mounting hole and the capture nuts
- Place the lug to the roof and fit with M8 x 25 Sems Bolt Hex

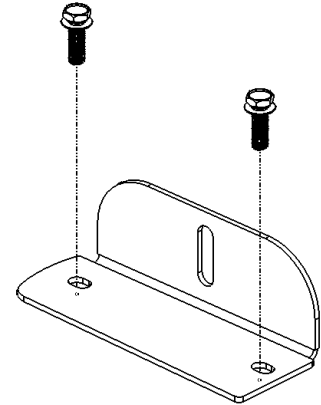


2

- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

Assemble rails to lugs


3

- Fit rails to the vehicle using 10mm hardware (wedgetail logo facing to the front of vehicle)

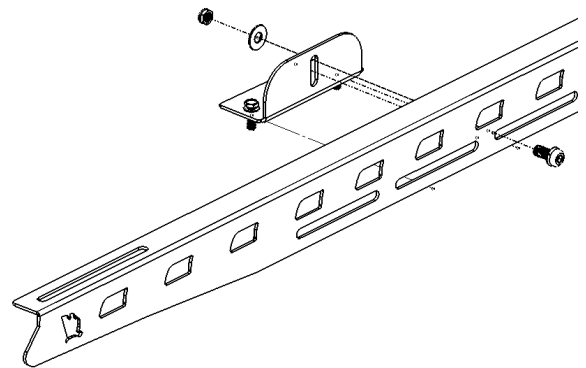

4

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

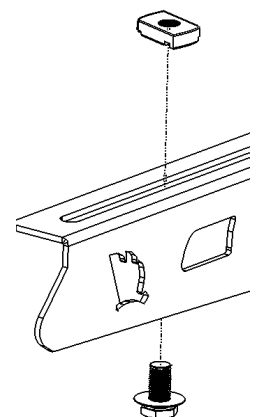

Wedgetail Rails and Platform Fitting Instruction

To suit Maxliner Venture Canopy




WT-CMVBT-1813

WT-CMVFR-1813

5

- Drill holes on the rails and lugs with drill bit (7mm)
- Fit M6 bolts and nuts to the holes to prevent the rail to drop down under heavy pressure

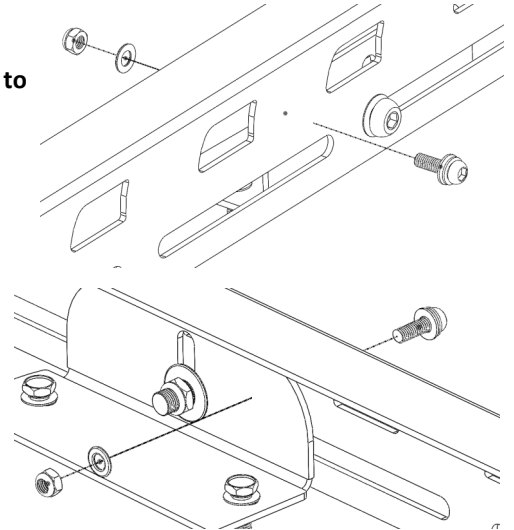

Assemble the Wedgetail Platform to the rails

6

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

7

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

8

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration