

Wedgetail Rails and Platform Fitting Instruction

To suit ARB Ascent Canopy



WT-FRASC-14135

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

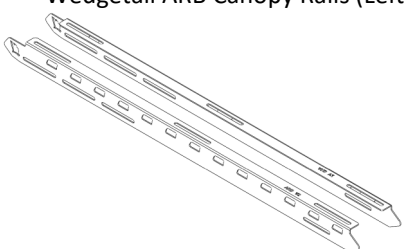
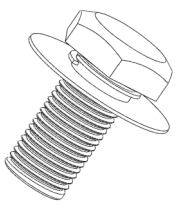
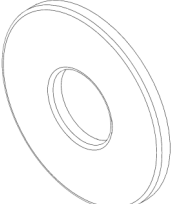
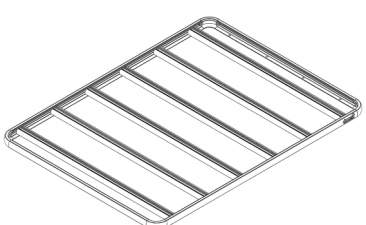
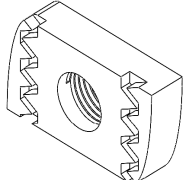
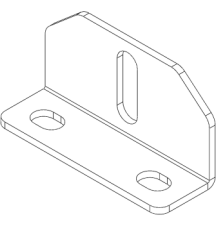
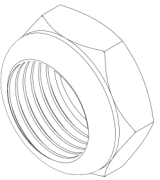
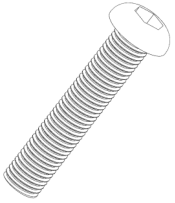
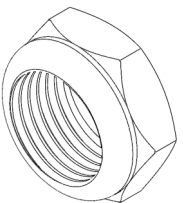
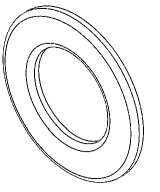
Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13 & 17mm)
- Hex Key (5 & 6mm)
- Silicone/urethane sealer

Kit Content

1 Wedgetail ARB Canopy Rails (Left & Right)  x1	5 M10 X 20 Stainless Hex Bolt  x6	9 M10 X Mud Washer  x4
2 Wedgetail Platform  x1	6 M10 Unistrut  x6	10 8mm Flat Washer  x8
3 ARB Ascent Mounting Lug Front  x4	7 M10 Dacro Sems Dome Head  x4	11 8mm Nyloc Nut  x8
4 M8 X 40 Button Screw  x8	8 10mm Nyloc Nut  x4	12 M8 Flat Washer  x8

Assemble Lugs to roof

1

- Ensure Internal frames fitted (ARB internal frame system must be installed before the wedgetail Rack)
- Find dimples in roof

2

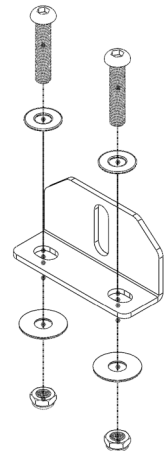
- Drill holes and insert spacers as per ARB instruction

3

- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

4


- Place the lugs to the roof.
- Mount each lugs thorough the roof into ARB internal frame system using M8 Bolts , washers & Nyloc Nut



Assemble rails to lugs

5

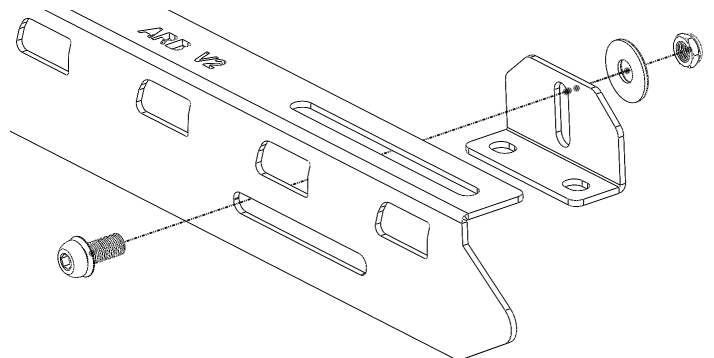- Attach the rails to lugs using M10 Dacro Bolt and Nyloc Nut



Wedgetail Rails and Platform Fitting Instruction

To suit ARB Ascent Canopy

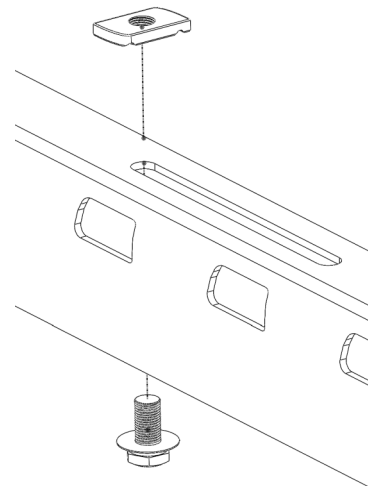


WT-FRASC-14135

6

- Attach the channel nuts to the top of rail.
- Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram



Assemble the Wedgetail Platform to the rails

7

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

8

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

9

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration