

Wedgetail Rails and Platform Fitting Instruction

To suit—Ford Transit VO EXLWB 2014-On High Roof



WT-FT350E-3316

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.


Tools Required:

- Spanner (10mm,13mm,17 mm)
- Silicone/urethane sealer

Kit Content

1


Wedgetail Ford Transit VO EXLWB 14-On Front Left & Right Rails

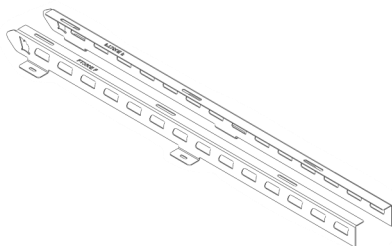

x1

2


Wedgetail Ford Transit VO EXLWB 14-OnLWB Rear Left & Right Rails

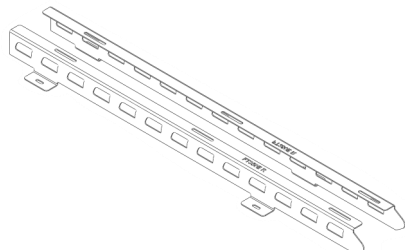

x1


3

Wedgetail Platform

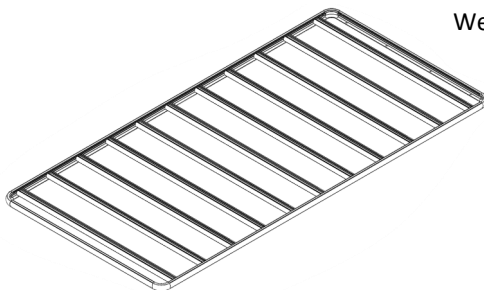

x1


4

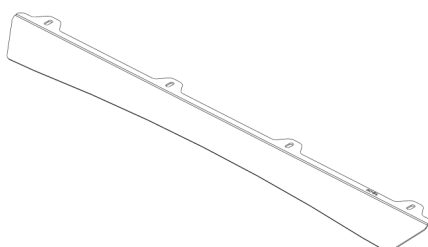

Wedgetail Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 25 Sems Hex Bolt	4
8mm Nyloc Nut	4
M8 Flat Washer	4

5


M8 X 25 Sems Bolt Hex

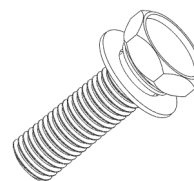

x8

8


M10 X 20 Stainless Hex Bolt

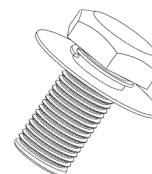

x12

7

M10 Unistrut

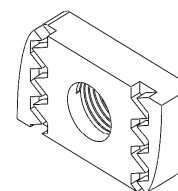

x12

Wedgetail Rails and Platform Fitting Instruction

To suit—Ford Transit VO EXLWB 2014-On High Roof



WT-FT350E-3316

Assemble rails to roof

1



Expose 4 roof factory holes per sides by removing rubber grommets from roof.

2

Apply silicone or urethane sealer (natural cure sealants only) to all the holes.

3


Supplied rails are in two pieces, F and R (Front and rear respectively). Mount each rail on the roof using 8mm bolts & washers.

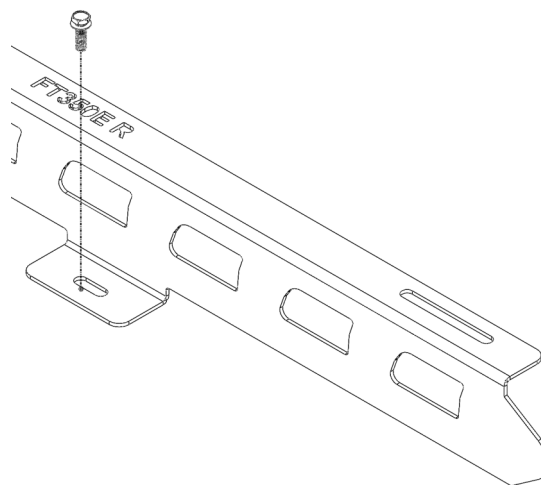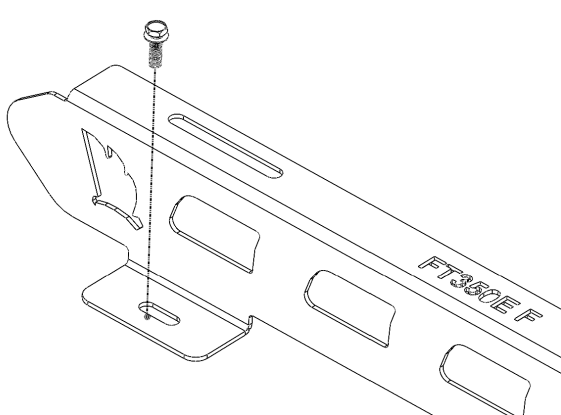

4

- **Attach the channel nuts to the top of rail.**
 - Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

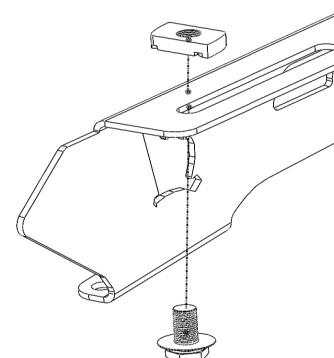

Wedgetail Rails and Platform Fitting Instruction

To suit—Ford Transit VO EXLWB 2014-On High Roof



WT-FT350E-3316

Assemble the Wedgetail Platform to the rails

5

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration