

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.


Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Hex Key (4mm,6mm)
- Spanner (10mm, 13mm & 17 mm)
- Silicone/urethane sealer

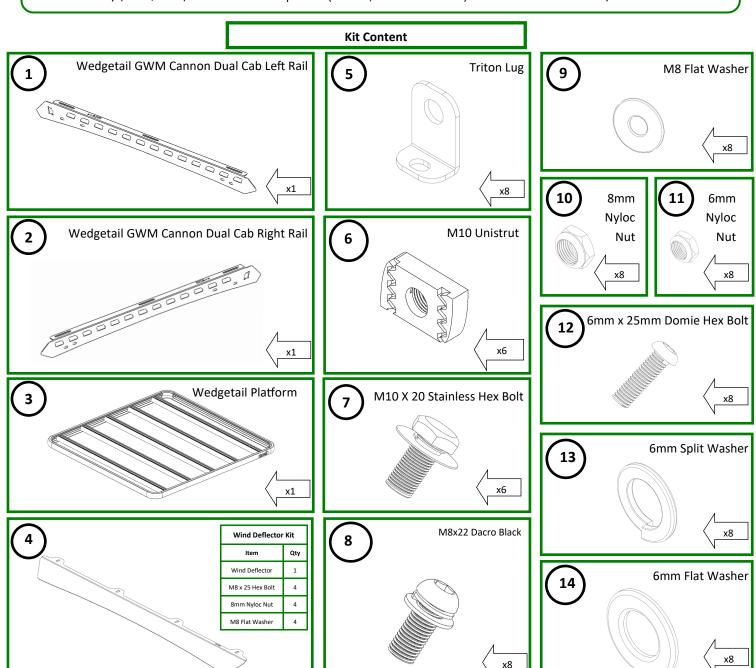



Factory Rails removal

NOTE- Hood lining drop required.



1


• Use trim levers and required tools to carefully remove pillar covers/ sun visors/ grab handles and any other securement clips as required to access the underside of rail fastenings (4 Points of attachment)

2

- From inside the cabin, locate the nuts securing bolts securing each rail through.
- Use a socket to remove all nuts/bolts from beneath, keeping any sealing washers or grommets for reinstallation or sealing.

3

Remove the factory rails

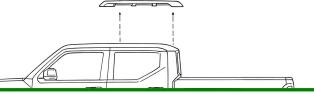

4

 Apply silicone or urethane sealer (natural cure sealants only) to the factory roof mounting holes.

5

 Attach lugs to the roof of vehicle using 6mm hardware and as shown.






Assemble rails to lugs




Attach Rails to lugs using 8mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the picture.

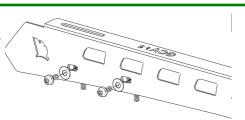

7

- Attach the channel nuts to the top of rail.
 - Fit 10mm Bolt / Split washer / Flat washer /
 Channel Nuts to the top of rail.
- * Channel nuts to the top as shown in the following diagram

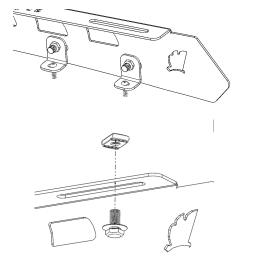



Assemble the Wedgetail Platform to the rails

- 8
- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.
- 9
- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

10

- Fully tighten remaining bolts in the following order:
 - 1. Rails to the lugs
 - 2. Rails to platform
 - 3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration