

# Wedgetail Rails and Platform Fitting Instruction

To suit Mercedes Benz Vito MWB Van



WT-MVTM-2814

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Clean the roof prior to fitting the roof racks.

## **Tools Required:**

- Spanner (10, 13 & 17mm)

## **Kit Content**


1

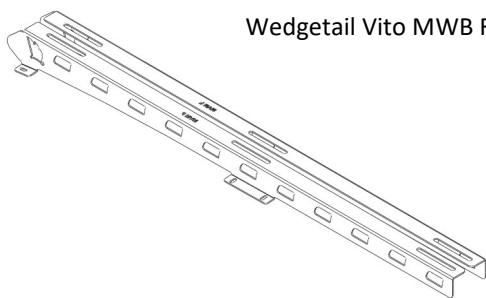

Wedgetail Vito MWB Front Left & Right Rails

x1


2

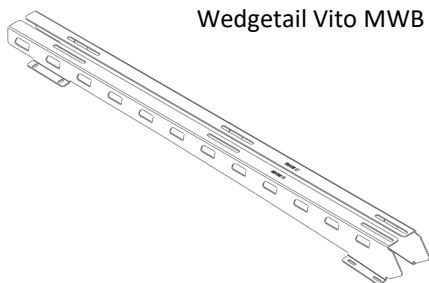

Wedgetail Vito MWB Rear Left & Right Rails

x1


3

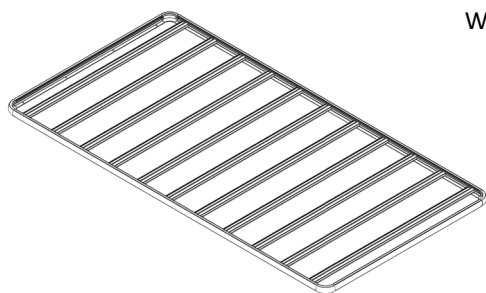

Wedgetail Platform

x1


4

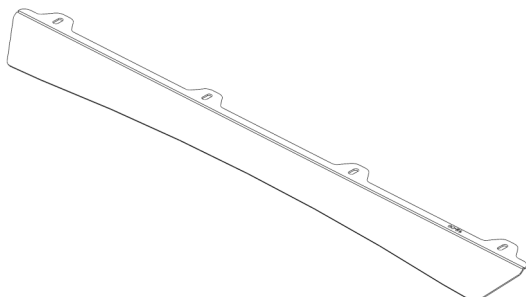

Wind Deflector Kit	
Item	Qty
Wind Deflector	1
M8 x 25 Hex Bolt	4
8mm Nyloc Nut	4
M8 Flat Washer	4

5


M6 X 12 Hex Sems

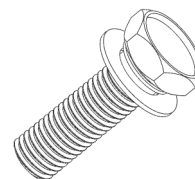

x14

6


M10 X 20 Stainless Hex Bolt

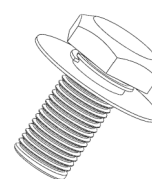

x12

7

M10 Unistrut

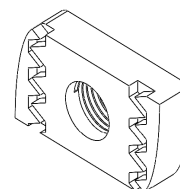

x12

# Wedgetail Rails and Platform Fitting Instruction

To suit Mercedes Benz Vito MWB Van




WT-MVTM-2814

## Removing Rubber mould

1

- Remove 7 OEM plastic caps per sides in the roof channel shown to expose the factory mounting points.

(Note: Except the plastic caps which are close to the windscreen)

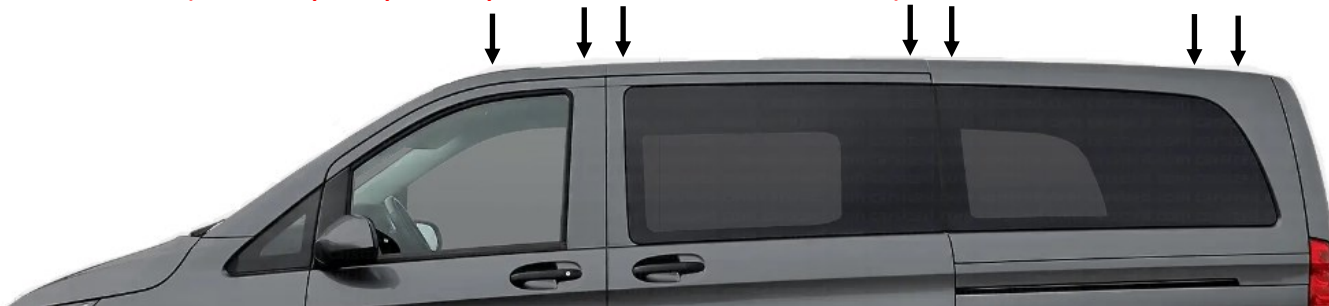


2

- Apply silicone on all the roof channel mounting holes to prevent any water ingress.

## Assemble rails to roof

3


- Fit rails to the vehicle using 6mm hardware (wedgetail logo facing to the front of vehicle)

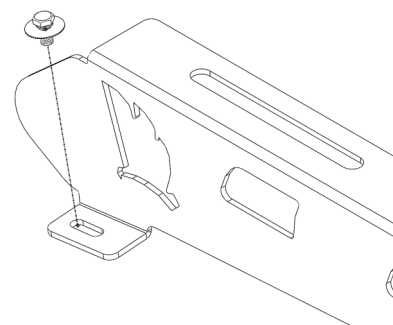

4

- Attach the channel nuts to the top of rail.
  - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.

\* Channel nuts to the top as shown in the following diagram

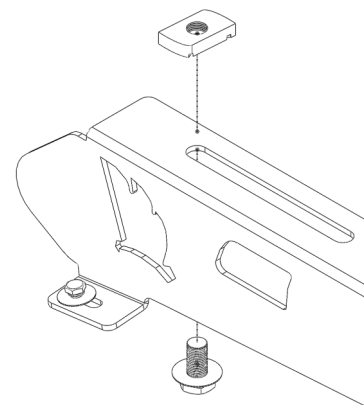

# Wedgetail Rails and Platform Fitting Instruction

To suit Mercedes Benz Vito MWB Van



WT-MVTM-2814

## Assemble the Wedgetail Platform to the rails

5

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector.

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



**Fitting Note:**

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration