

Wedgetail Rails and Platform Fitting Instruction
To suit Toyota Landcruiser 78 Troopcarrier 1985 – On



WTM-T78T-2614

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.


Please read and follow the instructions carefully to ensure correct fitment.
 Contact us if any parts appear missing, incorrect, or damaged.
 Clean the roof prior to fitting the roof racks.

Tools Required:

- Spanner (13mm,17 mm)
- Hex key (5 mm)

Kit Content


1

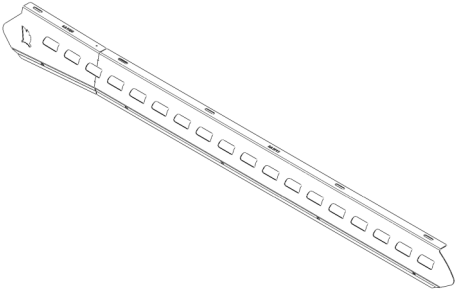

Wedgetail Toyota Landcruiser 78 Left Rail

x1


2

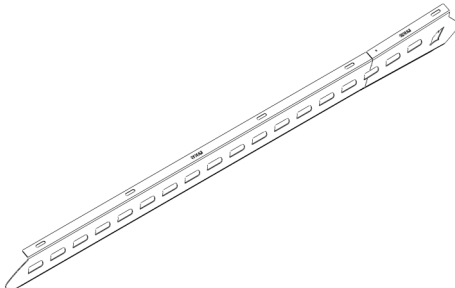

Wedgetail Toyota Landcruiser 78 Right Rail

x1


3

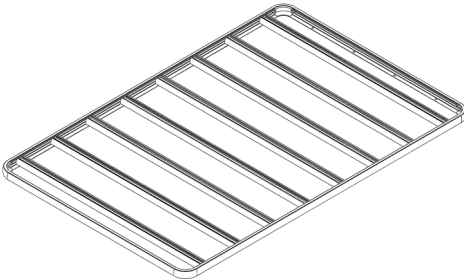

Wedgetail Platform

x1

4

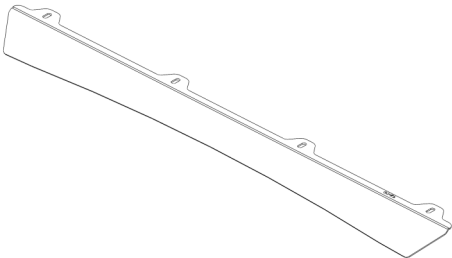

Wedgetail Wind Deflector Kit

Item	Qty
Wind Deflector	1
M8 x 25 Sems Hex Bolt	4
8mm Nyloc Nut	4
M8 Flat Washer	4

x1

5

Refer to Hardware Kit for a list of fasteners and other relevant parts

Wedgetail Rails and Platform Fitting Instruction


To suit Toyota Landcruiser 78 Troopcarrier 1985 – On



WTM-T78T-2614


1

- Using two 6mm sems, bolt the two matching rail sides to each other in the provided holes
- Bolt the connecting plate to the inside of the rails, lined up with the hole and slot

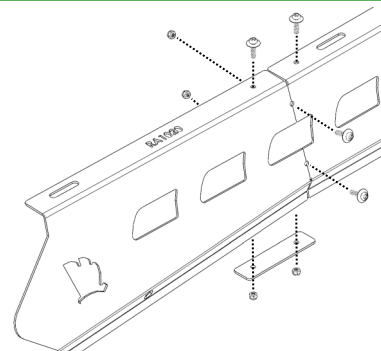


2

- Put on the "C" rubber gutter strip on the bottom of the rails to avoid scratching the gutter. This will need to be cut to length.

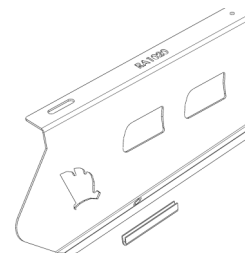


3

- Cut the foam tape to size of clips then place the foam tape on the back of the clips.

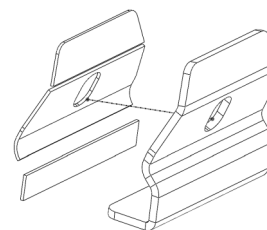

4


- Insert M8 Wiz Nuts from the back of the rails and fix the clips loosely using M8 bolts to the outside of the rails.

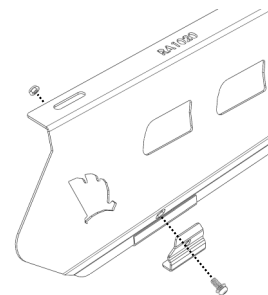

5

- **Attach the channel nuts to the top of rail.**
 - Fit 10mm Bolt / Split washer/ Flat washer / Channel Nuts to the top of rail.
 - Leave these bolts loose so the rail can be slid from side to side during the installation to the roof.

* Channel nuts to the top as shown in the following diagram

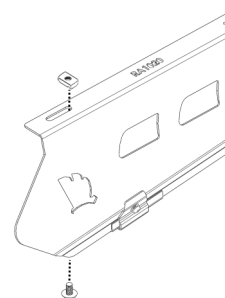

Wedgetail Rails and Platform Fitting Instruction

To suit Toyota Landcruiser 78 Troopcarrier 1985 – On



WTM-T78T-2614

Assemble the Wedgetail Platform to the rails

5

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle)
- **Recommendation:** lining the back of the platform up with the back of the roof line.
- Twist clips to under the gutter and hand tighten.
- Spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

6

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

7

- Fully tighten remaining bolts in the following order:
 1. Rails to the lugs
 2. Rails to platform
 3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration