

Wedgetail Accessory Aerial Mount Fitting Instructions

To Suit The Ford F-150 2021—Current



WTA-FF150AM

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.


Contact us if any parts appear missing, incorrect, or damaged.

Tools Required:


- Handheld Ratchet
- 10mm, 14mm socket
- 4mm Hex Key
- Razor Blade
- Angle Grinder

Kit Content


1 Top Mount

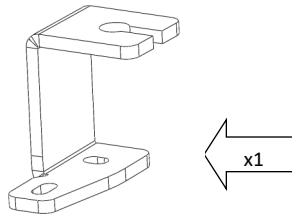

2 Bottom Mount

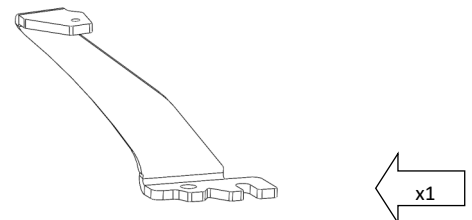

3 M6 Dome Screw

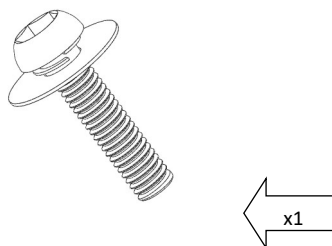

Wedgetail Accessory Aerial Mount Fitting Instructions


To Suit The Ford F-150 2021—Current



WTA-FF150AM


1

- Open the bonnet, pop the plastic gutter trim and locate the hinge on the passenger side

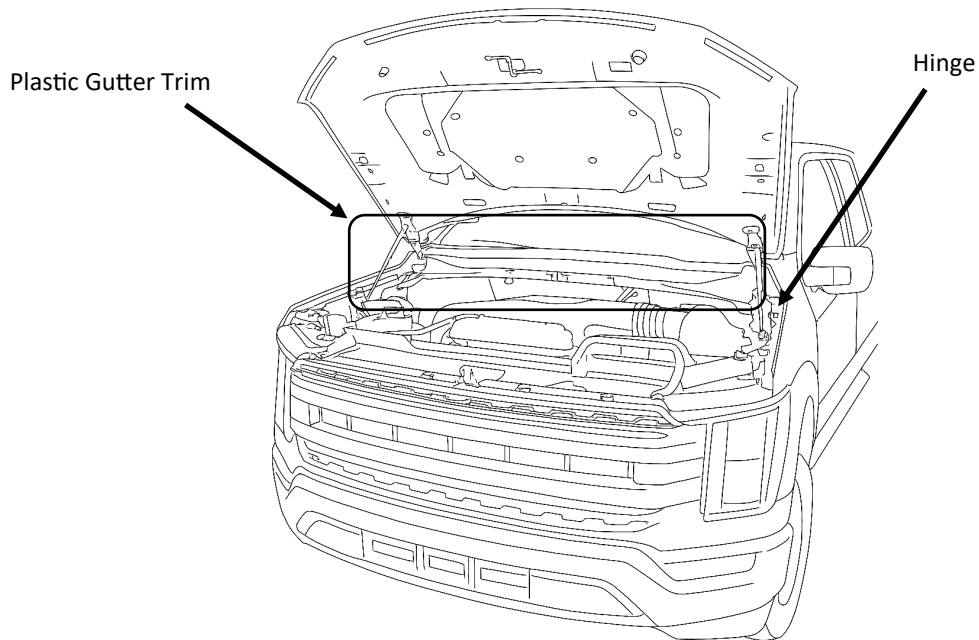

2

- Loosen the rear hinge bolt so you can fit the 5mm bottom mount under the bolt

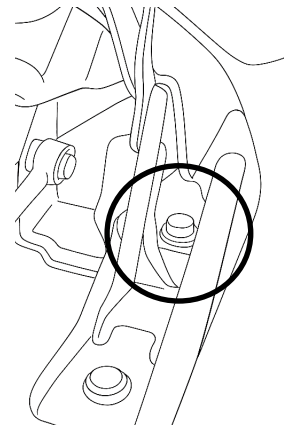

Wedgetail Accessory Aerial Mount Fitting Instructions



To Suit The Ford F-150 2021—Current



WTA-FF150AM


3

- Slide the Bottom Mount into position under the bolt and hold firm against the bonnet hinge

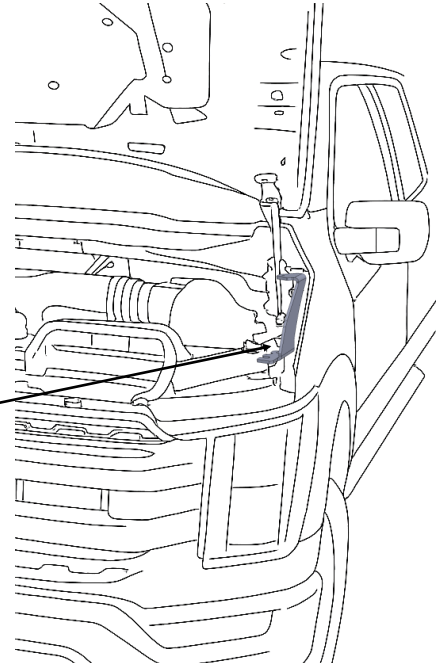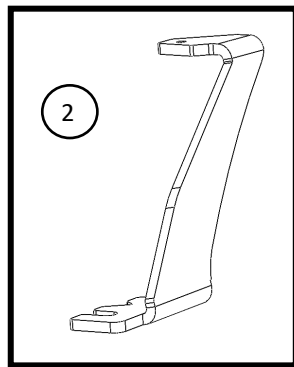

4

- Tighten the rear hinge bolt solidifying the mount in place.

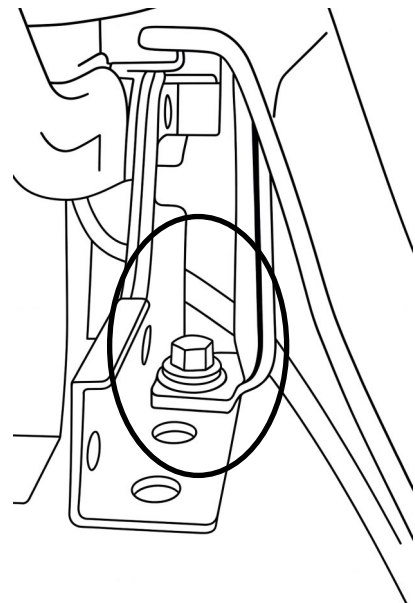

Wedgetail Accessory Aerial Mount Fitting Instructions

To Suit The Ford F-150 2021—Current




WTA-FF150AM

5

- From the top view, underneath the plastic gutter trim, loosen the bolt which secures the factory aerial mount.


Factory Mount Bolt

Bottom mount

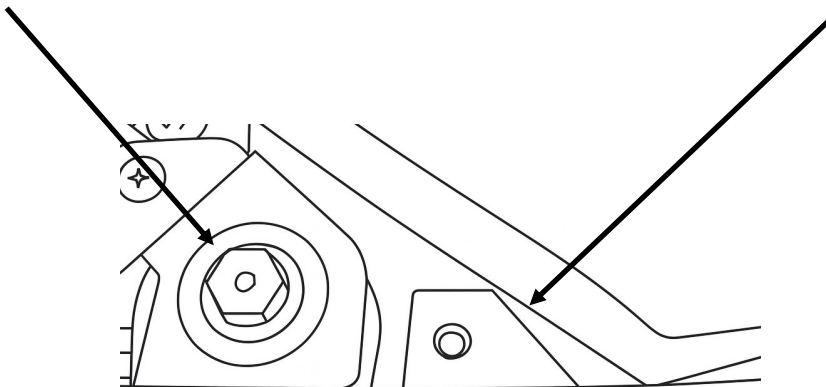


6

- Remove the remaining 3 bolts connecting the factory mount to the aerial

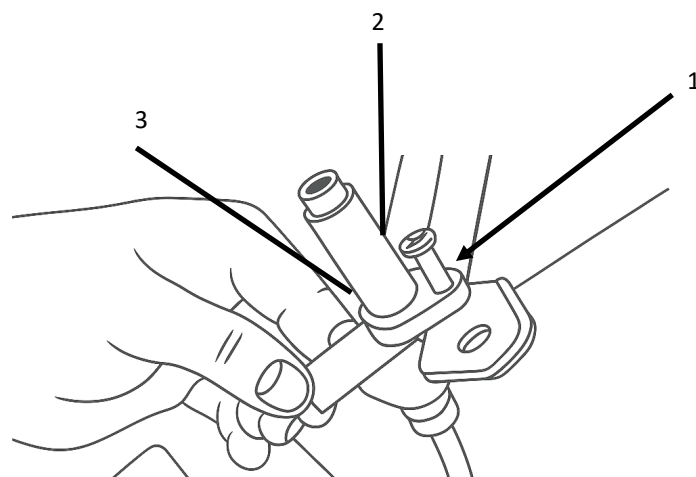


7

- With the factory aerial mount detached, Use a grinder to trim the factory aerial mount by 10mm from the straight edge

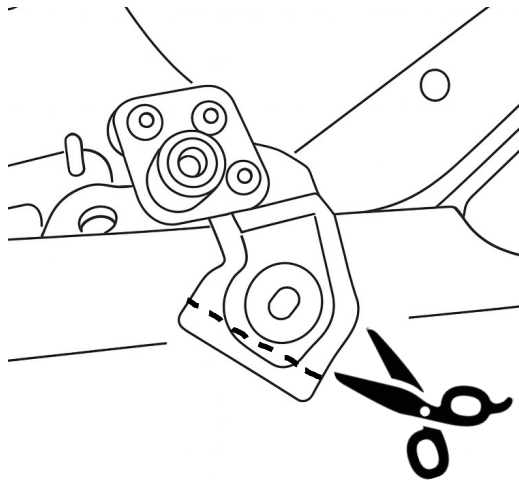

8

- Use hole 1 to bolt on the top mount to the bottom mount
- Use hole 2 to secure the factory aerial mount on top of the aerial mount
- Ensure the other 3 screws are reconnected to the aerial.

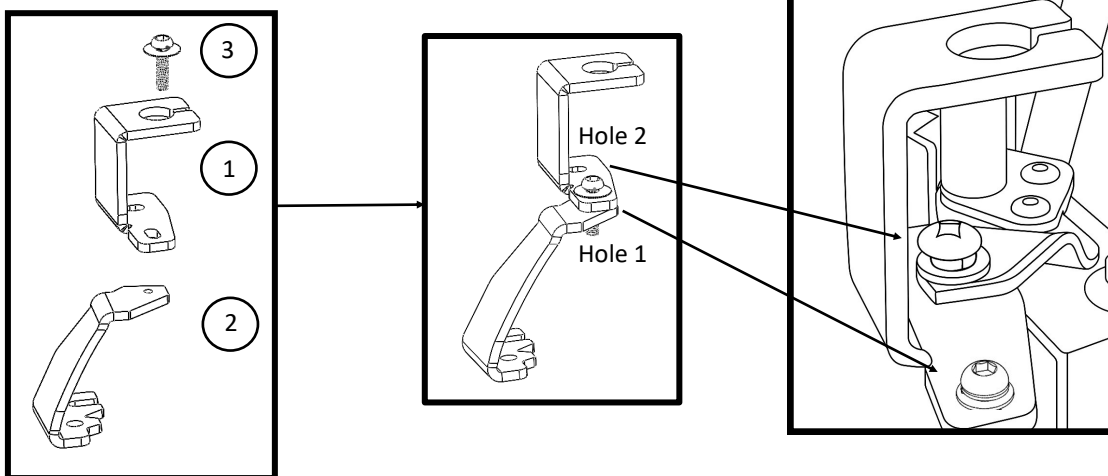

Wedgetail Accessory Aerial Mount Fitting Instructions


To Suit The Ford F-150 2021—Current



WTA-FF150AM

9

- (Optional) use the razor blade to cut an opening in the plastic gutter to make room for the mount

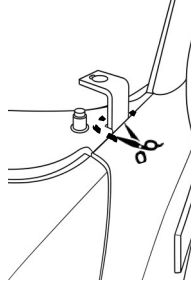

10

- Attach the Aerial and close the bonnet

