

Wedgetail Accessory Aerial/Light Mount Fitting Instruction

To Suit The Toyota Prado 250



WTA-TP250AM

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Tools Required:

- 10mm Socket
- Rivet Gun

Kit Contents

1


Aerial/Light Mount Cover

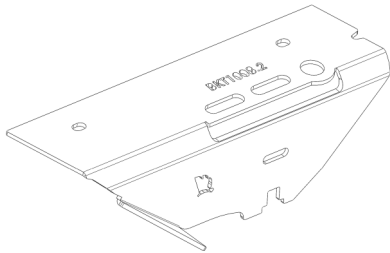

x1

2


Mounting Bracket

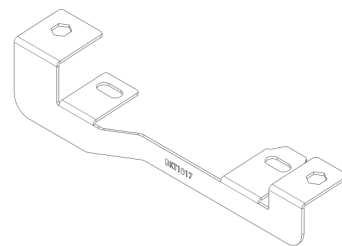

x1

3


Support Lug

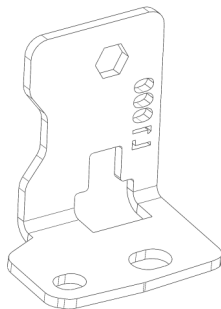

x1

4


Support Bracket

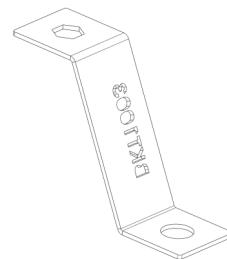

x1

5


5mm Rivet

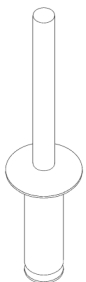

x2

6

M6 Sems

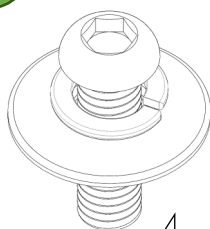

x4

Wedgetail Accessory Aerial/Light Mount Fitting Instruction


To Suit The Toyota Prado 250



WTA-TP250AM


1

- Remove plastic garnish near bonnet with panel levers
- Install the support bracket between guard panel and hinge mount (threaded nutsert secures to guard panel)

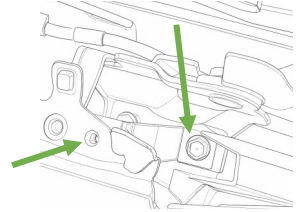


2

- Screw one M6 sems into the nutsert and the existing (Toyota) hex bolt into the remaining hole near hinge mount
- Garnish securement tab may need adjustment to accommodate mounting bracket

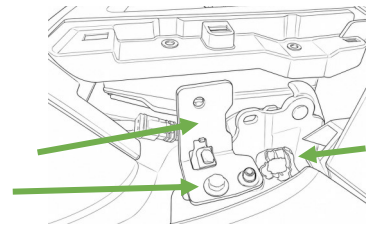


3

- Align the mounting bracket slots with the existing holes
- Mount the bracket with two 5mm rivets supplied

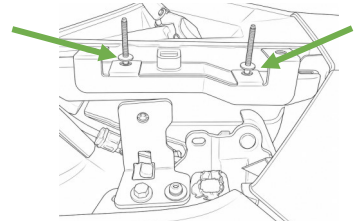

4

- Clip the side plastic garnish back on, using some silicon to help lock the front tab in place, if required

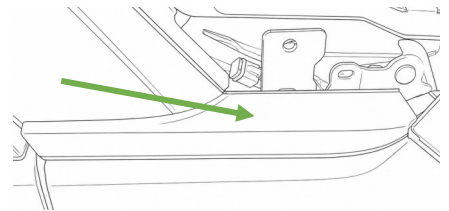

5

- Finally, fix the mount cover in place with the supplied M6 bolts supplied (support bracket may need adjustment to match aerial mount cover holes)
- Large round hole is suitable for aerials. 10mm slots are suitable for additional work light mounting
- Check mount cover is clear of bonnet edges and adjust if necessary

