

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Clean the roof prior to fitting the roof racks.

Tools Required:

- Hex key


Kit Content

1 Rail Bracket

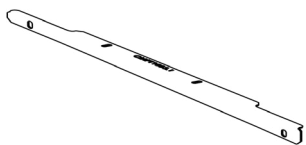


x1

2 Panel

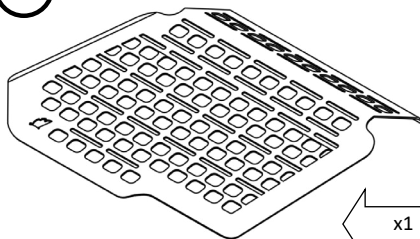

x1

3 Suction cups

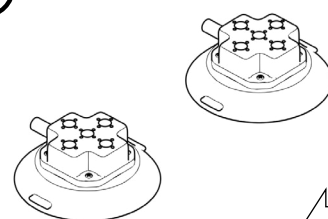

4 M10 Flat Washer



x4

5 8mm Nyloc Nut



x4

6 8x16mm Bolt



x4

7 M8 Flat Washer



x1

x4

8 8x22mm Bolt




x4

Installing the Bracket to the Rail


1

- Align the Bracket Holes to the Wedgetail Rail Mounting Holes




2

- Fasten the Rail Bracket to the Rail using M8 Bolts and Nyloc Nuts provided.

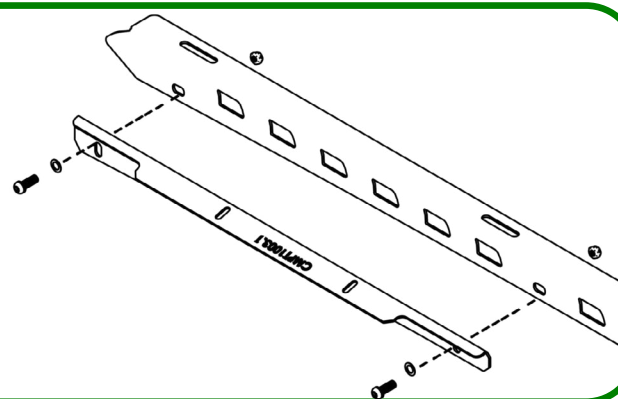

3


- Bolt Panel to the Rail Bracket using M8 Bolts and Nyloc Nuts provided.

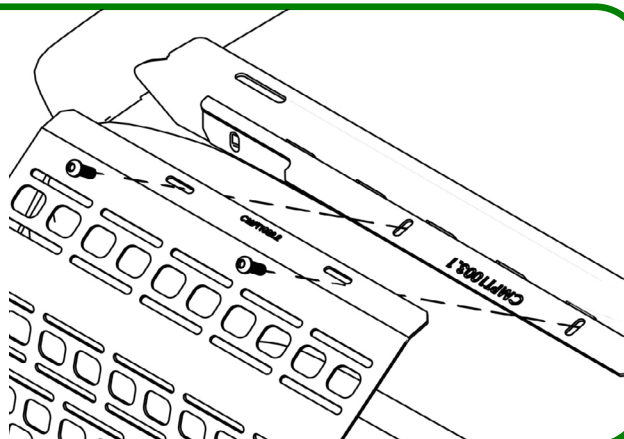

Installing the Panel

3

- Bolt Panel to the Rail Bracket using M8 Bolts and

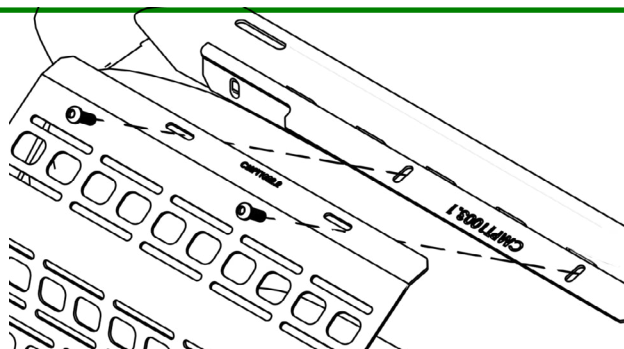


4

- Bolt 2 Suction Cups behind the panel with 6mm Bolts and Washers.

Fitting Note:



Place the Washer between the Suction Cups and Panel to avoid damaging either pieces.

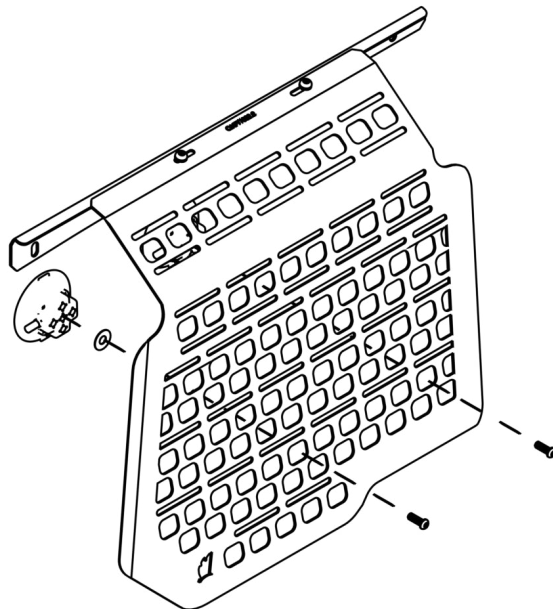

Warning:



Product is designed for overlanding use. Consideration should be given to not overloading. Designed for lightweight ancillary items which must be mounted securely to avoid undue vibration when on corrugations

5

- Pump the Suction Pads to secure the Panel on the window.
- Check the sealing of suction pads at regular intervals & re-pump if required.

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration