

Wedgetail Rails and Platform Fitting Instruction

To suit—Mazda BT-50 Gen 3 Dual Cab 2020-On

Holden Colorado RG Dual Cab 2012-2020

Isuzu D-max RG Dual Cab 2012-2020

Isuzu D-max RT Dual Cab 2020-On



WT-BT50200N-1412 WT-HC13-1412

WT-IDMAX-1412 WT-IDMAX20-1412

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.













Contact us if any parts appear missing, incorrect, or damaged.

Clean the roof prior to fitting the roof racks.

Tools Required:

- Hex key (5 & 6)
- Spanner (13 & 17 mm)
- 5mm Drill Bit
- Silicone/urethane sealer

Kit Content

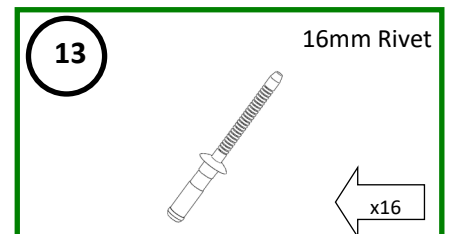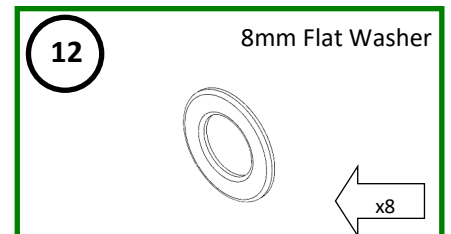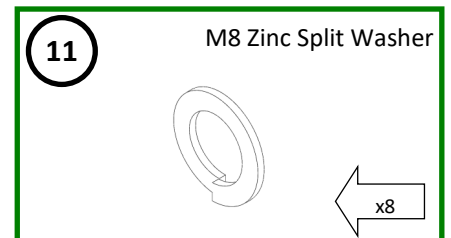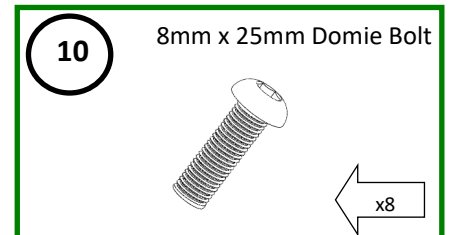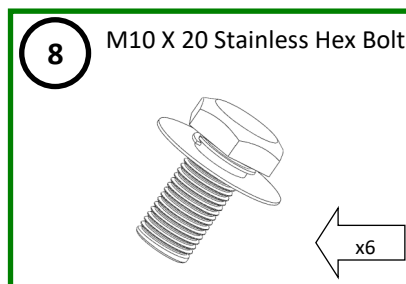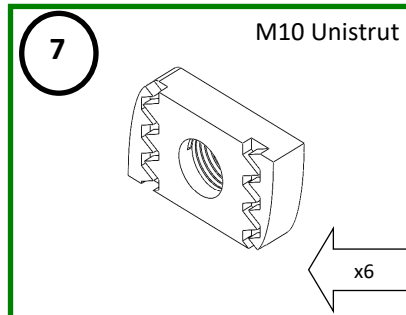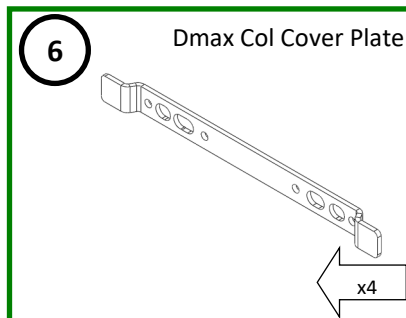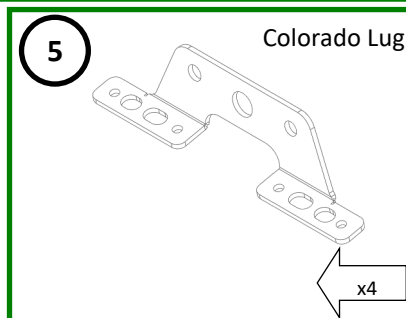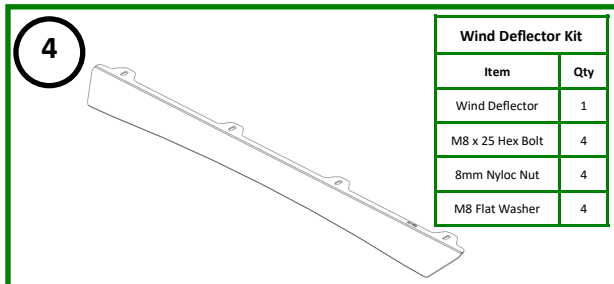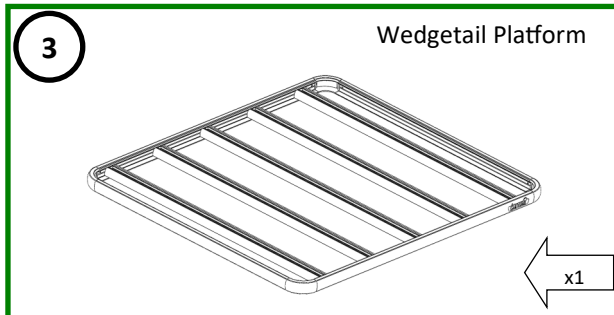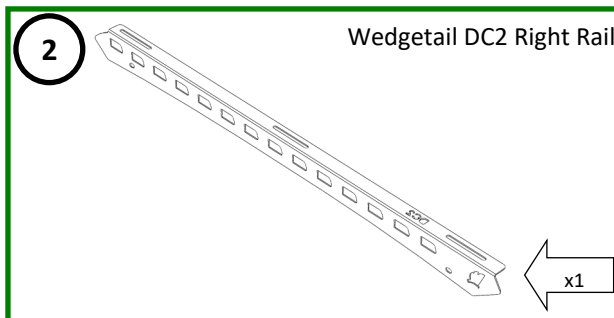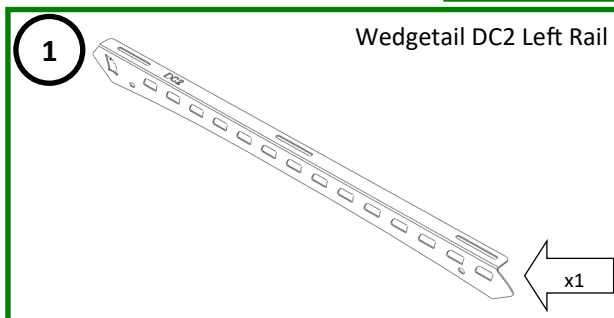

Wedgetail Rails and Platform Fitting Instruction

To suit—Mazda BT-50 Gen 3 Dual Cab 2020-On

Holden Colorado RG Dual Cab 2012-2020

Isuzu D-max RG Dual Cab 2012-2020

Isuzu D-max RT Dual Cab 2020-On



WT-BT50200N-1412 WT-HC13-1412

WT-IDMAX-1412 WT-IDMAX20-1412

Assemble lugs to roof (With Factory points, if no factory points processed to step 5)

1

Remove the rubber moulding covering the roof channel from the rear of the vehicle to windscreen

2


Mark the point on the rubber where roof mounting holes are located

3

Place the mounting lug on the rubber so that the centre it is aligned with the lines marked in the previous step. Mark to the left and right edge of lug on the rubber. Now neatly trim the rubber along these lines. Re install the rubber moulds checking that the lugs have clearance once rubber trim is in place.

4

Apply silicone or urethane sealer (natural cure sealants only) in and around the 8 mounting points in the roof. Now fit the 4 mounting lugs and cover plates using M8 hardware provided. Refer to diagram. Do not tighten fully. **Proceed to Step 9**

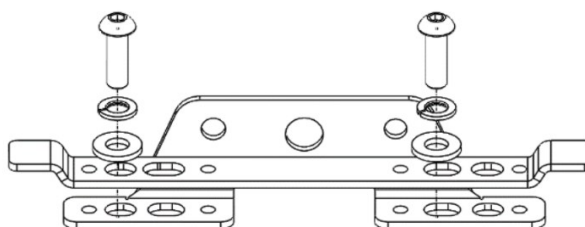

Assemble lugs to roof (Without Factory points)

5

Place mounting Lug in the roof. Drill all 4 mounting holes in each lug using a 5mm drill with drill stop, drilling one at a time then placing a rivet through hole to keep lined up (DO NOT RIVET IN PLACE YET).

6

Paint all holes using either an enamel or acrylic paint (to apply you can use a cotton bud if paint brush is not available).

Wedgetail Rails and Platform Fitting Instruction

To suit—Mazda BT-50 Gen 3 Dual Cab 2020-On

Holden Colorado RG Dual Cab 2012-2020

Isuzu D-max RG Dual Cab 2012-2020

Isuzu D-max RT Dual Cab 2020-On



WT-BT50200N-1412

WT-HC13-1412

WT-IDMAX-1412


WT-IDMAX20-1412

7

Apply silicone or urethane sealer (natural cure sealants only) to the 5mm drilled rivet holes.

8

Attach lugs to the roof of vehicle using 5mm rivets and as shown.

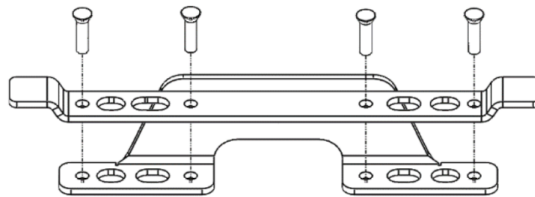


Ensure exposed center of rivet has a covering of sealant to prevent leakage through rivet stem

Assemble rails to lugs

9


Attach Rails to lugs using 10mm hardware with the wedgetail logo facing to the front of the vehicle. Refer to the picture.

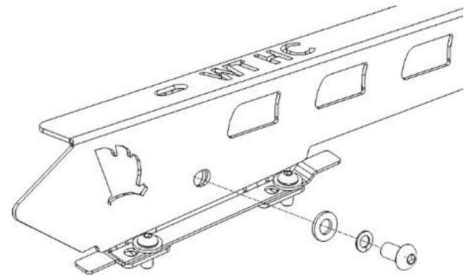

10

- Attach the channel nuts to the top of rail.
- Fit 10mm Bolt / Split washer / Flat washer / Channel Nuts to the top of rail.

* Channel nuts to the top as shown in the following diagram

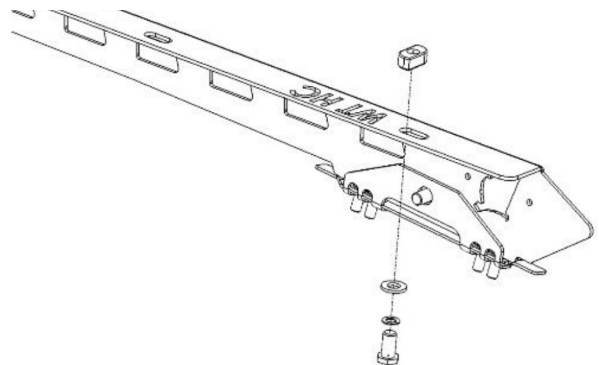

Wedgetail Rails and Platform Fitting Instruction

To suit—Mazda BT-50 Gen 3 Dual Cab 2020-On

Holden Colorado RG Dual Cab 2012-2020

Isuzu D-max RG Dual Cab 2012-2020

Isuzu D-max RT Dual Cab 2020-On



WT-BT50200N-1412 WT-HC13-1412

WT-IDMAX-1412 WT-IDMAX20-1412

Assemble the Wedgetail Platform to the rails

11

- Place the Wedgetail Platform on the rails (Wind deflector mounting towards the front of vehicle), then spin the channel nuts 90 degree in the channel on the underside of the rack till they lock into the channels. Do not tighten fully.

12

- Centralize the rack side to side (using a tape measure) on the wedgetail rails.

13

- Fully tighten remaining bolts in the following order:

1. Rails to the lugs
2. Rails to platform
3. Attach wind Deflector.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.



Fitting Note:

Where a wind deflector is used, we recommend a minimum of 15mm clearance from the vehicle roof.

Where necessary manually adjust the wind deflector or wind deflector mountings as required.

Thank you for your purchase.

Please complete your warranty application following correct installation.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration