

## Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.










Contact us if any question about the size of platform to ensure the correct fitment

Scan QR code for a fitting demonstration



### Tools Required:

- Hex key (5mm)

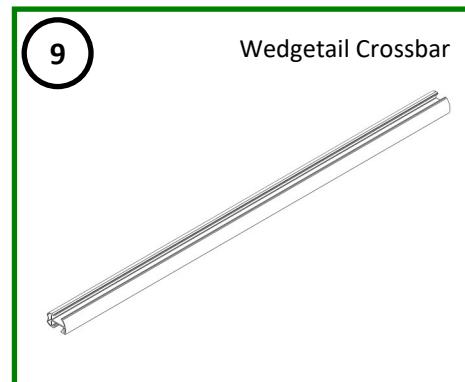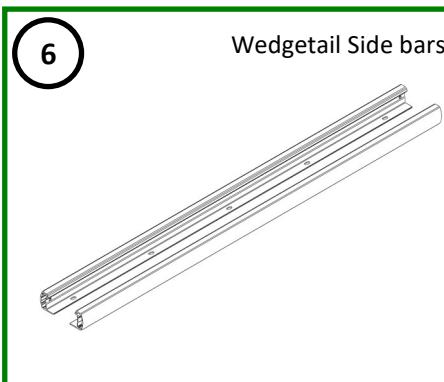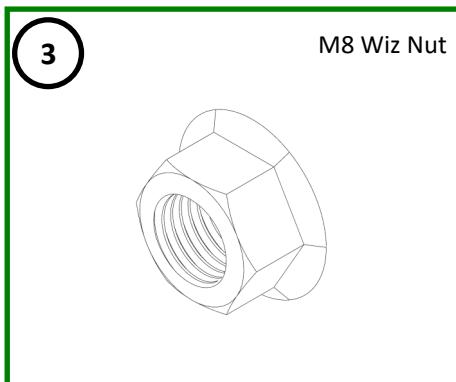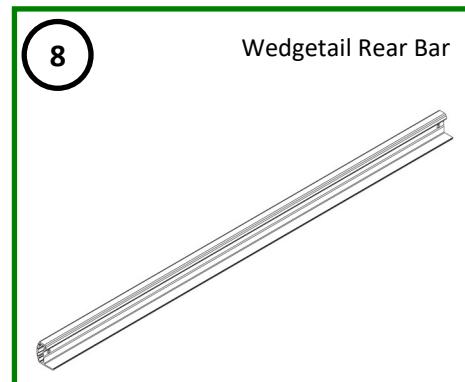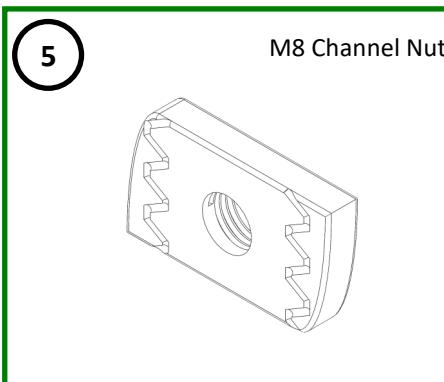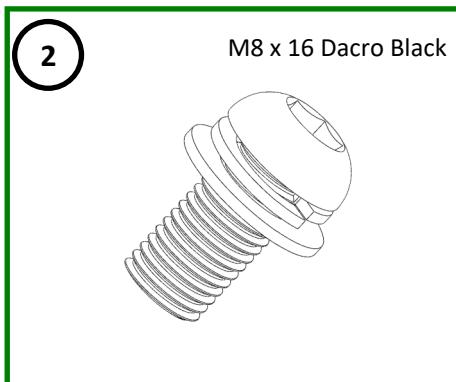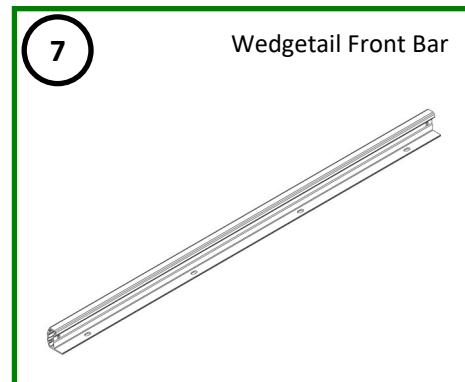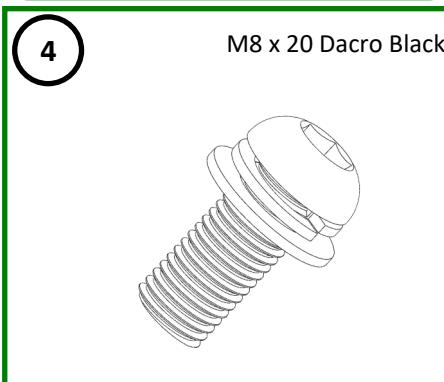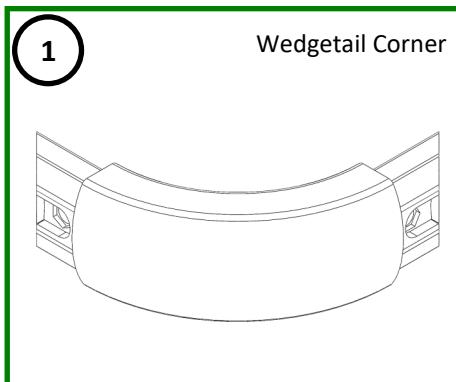

### Note:

The amount of components and length of the platform are different based on the platform size ordered.

Please refer to table on Page 2 and confirm before assembly. If any question, please contact our team member.

# Wedgetail Platform Fitting Instruction



WTP

KIT CONTENTS									
Item	1	2	3	4	5	6	7	8	9
WT Platform Size	WT Corners	M8 x 16 Dacro Black	M8 Wiz Nut	M8 x 20 Dacro Black	M8 Channel Nut	WT Sides	WT Front Bar	WT End Bar	WT Crossbar
0814				6	6				3
1112, 1113,1119				8	8				4
1411,1412,1413, 1414,1415,1416, 1513				10	10				5
1613,1614,1812, 1813				12	12				6
2012,2013,20135 ,2014,2019				14	14				7
2212,2213,2214	4	8	8	16	16	2	1	1	8
2514,2516				18	18				9
2814				20	20				10
3014,3015,3016, 3316				22	22				11
3616				26	26				13
4015				28	28				14
4215				30	30				15
4614,4615				32	32				16
5014				38	38				19

# Wedgetail Platform Fitting Instruction



**1**

- Assemble your Wedgetail roof rack on a soft surface or blanket to avoid damage to powder coat finish.


**2**

- Arrange the front, rear, side bars and corners as per figure 1 to begin assembling the perimeter section.

**3**

- Place the flange nut in the recess as shown in the diagram (flange outwards).


Item used in this step	
Item 1	WT Corner
Item 3	M8 Wiz Nut

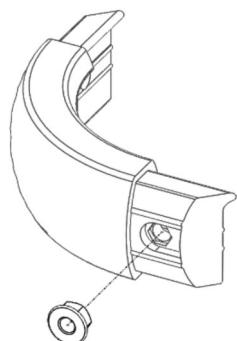

**4**

- Hold the flange nut within the recess and insert it into the perimeter extrusion. Use a soft mallet if required. Repeat the process for all 4 corners.


Item used in this step	
Item 1	WT Corner
Item 3	M8 Wiz Nut
Item 6	WT Sides
Item 7	WT Front
Item 8	WT End

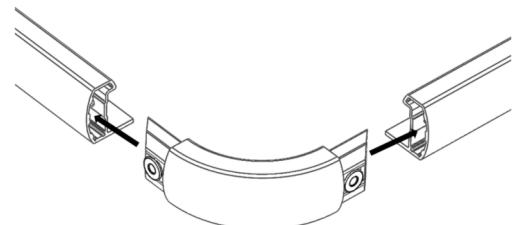

**5**

- Fasten all the corners to the bars using M8X16 bolt and washer. Note: Take care not to cross thread when fastening.

Item used in this step	
Item 2	M8 X 16 Dacro Black

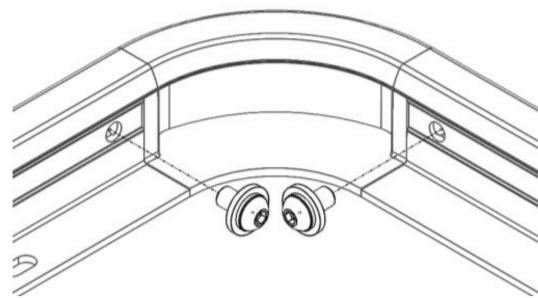


6

- Now turn the rack upside down to access slotted holes for crossbar fitment.

7

- Insert the crossbars within the recess of perimeter extrusion. The crossbar should face forward as shown for best noise and wind resistance.

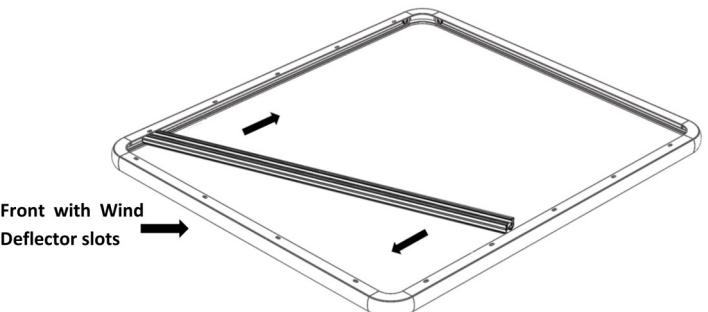

Item used in this step

Item 9	CrossBar
--------	----------

8

- When assembling refer to the image below for right crossbar orientation.

Underside of platform



This side faces front of the vehicle

Underside of platform



9

- Insert the remaining crossbars to the platform.

10

- Fasten the M8 X 20 bolt & washer and the channel nut.

NOTE-Ensure the channel nuts are 90 degrees to the channels.

 Check fastenings are firmly tensioned at regular intervals.  
Do not overtighten, this will preserve the spring washers.

Item used in this step	
Item 4	M8 X 20 Dacro Black
Item 5	M8 Channel Nut

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration